




HP Pavilion 14-bk061st Screen Replacement

This guide will show how to safely remove the screen from an HP Pavilion 14-bk061st laptop

Written By: Mehrab Daemi

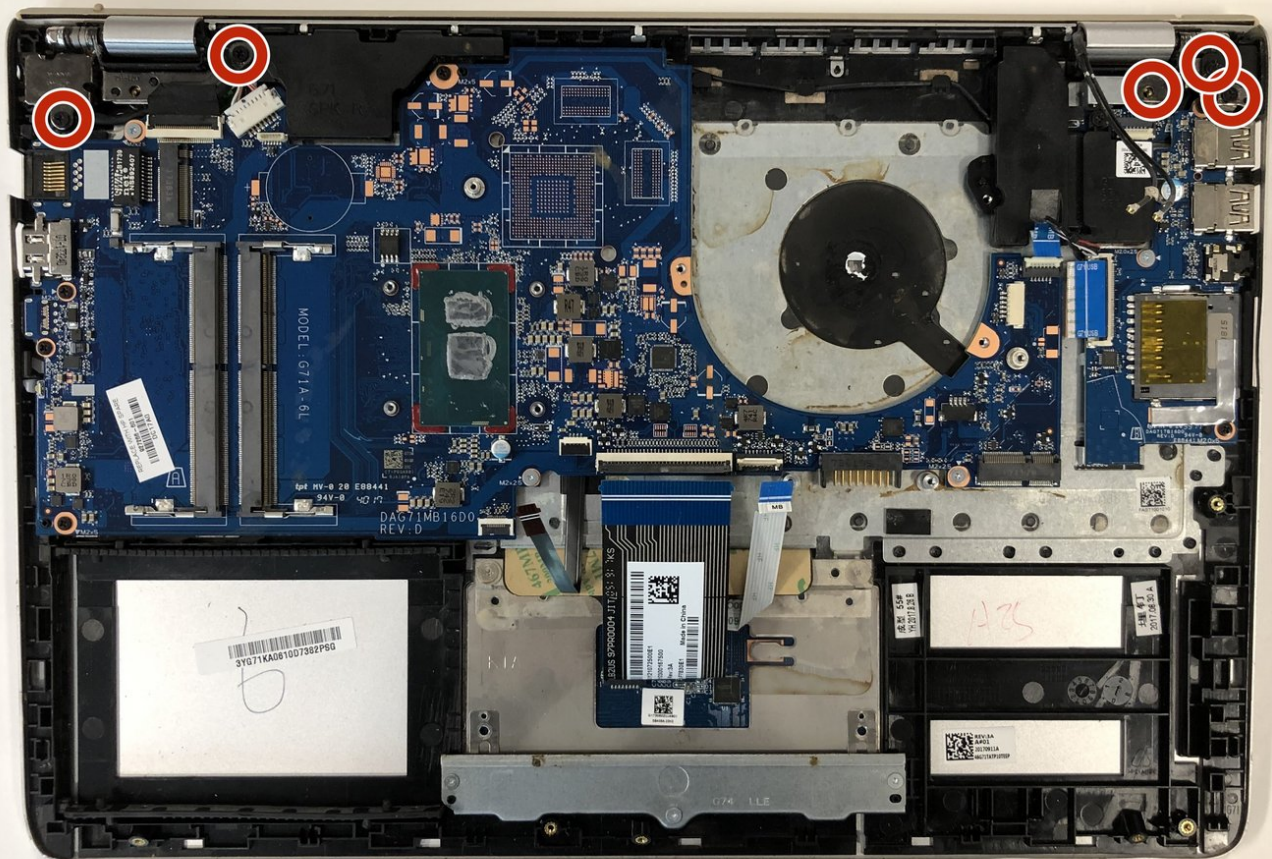

INTRODUCTION

Using this guide will help you in replacing the screen in your HP Pavilion 14-bk061st.



The screen is an important part of all laptops. Some may consider replacing the screen once issues arise during use such as cracked screens after a fall or vertical or horizontal lines sometimes caused by a loose or frayed video cable.



TOOLS:


- [JIS #1](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Back Panel

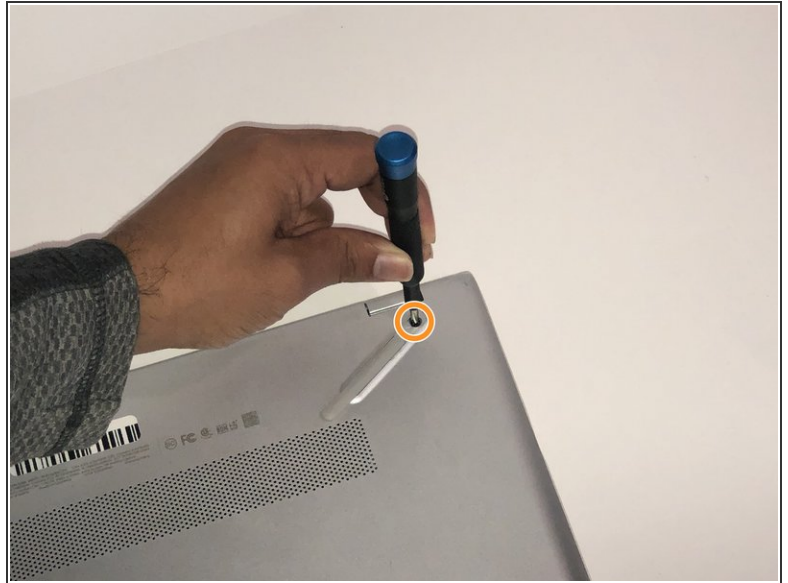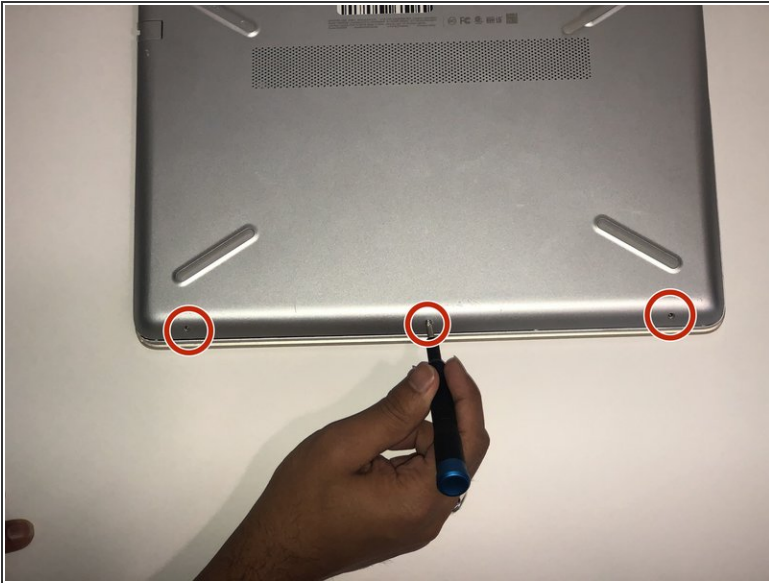

- Remove the three 5.7 JIS #1 screws from the bottom of the laptop.
- Remove the two 6.7mm JIS #1 screws from underneath the feet of the laptop close to the exhaust vent.

Step 2

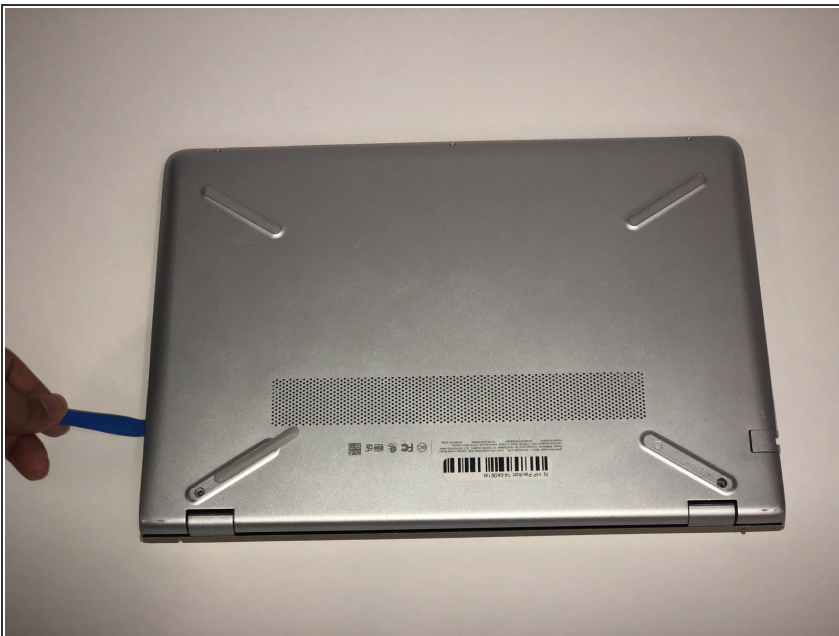


- Unclip the back plate using a plastic opening tool.

Step 3



- Carefully remove the back plate from the laptop.

Step 4 — Screen

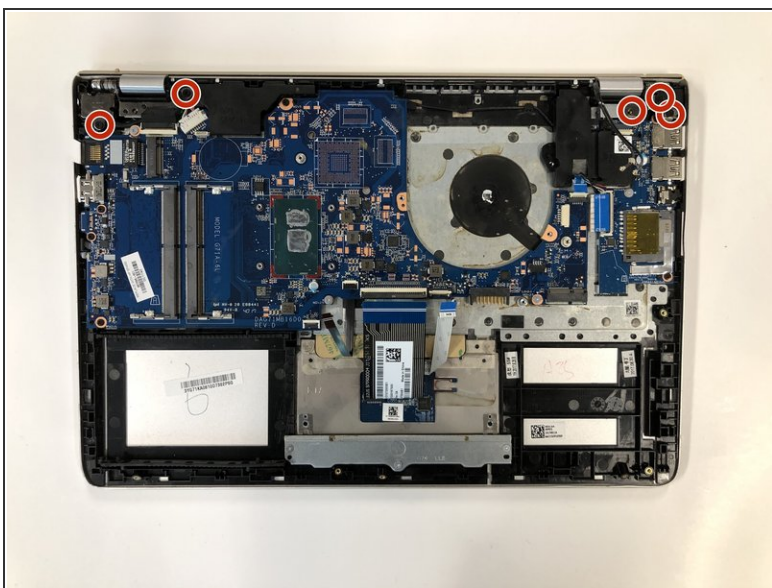


- Remove the five JIS #1 screws that attach the hinges of the screen to the casing of the laptop.

Step 5



- Carefully lift the hinges from the encasing and lift the bottom half of the laptop away from the screen.

Step 6

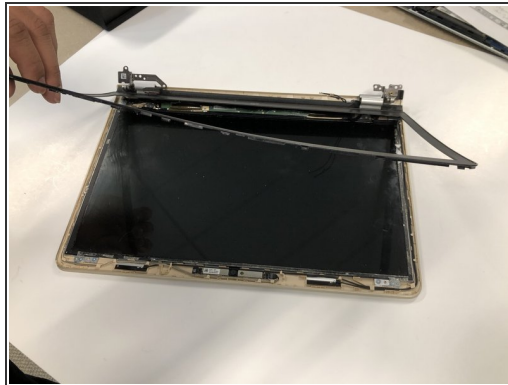



- Use the metal spudger to carefully pry off the plastic encasing around the monitor.
- ⚠ Use the outside of the screen to remove the plastic encasing to avoid damaging the screen itself.

Step 7



- Remove the four JIS #1 screws holding the screen in place.

Step 8

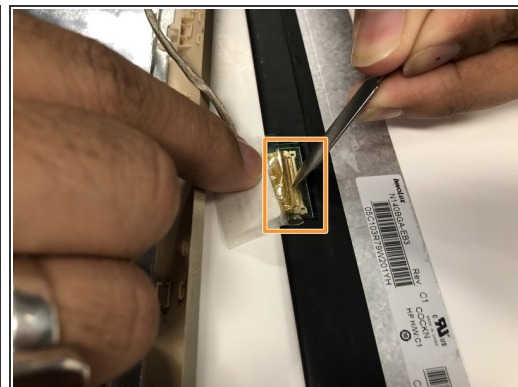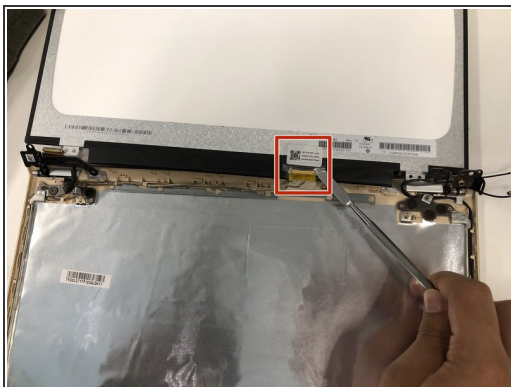

- Carefully remove the sticker covering the wire that connects the screen to the motherboard.
- Disconnect the cable that is connected to the screen.

Step 9



- Remove the screen from the laptop.

To reassemble your device, follow these instructions in reverse order.