




Hamilton G5 Interactive Panel Motherboard Replacement

This guide will tell you how to get to the motherboard of the Interaction Panel of the Hamilton G5 Ventilator.

Written By: Dane Dormedy

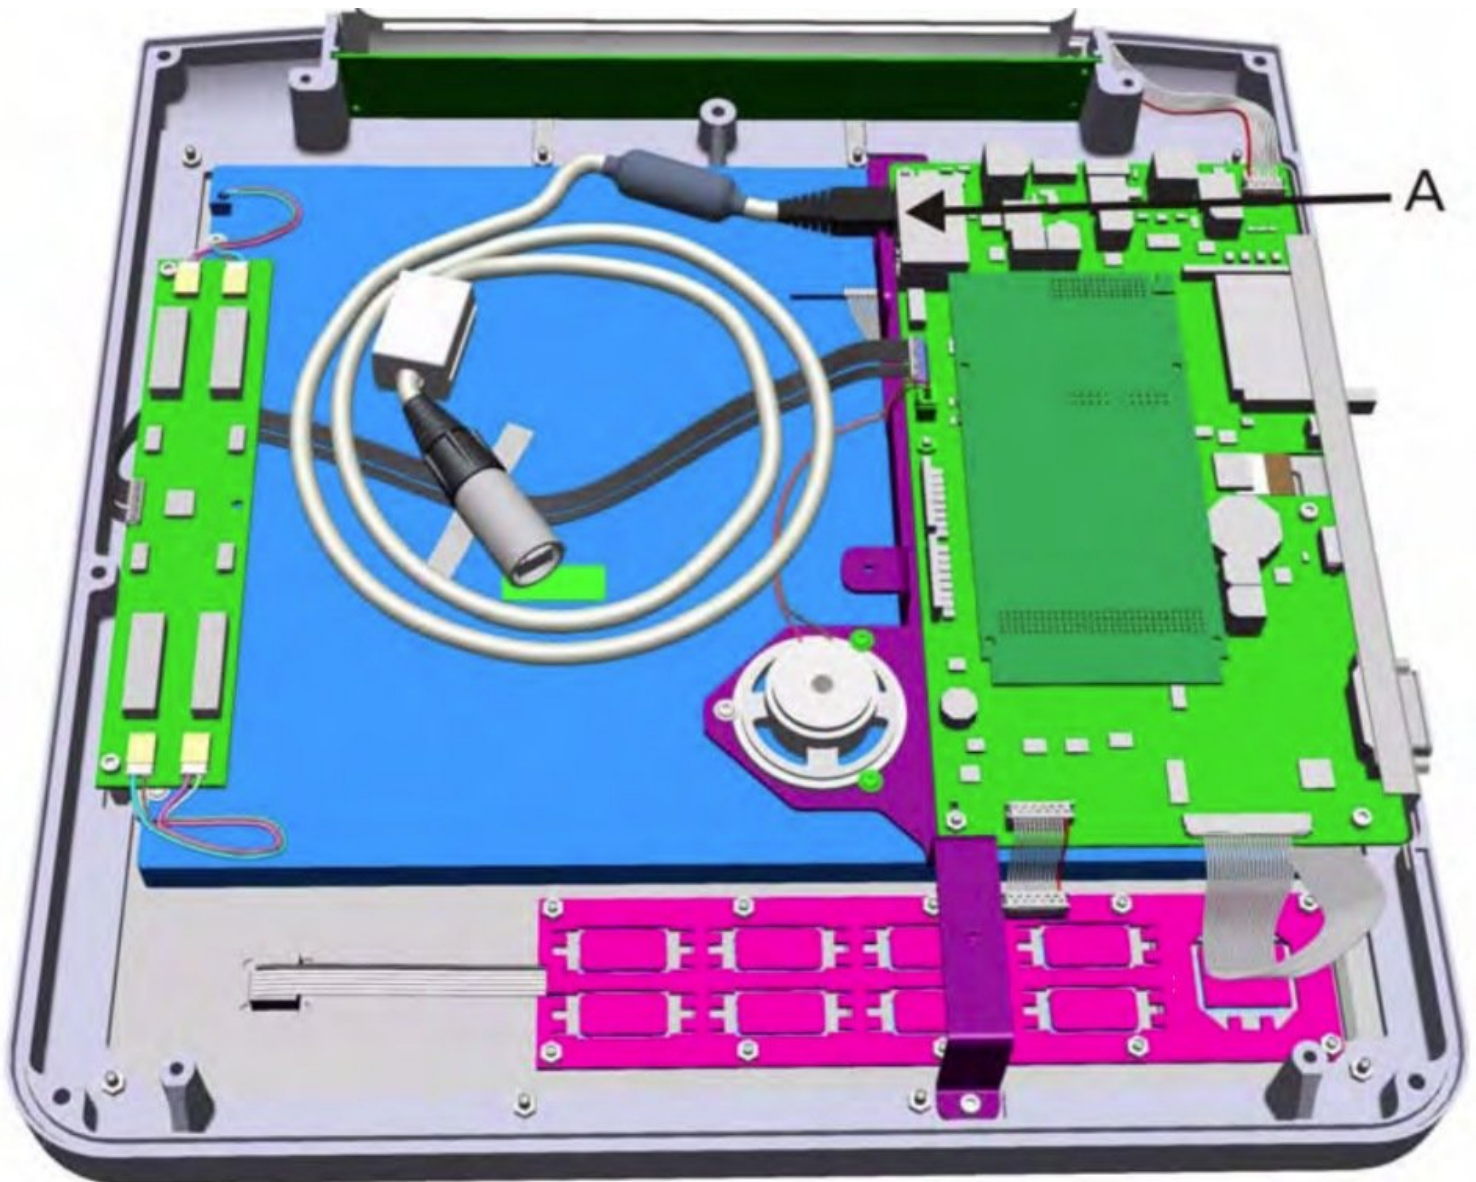

INTRODUCTION


For more information on replacing the motherboard, please refer to **section 10** in the service manual.



TOOLS:


- [Hex Allen Key](#) (1)
-

Step 1 — Hamilton G5 Rear Panel-Metal Shield Disassembly

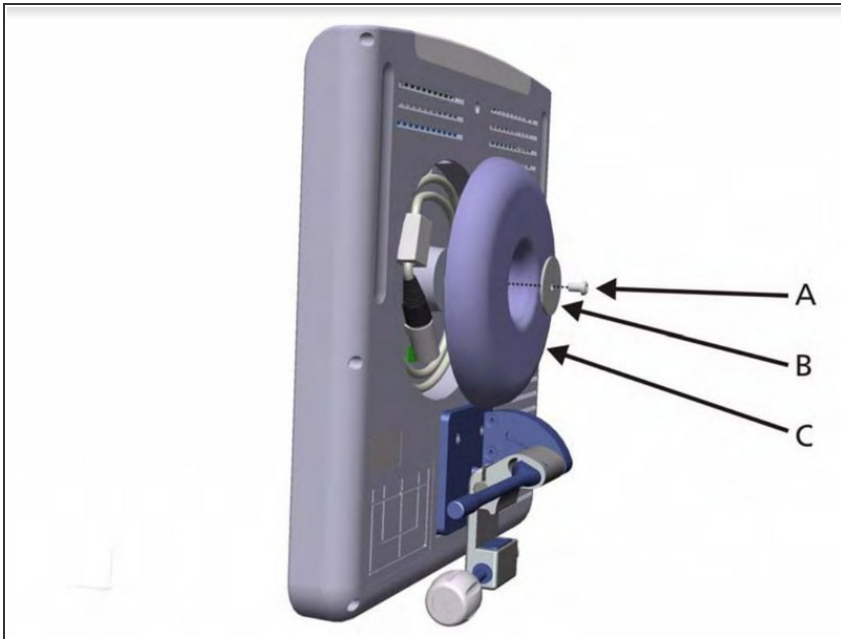


- Remove the screw (A) and washer(B) and remove the cable management cover (C).

Step 2

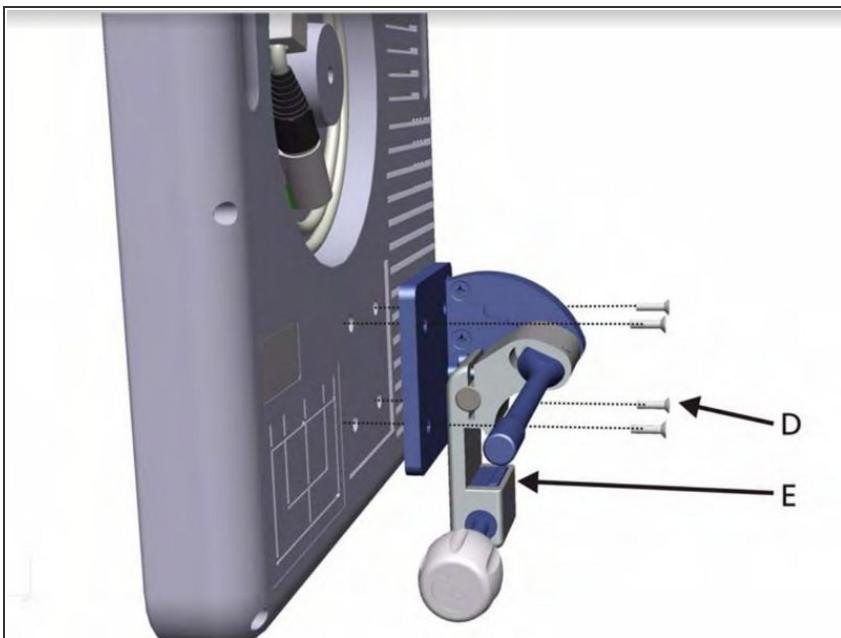


- Remove the 4 screws (D) to remove the panel's swivel mount (E).

Step 3

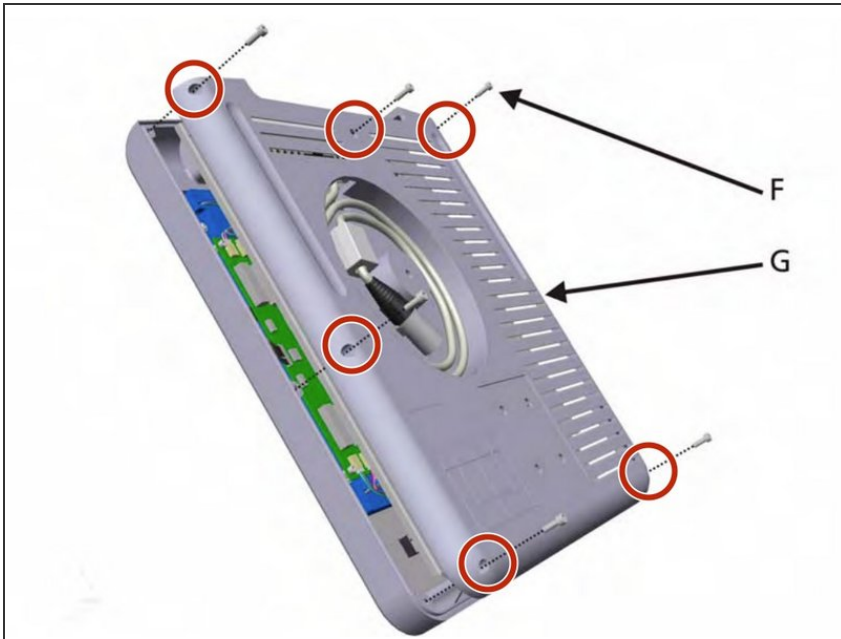


- Remove the 6 screws (F) and remove the back panel (G).

Step 4

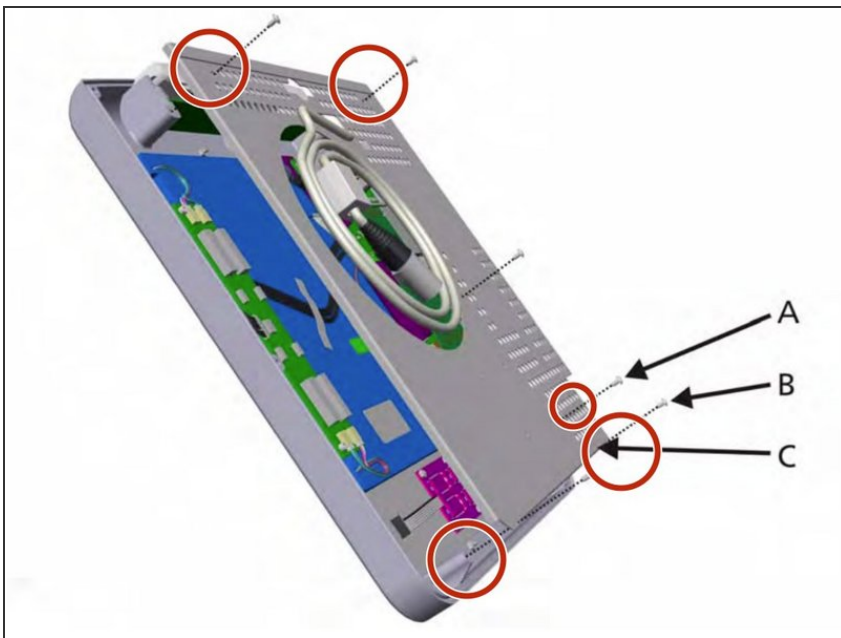


- Remove the 5 screws and remove the metal shield.

Step 5 — Interactive Panel Motherboard

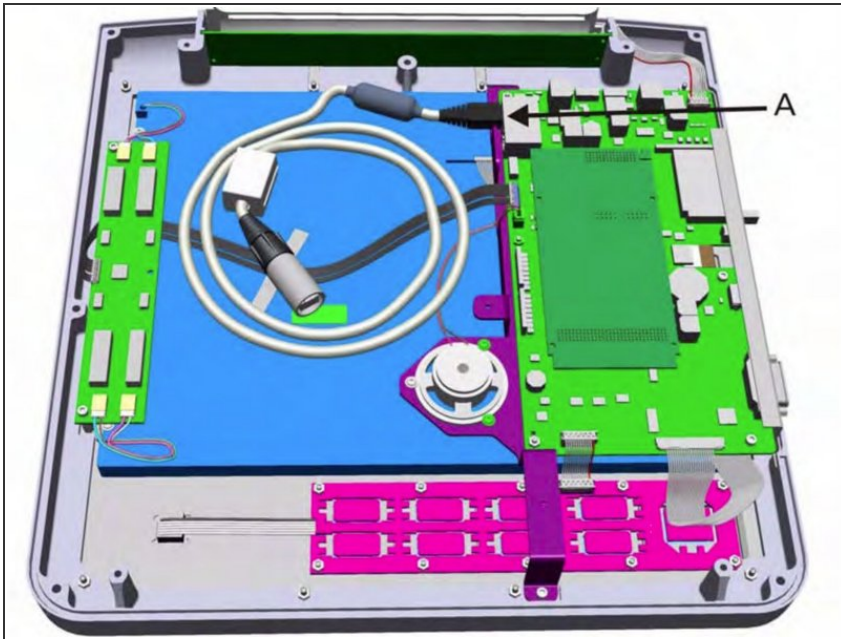


- Insert wisdom here.

Step 6

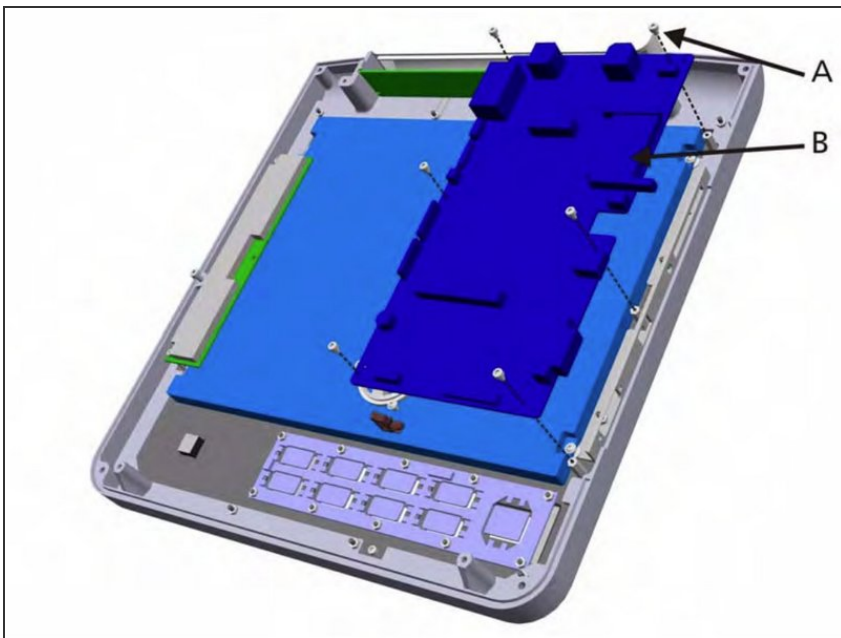


- Disconnect all cables from the motherboard.

Step 7

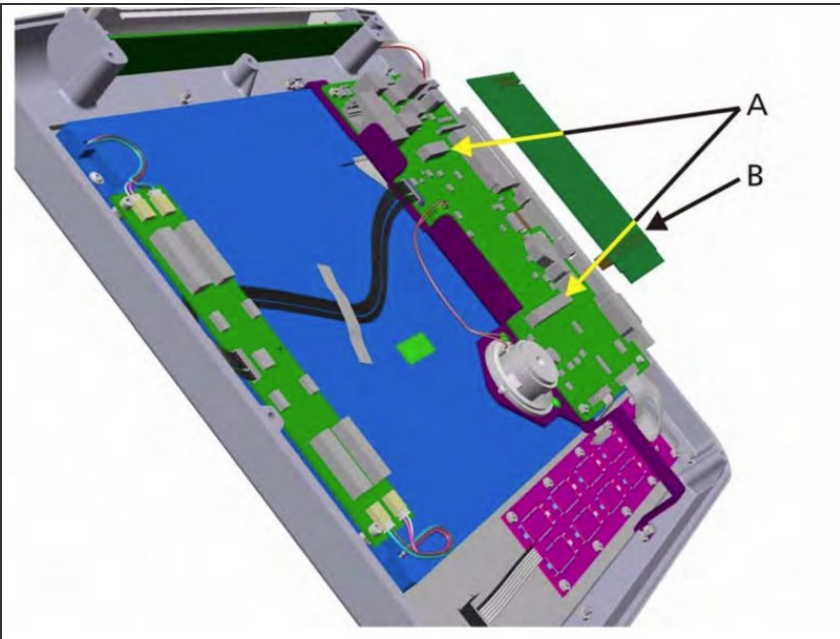

- If necessary, remove the ESM module by disconnecting the module from the connecting sockets (A).

Step 8

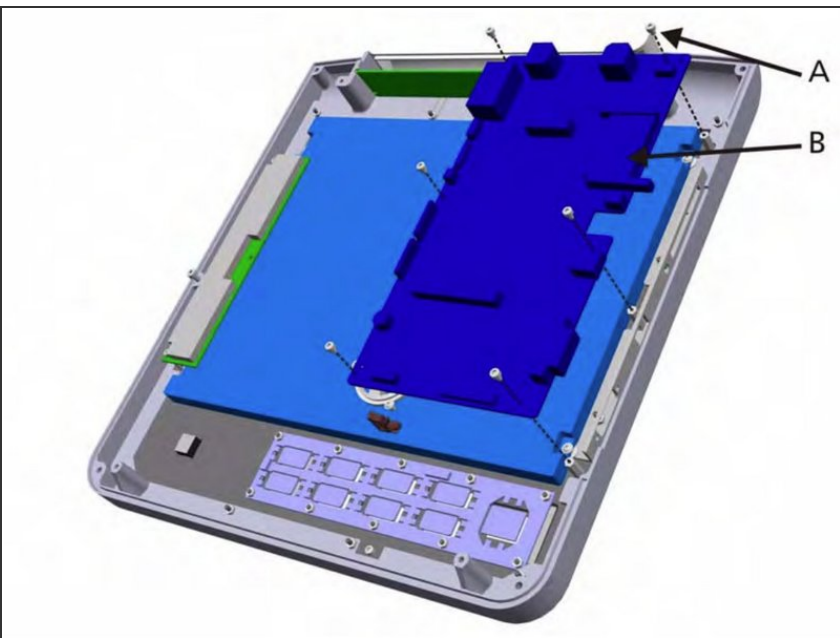

- Remove the 3 screws and 3 nuts, then lift out the motherboard.

To reassemble your device, follow these instructions in reverse order.