


# **iPhone 8 Back Glass Replacement**

iPhone 8 Back Glass Replacement


Written By: Phryne

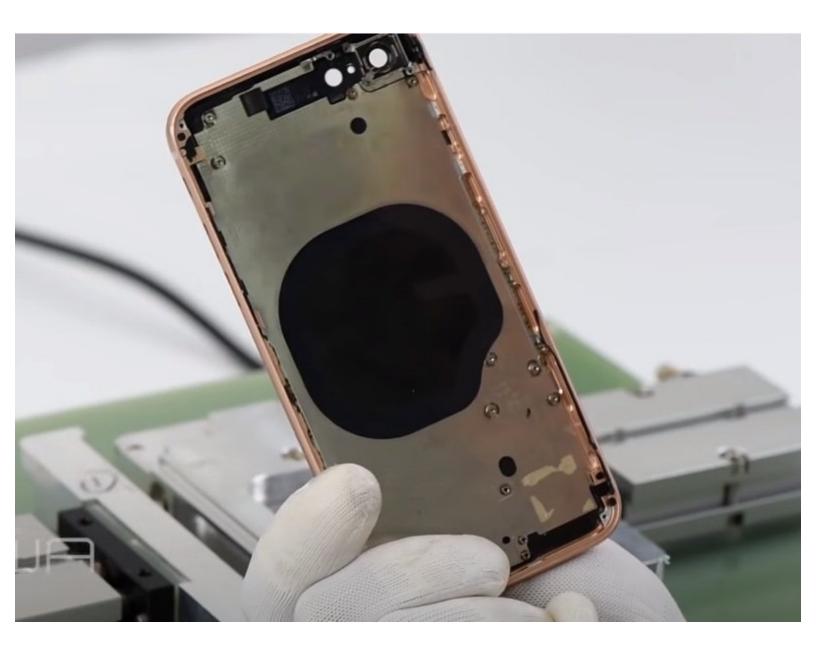

## INTRODUCTION

This guide demonstrates a professional-level repair requiring advanced tools. With this special back glass separator, a broken iPhone 8/8P/X back glass can be removed in just 3 minutes. Residual glue can also be removed easily, which is convenient for subsequent attaching of a new back glass.

#### Step 1 — iPhone 8 Back Glass Replacement

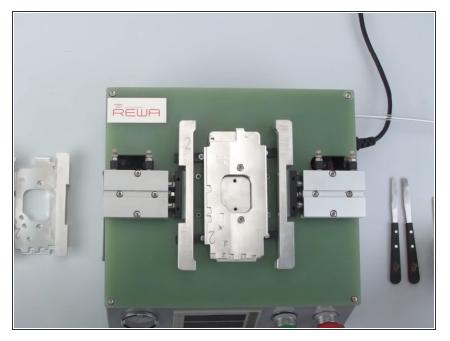

- Wire up the Back Glass Separator. Connect the Back Glass Separator with Air Compressor via an air pipe. Switch on the Air Compressor. Open the air compressor valve.
- Switch on the Back Glass Separator.
  Rotate the pressure regulating valve and set the value as 0.4Mpa.

#### Step 2



- Place iPhone 8 back glass assembly into the corresponding mold. Press 'Up'. With the temperature rising to 240°C, press 'Start'. The back glass assembly is clamped tightly by the mold.
- After 200 seconds of heating, mandril of the machine starts to work.

### Step 3



- Remove the back glass after 18 seconds. Remove glue residue on the back glass thoroughly.
- iPhone 8 back glass separating has been completed successfully.
- Attach a new back glass to the midframe in the end.