



# iPhone 12 mini SIM Tray Replacement

How to eject the physical SIM card tray to replace the network SIM card in your iPhone 12 mini.

Written By: Dominik Schnabelrauch



## INTRODUCTION

Use this guide to remove or replace the SIM tray and SIM card in your iPhone 12 mini. This guide is for the physical SIM card only; the embedded SIM (eSIM) is silicon-based and cannot be removed.



### TOOLS:


- [SIM Card Eject Tool](#) (1)



### PARTS:

- [iPhone 12 mini SIM Card Tray](#) (1)

## Step 1 — Eject the SIM card tray

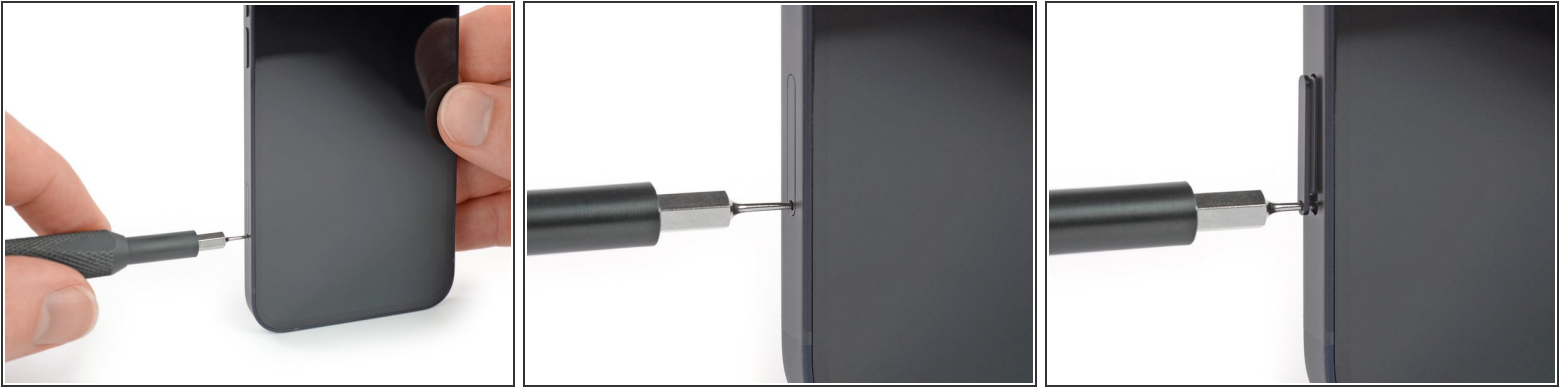

- Insert a SIM card ejector tool or a paperclip into the small hole in the SIM card tray, located near the bottom left corner of the iPhone.
- Press firmly to eject the tray.

## Step 2 — Remove the SIM card tray



- Remove the SIM card tray from the iPhone.
  - ❗ If the tray holds a SIM card it will fall out easily.
- ☑ When reinserting the SIM card, make sure it's in the correct orientation inside the tray.
- ☑ A thin rubber gasket around the SIM tray provides water and dust protection. If this gasket is damaged or missing, replace the gasket or the entire SIM tray to protect your iPhone's internal components.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-04-06 01:00:26 AM (MST).

