




Lenovo 100e Chromebook 2nd Gen Headphone Jack Replacement

This guide will show the steps needed to take...

Written By: Pup Washington

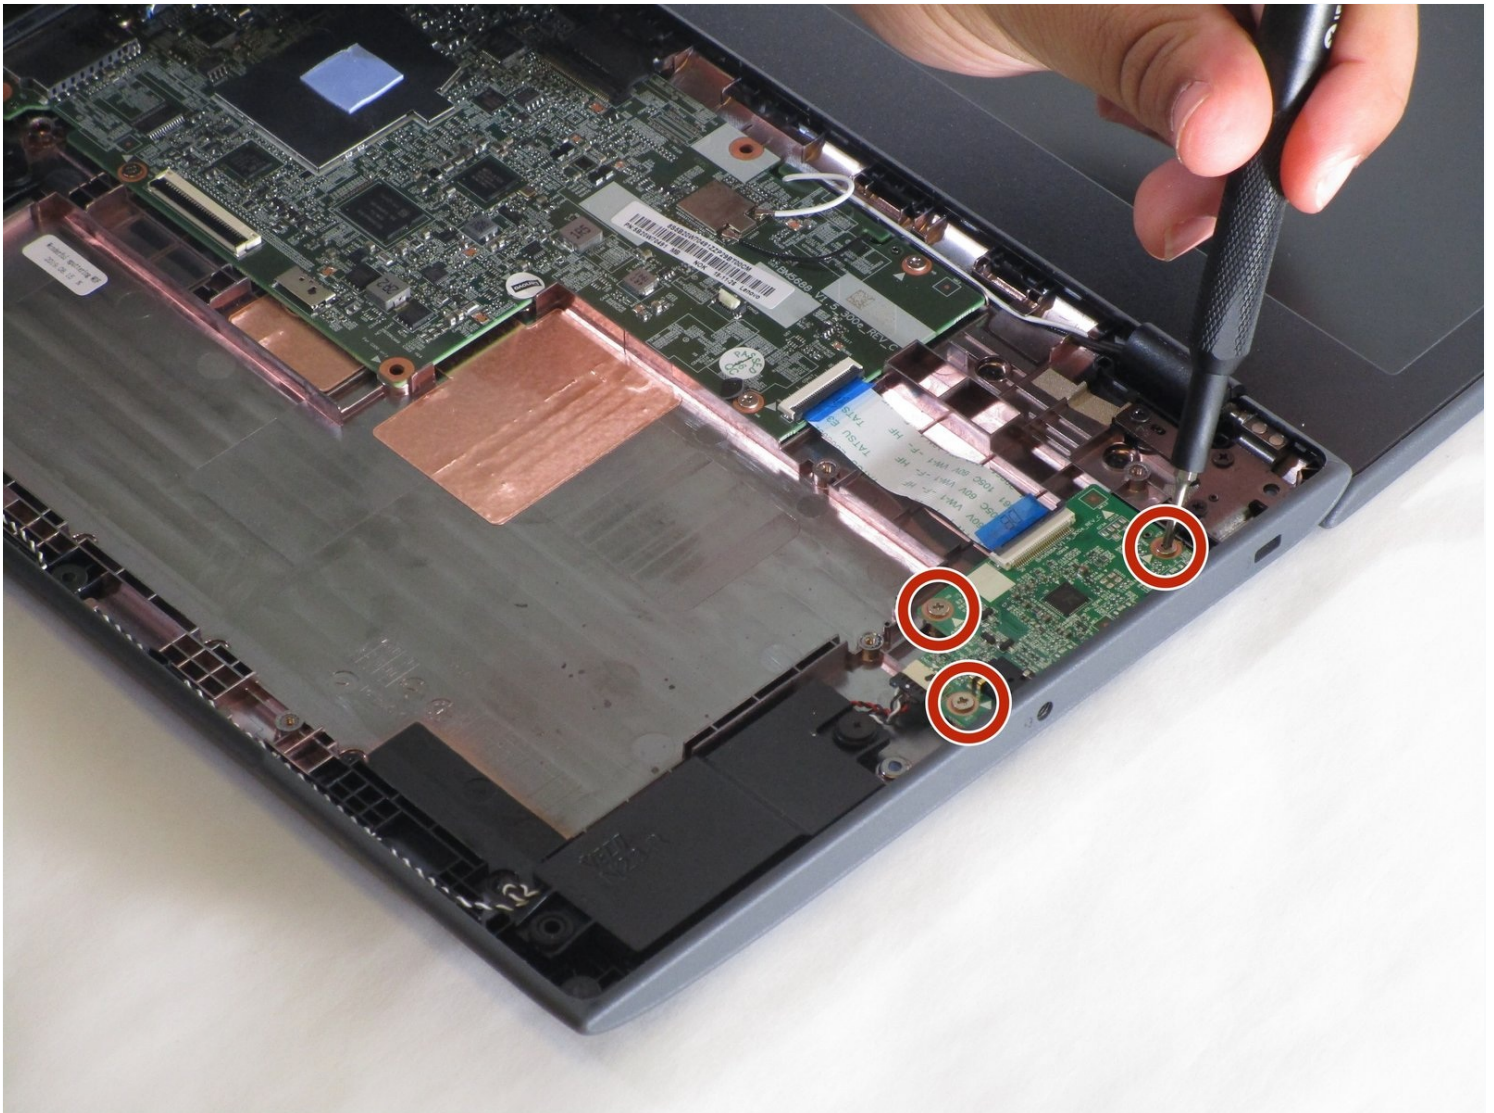

INTRODUCTION

This guide will show the steps needed to take out and replace the headphone jack in the Lenovo Chromebook 100e 2nd gen. You will need a Phillips head screwdriver and a plastic pick for this guide.


TOOLS:

[1 x Opening Picks](#) (1)
[Phillips #0 Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)

PARTS:


[5C50U26494 - Lenovo Laptop Audio Board - Genuine](#) (1)

Step 1 — Keyboard

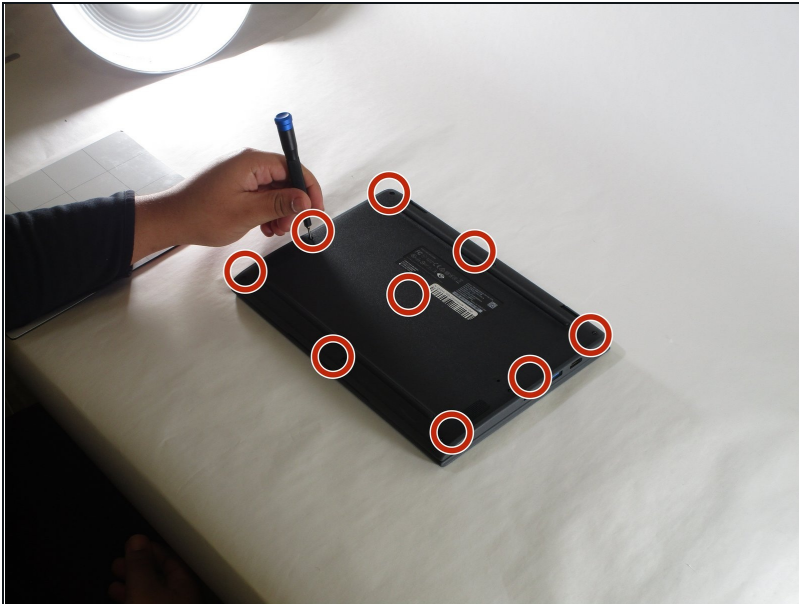

- Remove the nine 6 mm screws from the back of the laptop using a Phillips #0 screwdriver.



Step 2

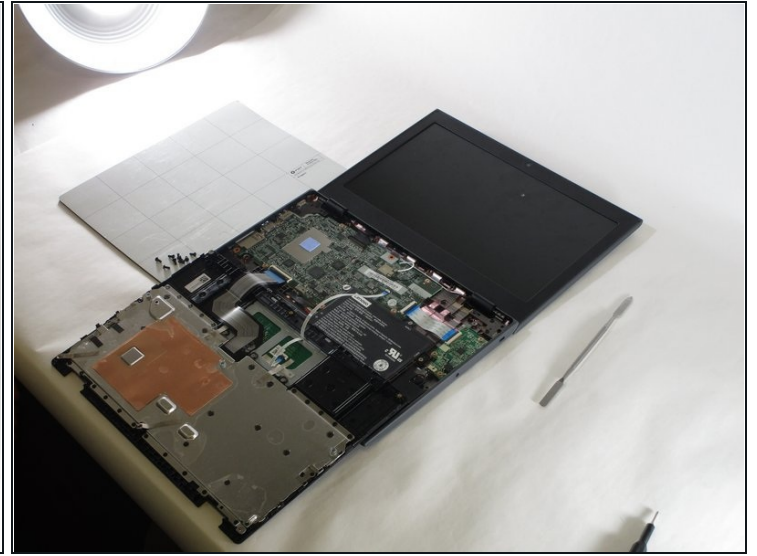

- Open the laptop and lay it flat.
- Go along the edge of the keyboard with an opening tool until it pops loose.


⚠ Potential for device damage: Make sure that the keyboard does not fall away from the laptop, as it is still connected to the internal components

Step 3

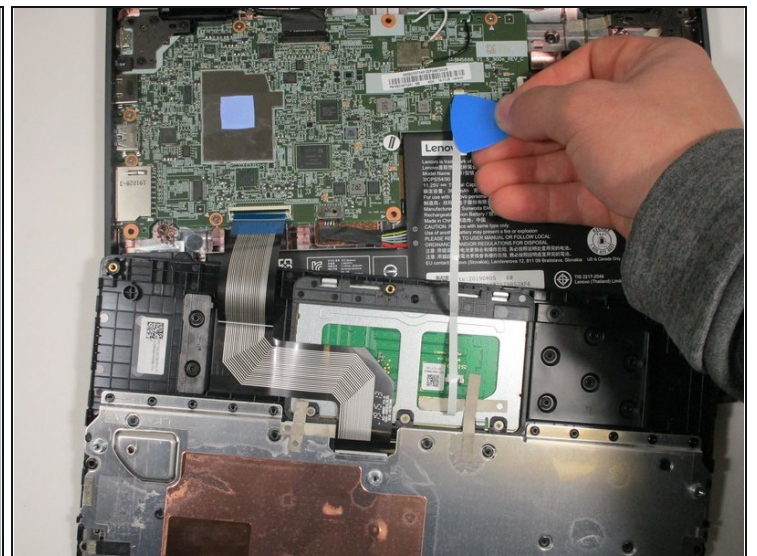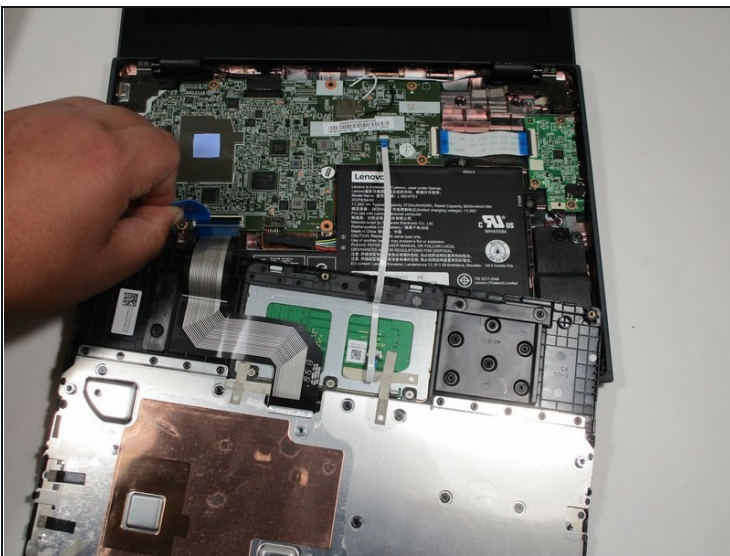


- Lift the keyboard connectors up using an opening pick.
- Remove the connectors from their sockets.

Step 4 — Headphone Jack

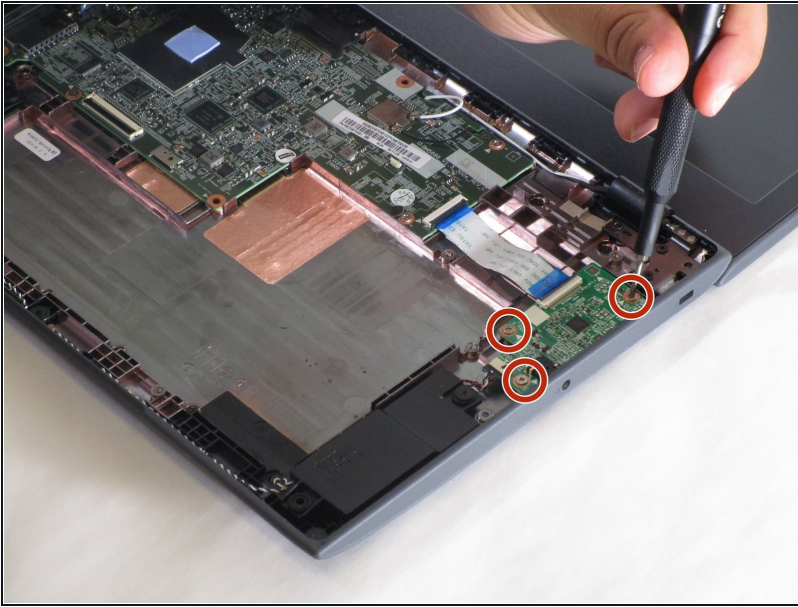


- Remove the three 4 mm Phillips #0 screws holding the headphone jack in place.

Step 5

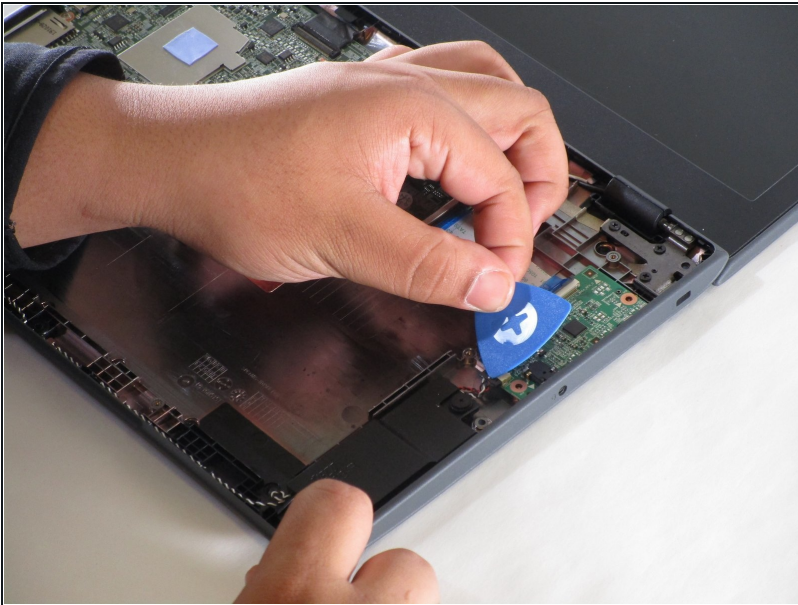

- Using a plastic opening pick, remove the connection between the aux port and the speakers.

Step 6

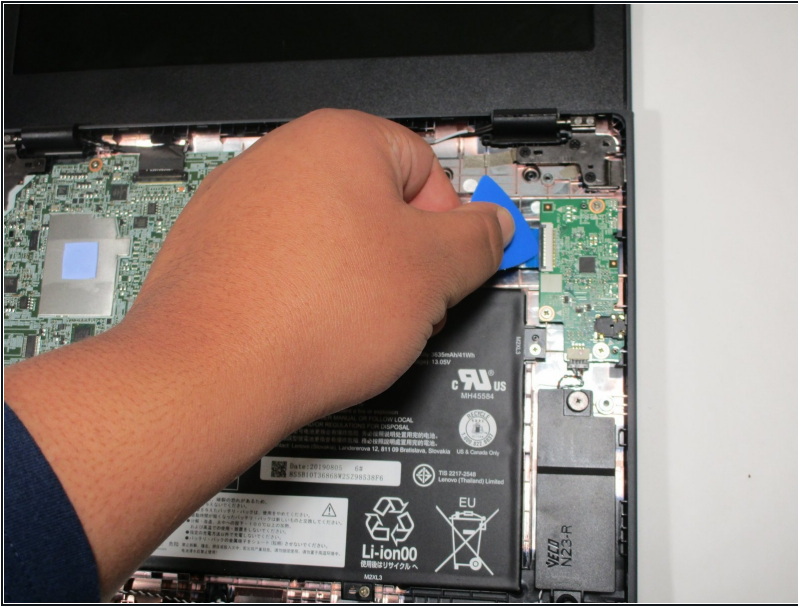

- Using the plastic opening pick, pop the retaining flap holding the ribbon cable in place.
- Remove the headphone jack from the laptop.

To reassemble your device, follow these instructions in reverse order.