



# Lenovo 100e Chromebook 2nd Gen Speakers Replacement

This guide will show the steps needed to take...

Written By: Pup Washington



# INTRODUCTION

This guide will show the steps needed to take out and replace the speakers in the Lenovo Chromebook 100e 2nd gen. The tools required for this guide are a Phillips head screwdriver and a plastic pick.

---

## TOOLS:


[1 x Opening Picks](#) (1)  
[Phillips #0 Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)

## PARTS:

[5SB0T45109 - Lenovo Laptop Speaker - Genuine](#) (1)  
[5SB0Q93988 - Lenovo Laptop Speaker - Genuine](#) (1)


---

## Step 1 — Keyboard

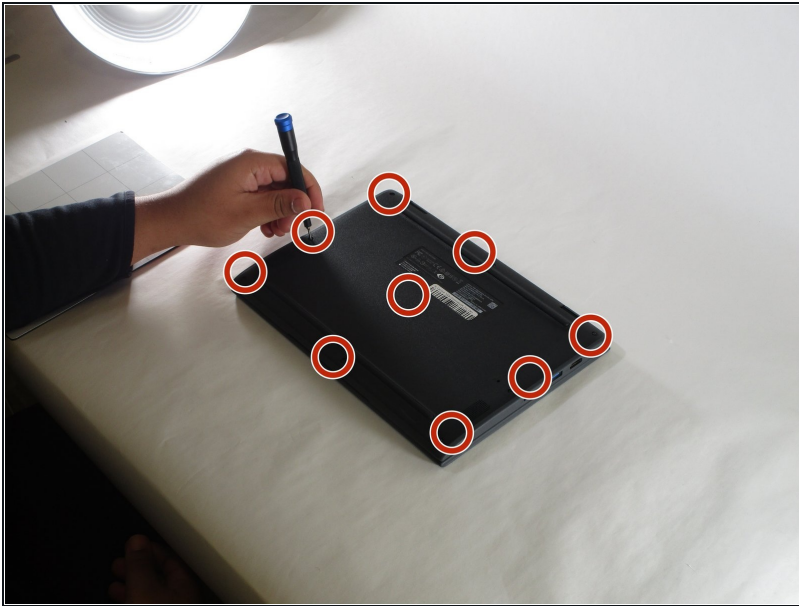

- Remove the nine 6 mm screws from the back of the laptop using a Phillips #0 screwdriver.



## Step 2

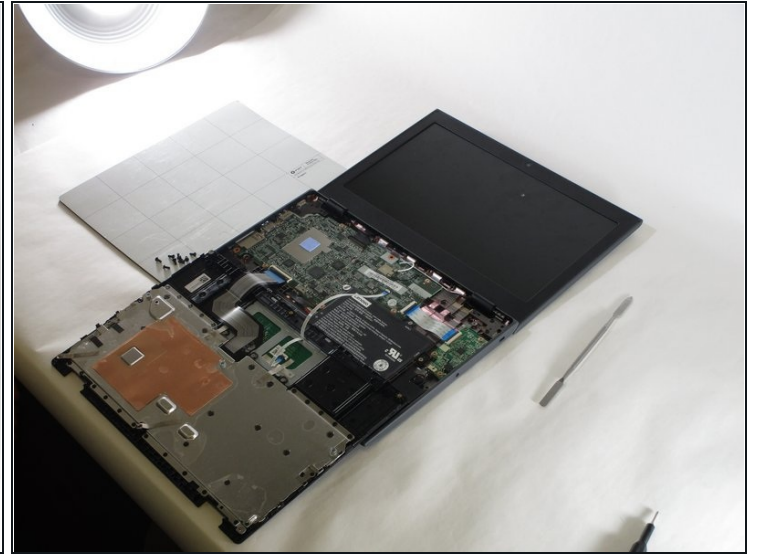

- Open the laptop and lay it flat.
- Go along the edge of the keyboard with an opening tool until it pops loose.


⚠ Potential for device damage: Make sure that the keyboard does not fall away from the laptop, as it is still connected to the internal components

## Step 3

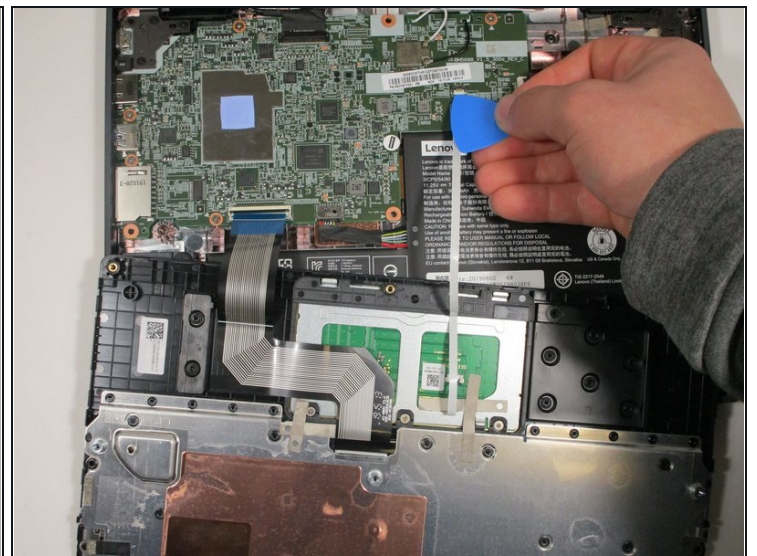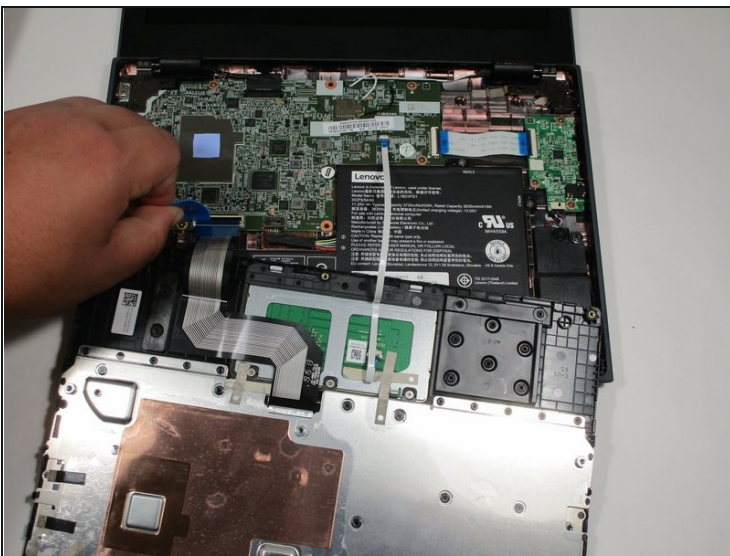


- Lift the keyboard connectors up using an opening pick.
- Remove the connectors from their sockets.

## Step 4 — Speakers

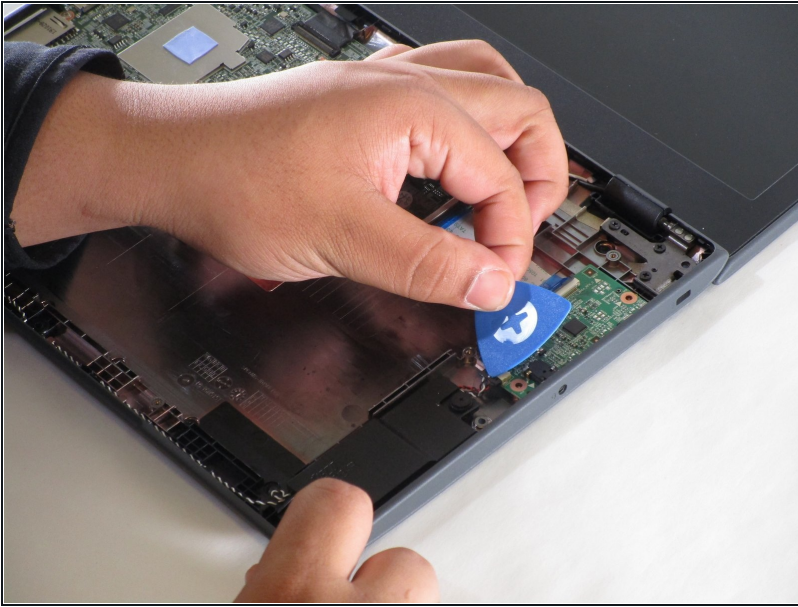

- Using an opening pick, disconnect the speakers from the headphone jack.

## Step 5

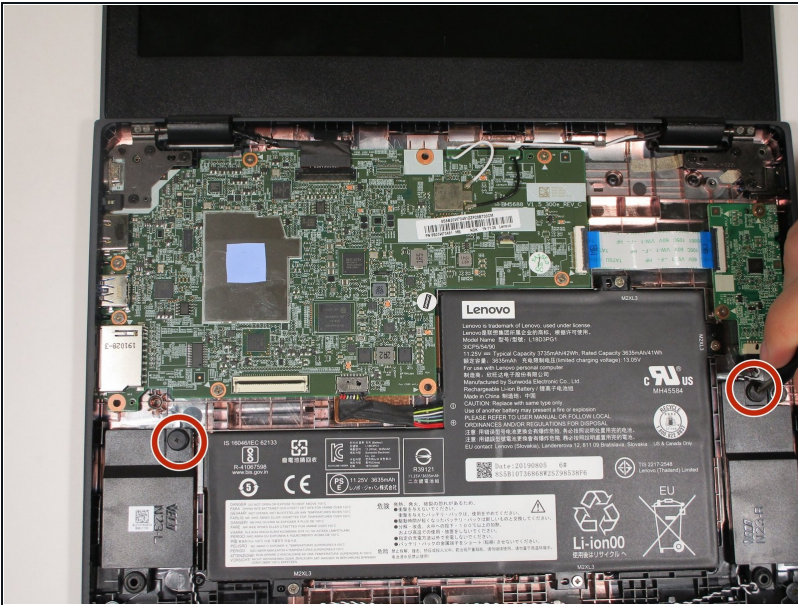

- Remove the two 2 mm Phillips #0 screws holding both of the speakers in.

## Step 6



- The speakers are now loose and can be removed from the laptop.

---

To reassemble your device, follow these instructions in reverse order.