



Lenovo 100e Chromebook 2nd Gen Trackpad Replacement

This guide will show the steps needed to take...

Written By: Pup Washington



INTRODUCTION

This guide will show the steps needed to take out and replace the trackpad in the Lenovo Chromebook 100e 2nd gen. The only tool required for this guide is a Phillips head screwdriver. Make sure to be careful when pushing on the trackpad in step #2 to ensure the connections do not break.


TOOLS:

1 x Opening Picks (1)

Phillips #0 Screwdriver (1)


iFixit Opening Tool (1)

Step 1 — Keyboard

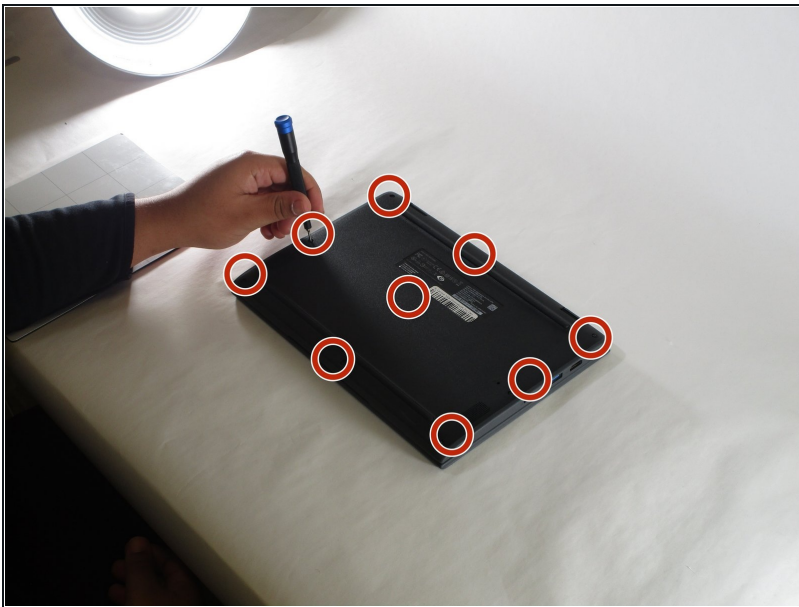

- Remove the nine 6 mm screws from the back of the laptop using a Phillips #0 screwdriver.



Step 2

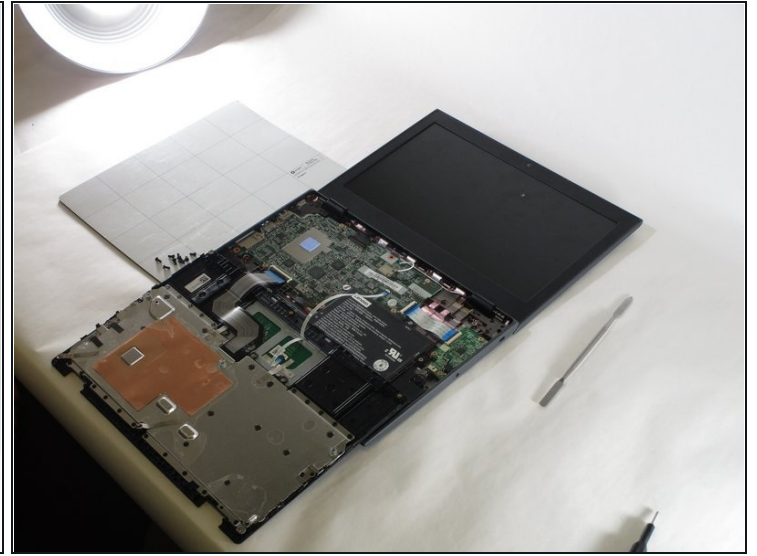

- Open the laptop and lay it flat.
- Go along the edge of the keyboard with an opening tool until it pops loose.


⚠ Potential for device damage: Make sure that the keyboard does not fall away from the laptop, as it is still connected to the internal components

Step 3

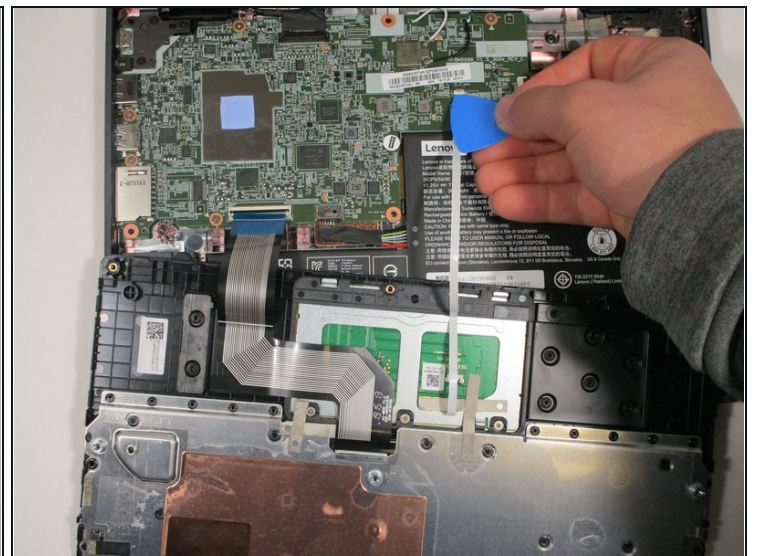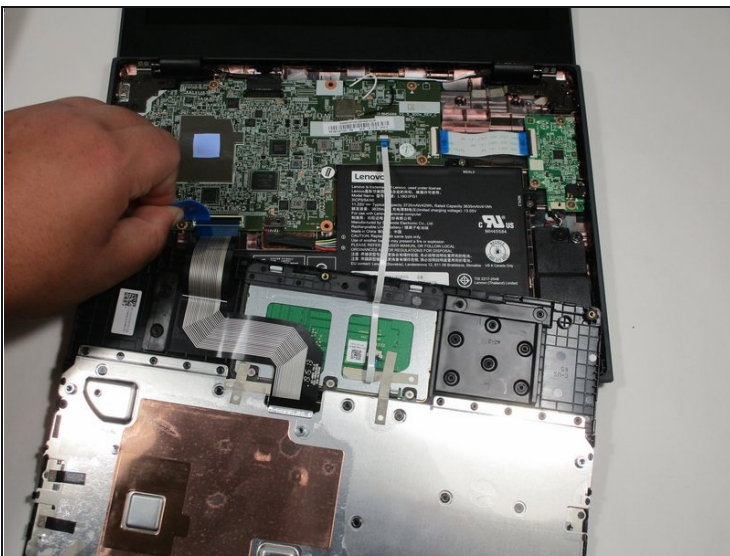


- Lift the keyboard connectors up using an opening pick.
- Remove the connectors from their sockets.

Step 4 — Trackpad

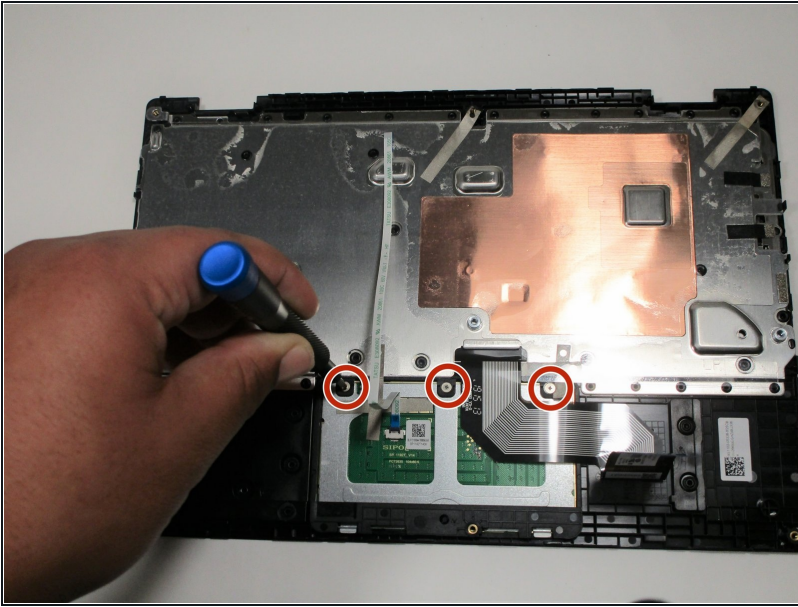

- Remove the three 2 mm Phillips #00 screws holding the trackpad in.

Step 5

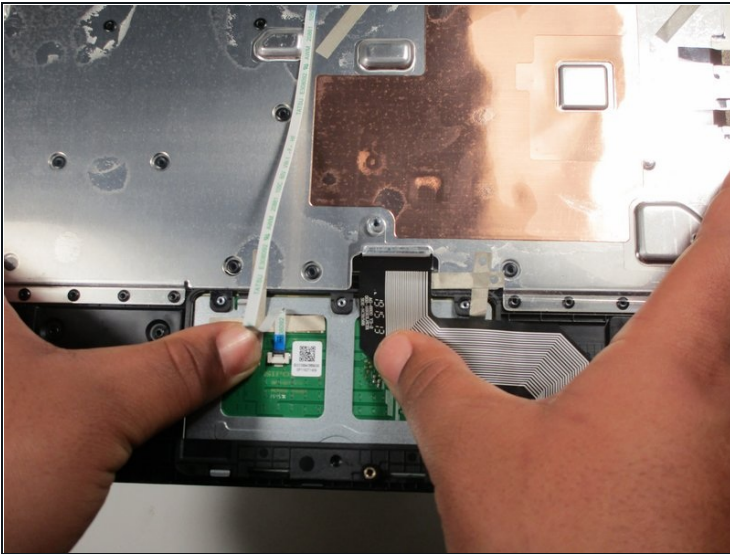

- Push up on the side of the trackpad that faces the screen.
- Pop the trackpad out and remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.