




IBM Thinkpad T61 Battery Replacement

How to replace the battery.


Written By: Kyle

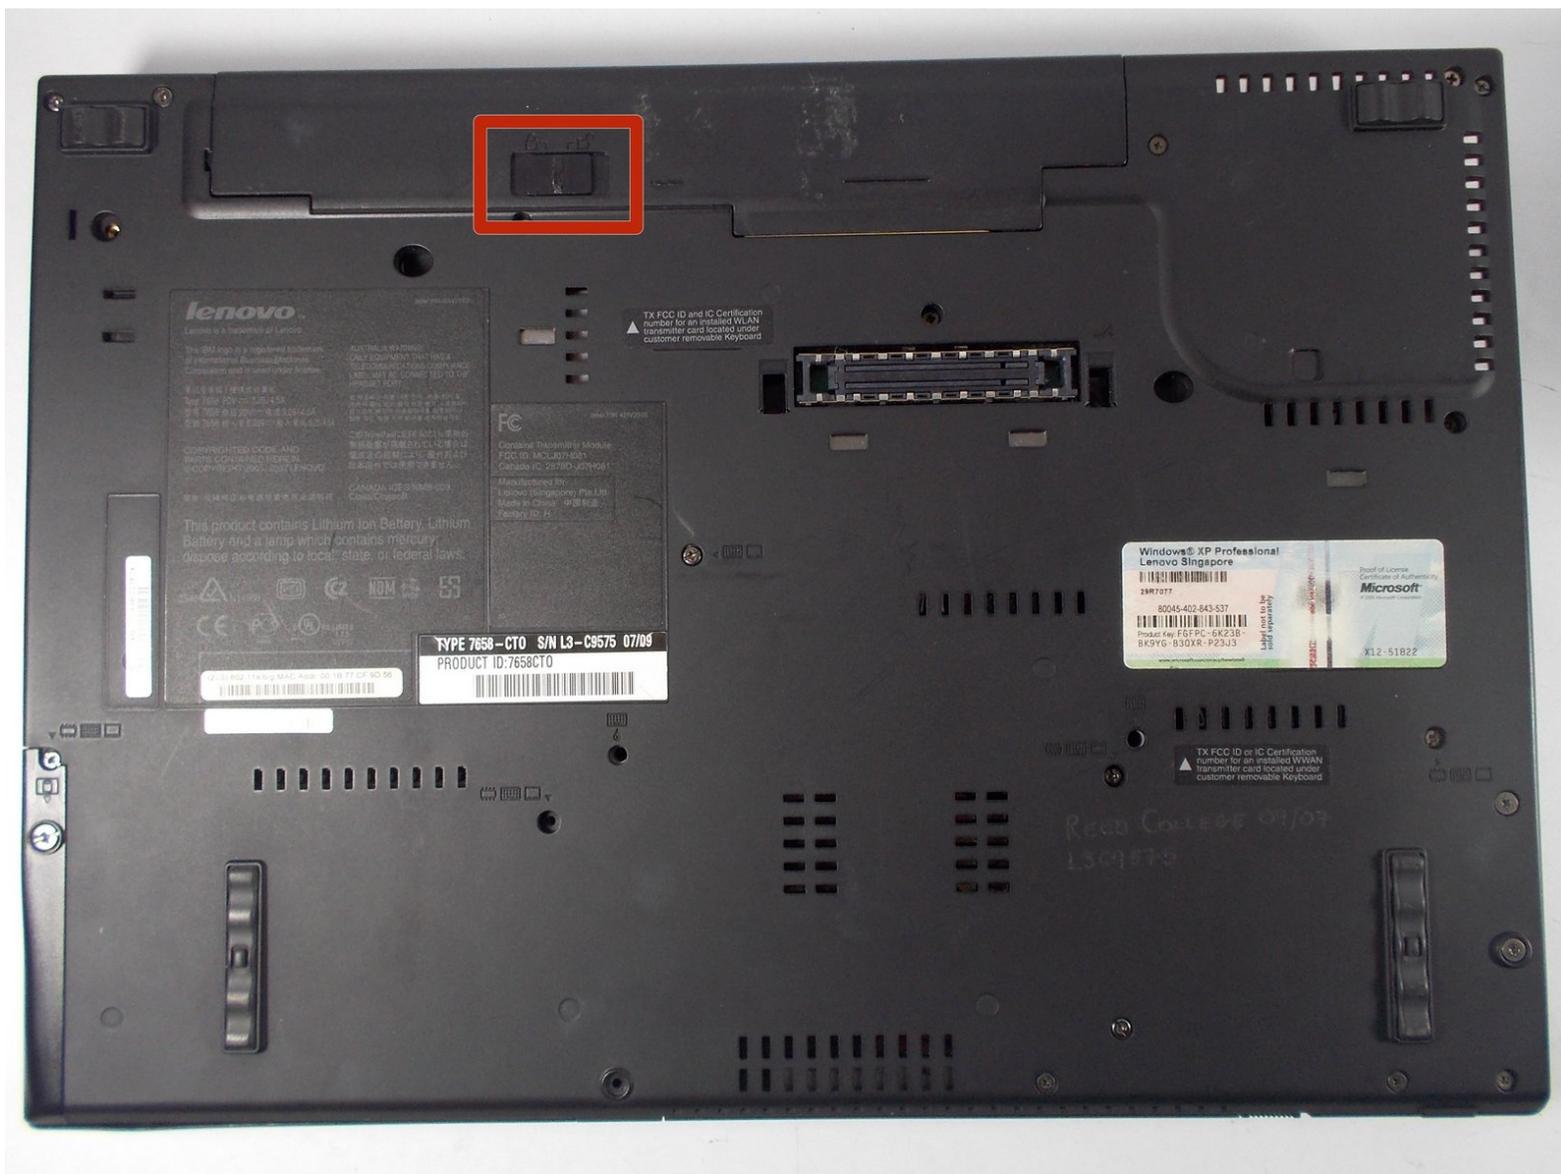

INTRODUCTION

A laptop battery should last for about 2 to 4 years. Eventually your battery will need replacing. This process is very simple and can be achieved by following this guide.

Step 1 — Battery

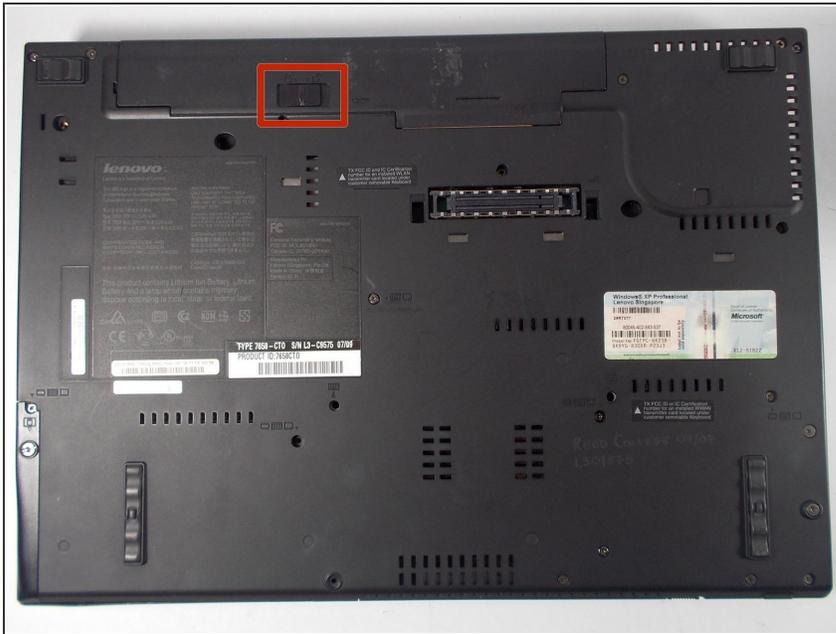

- Ensure the laptop has been properly shut down and unplugged.
- Turn the computer over so that you can see the battery release tab located near the top of the Thinkpad.

Step 2



- Use your finger to slide the release tab to the unlocked symbol.

Step 3



- Hold the tab in the unlocked position and push the battery away from the computer to remove it.

Step 4



- Slide the new battery in until it clicks.
- Ensure that the release tab is in the locked position.