




# iPod Nano 7th Generation Display Assembly Replacement

Prerequisite to remove the display assembly.


Written By: Sam Goldheart

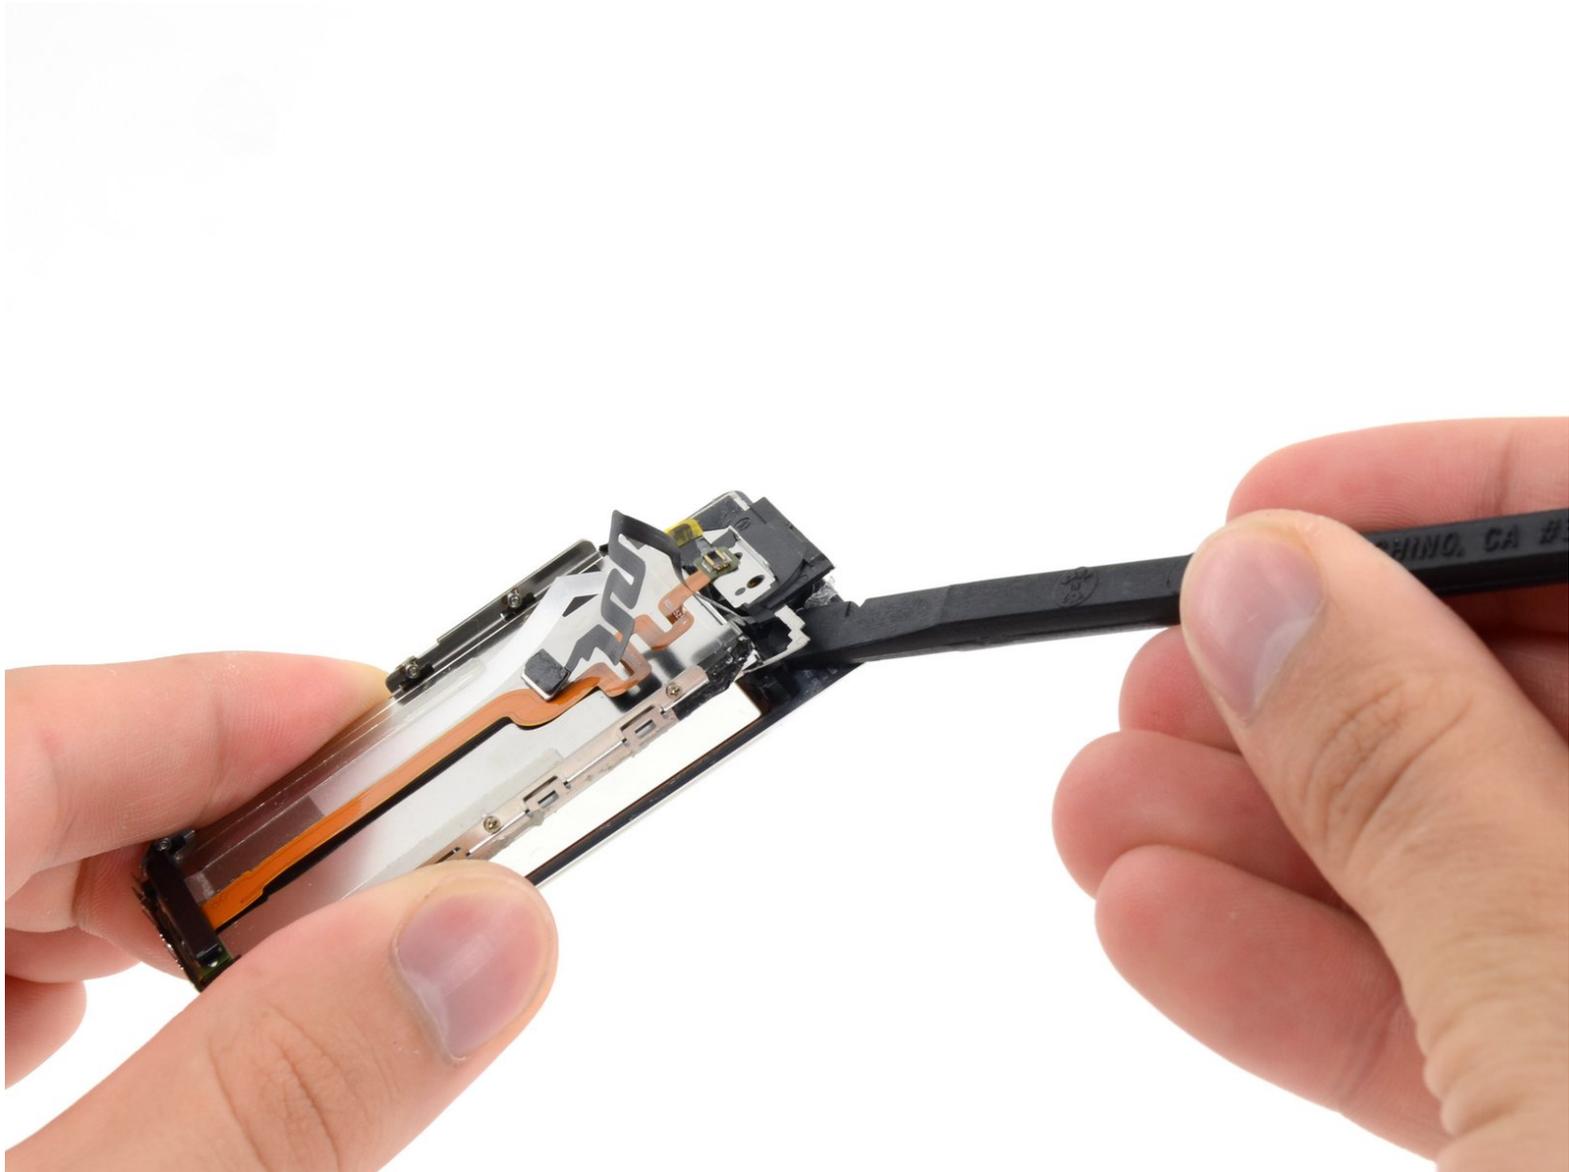

 **TOOLS:**

- [Spudger](#) (1)
-

## Step 1 — Display Assembly

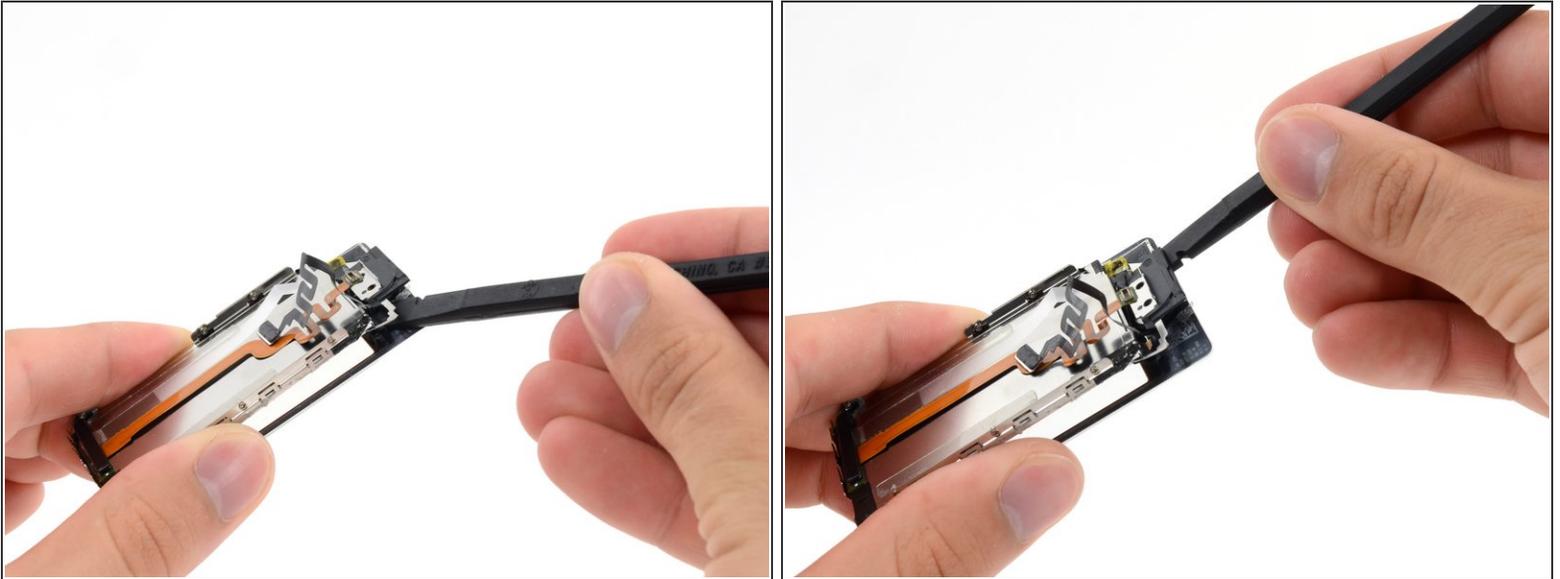

- Insert a spudger under the metal midframe and display on the left side of the home button.
- ⓘ Make sure that the spudger is under the entire display assembly to prevent bending the metal midframe.
- Rotate the spudger around the home button and across the front panel, releasing the adhesive holding the display in place.

## Step 2



- Once all of the adhesive has been released, gently separate the display assembly from the front glass/digitizer.

To reassemble your device, follow these instructions in reverse order.