

MacBook Air 11" Mid 2013 I/O Board Replacement

Prereq to upper case guide—remove the I/O board after the logic board

Written By: Sam Goldheart



This document was generated on 2020-11-28 03:00:55 AM (MST).

INTRODUCTION

Prereq to upper case guide—remove the I/O board after the logic board




TOOLS:

- Spudger (1)
- T5 Torx Screwdriver (1)
- Tweezers (1)

Step 1 — I/O Board






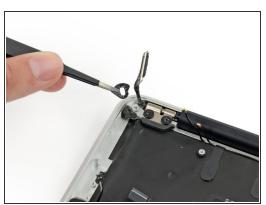

- Remove the small rubber gasket from the corner of the upper case nearest the the I/O board.
- Remove the gasket from the corner nearest display cable connector.


Step 2

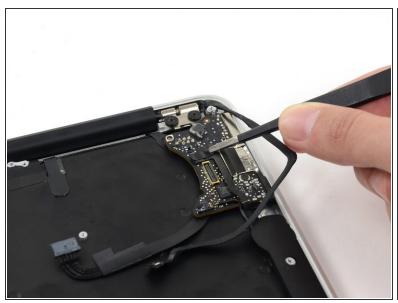




(i) If necessary, use tweezers to remove any tape covering the microphone cable ZIF connector.

Step 3

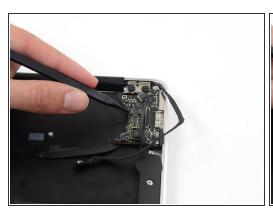



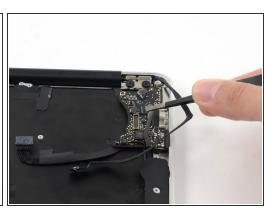

- Use the tip of a spudger to carefully flip up the retaining flap on the microphone cable ZIF socket.
- A Be sure you are prying up on the retaining flap, **not** the socket itself.
- With a pair of tweezers, pull the microphone ribbon cable straight out of its socket.

Step 4









- Use the tip of a spudger to pry under the speaker cable near the connector, lifting it straight up from its socket.
- De-route the cable from its notch in the logic board.

Step 5

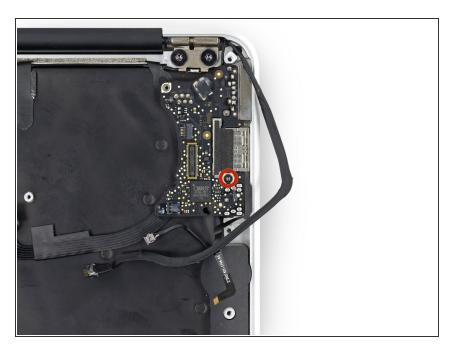

 Remove the single 3.6 mm T5 Torx screw securing the I/O board to the upper case.

Step 6

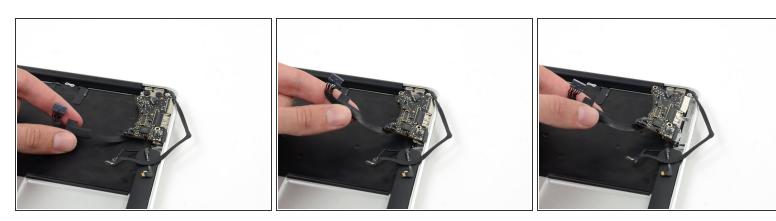

• Carefully lift the I/O board by its power cable and pull it away from the edge of the case.

To reassemble your device, follow these instructions in reverse order.