




How to clean Sony Ericsson QuickShare T630 joystick

This guide will direct you to clean the joystick to improve function.

Written By: Shelby Hartin

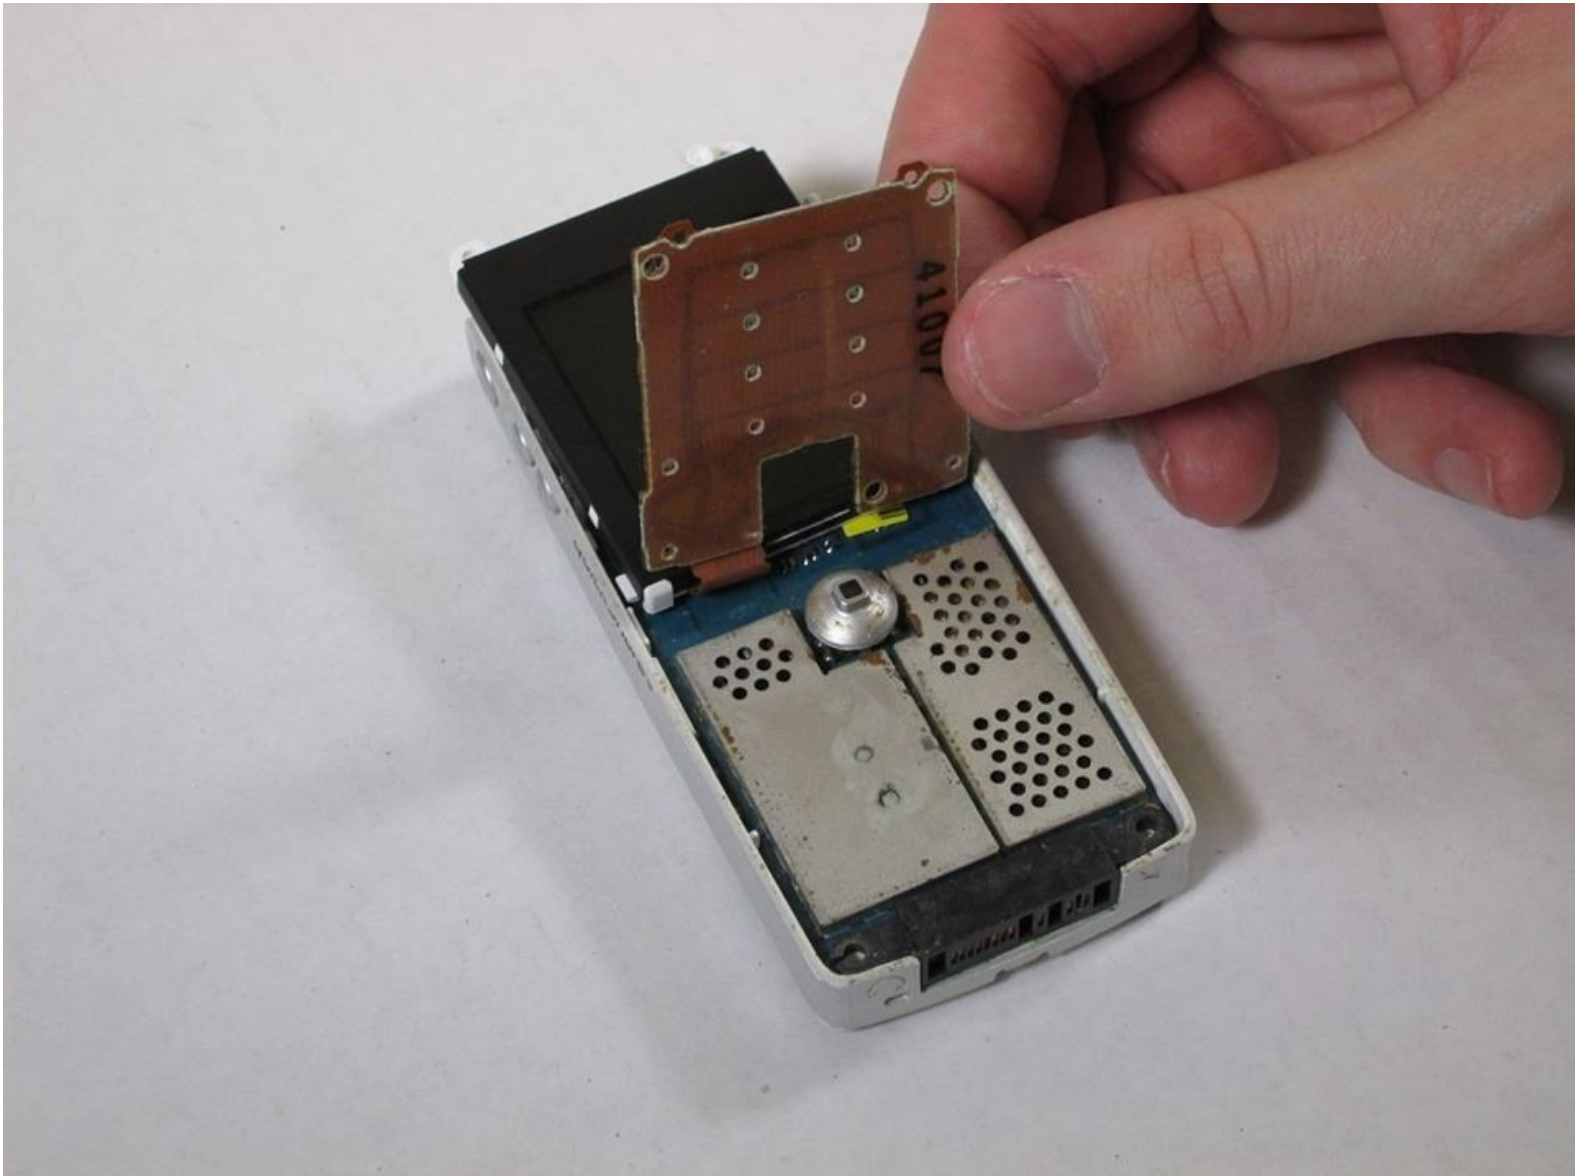

INTRODUCTION

Before accessing the joystick, several prerequisite steps are required. This guide will show you how to disassemble the device in order to access the joystick for proper maintenance.



TOOLS:

- [Cotton Swab](#) (1)
 - [High Content Rubbing Alcohol](#) (1)
 - [Spudger](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Sony Ericsson QuickShare T630 Phone Enclosure



- Begin the disassembly by placing your Sony Ericsson QuickShare T630 on a flat surface.

Step 2



- Slide the protective panel on the backside of the phone downward and remove it entirely, revealing the battery underneath.

Step 3



- Slide the battery upward to remove.

Step 4



- Remove the rubber plug located near the camera by gently prying upward with your fingers.
- Gently lift the camera shield after removal of the rubber plug.


Step 5



- Pry the remaining panel to loosen its contact to the phone using a spudger.
- Slide the panel upward to remove it completely.


⚠ These steps will require a slight appliance of force.

Step 6

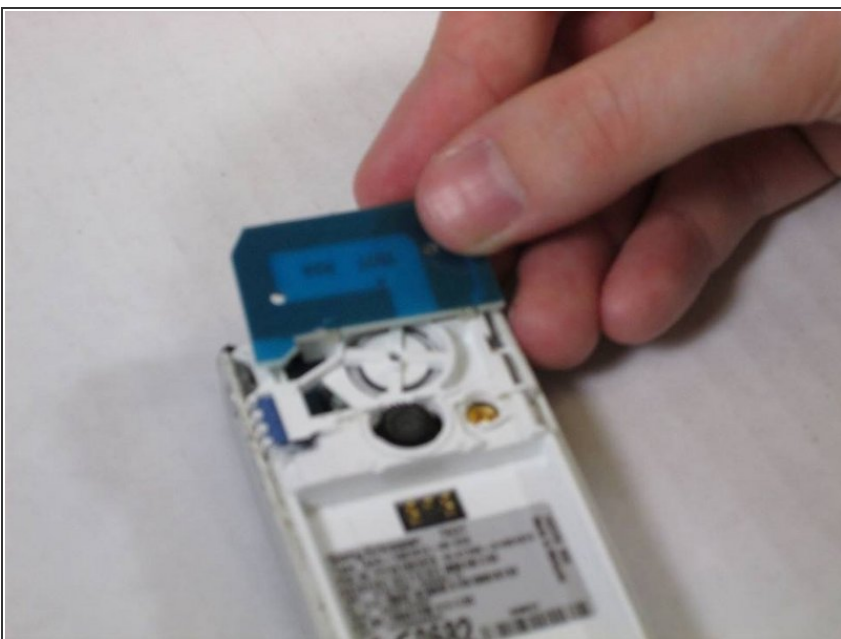

- Slide the aerial upward to remove it.

Step 7

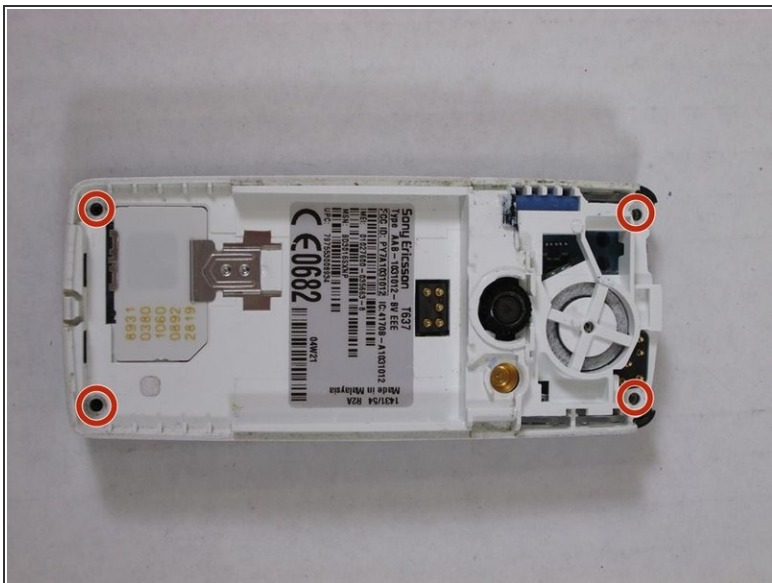

- Remove the four screws located at each corner of the device.

Step 8



- Gently lift and remove the front panel of the phone after removing the screws.


Step 9



⚠ This step is NOT required for joystick maintenance or keypad maintenance and replacement! Continue on to step 10 if you are attempting to achieve either of these goals.


- Slowly lift the screen to reveal the green circuit ribbon connecting the screen to the phone.
- Gently pull the ribbon from the circuit.
- Remove the now disconnected screen.

Step 10

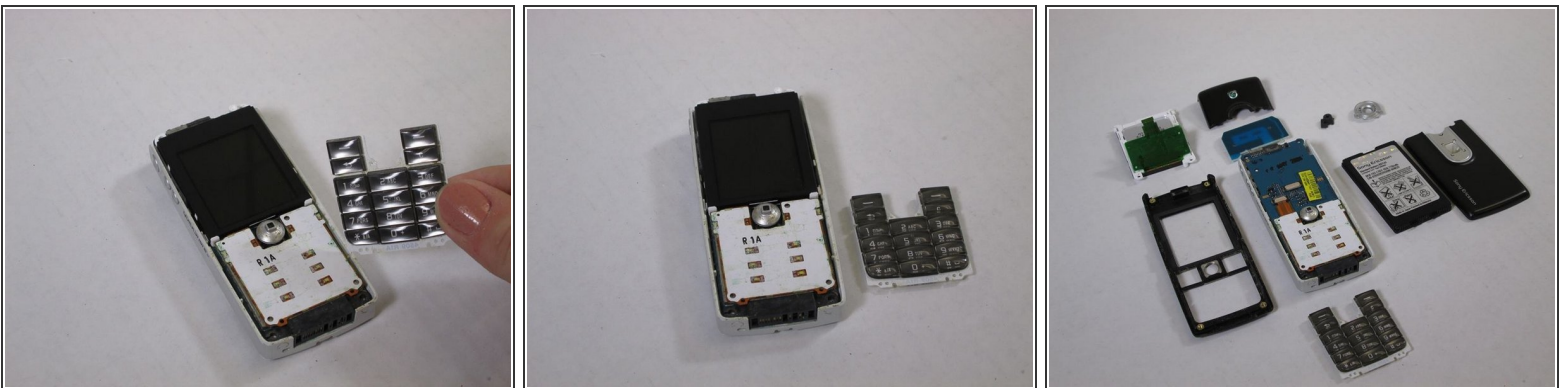


- Remove the keyboard by slowly pulling it away from the circuit board.
- i** There are no direct connections between the keyboard and phone.
- i** These are all of the parts covered in this disassembly that make up the Sony Ericsson QuickShare T630.

Step 11 — How to clean Sony Ericsson QuickShare T630 joystick

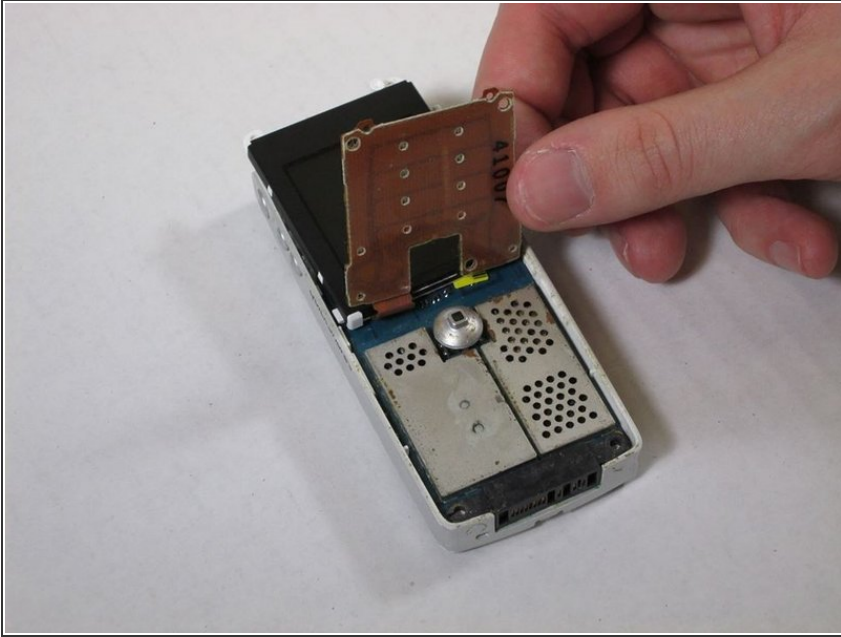

- Gently lift the white circuit board to reveal the base.

Step 12

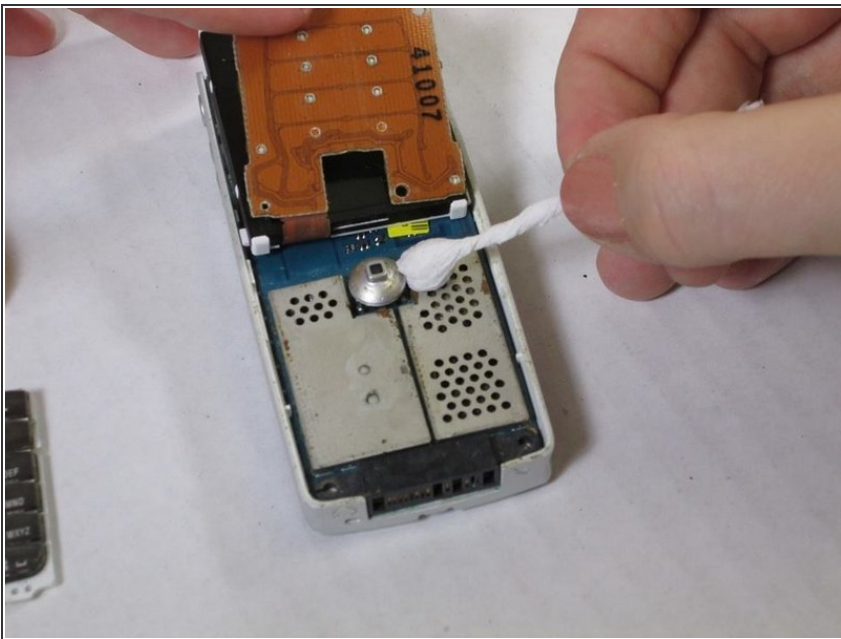

- Soak cotton swab in rubbing alcohol
- Gently work the cotton swab around the joystick, removing any waste buildup that may hinder its use.

To reassemble your device, follow these instructions in reverse order.