

## **Uniden TCX905 Battery Pack Replacement**

This guide will show the user how to remove the battery pack.

Written By: Gary Pence



## **INTRODUCTION**

The battery is what charges the phone, and the phone will not operate without it. This must be removed in order to access the inside of the phone.


## **Step 1** — Battery Cover





- Starting from the top of the cover, slide down and away from the phone with your thumb
- Lift battery cover off of batter and place it to the side

## **Step 2** — Battery Pack

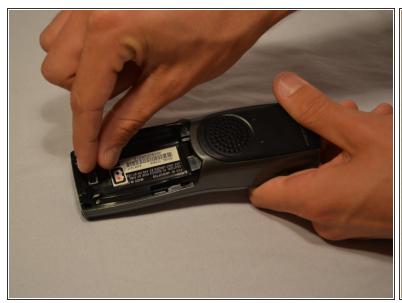



- Once battery cover is removed, place your thumb and index fingers on the the wires near the receptacle
- Gently pull straight up on the wires until a click is heard which signifies the battery is completely disconnected
- Place battery pack to the side

To reassemble your device, follow these instructions in reverse order.