
INTRODUCTION

Will your batter not hold a charge anymore, or do you want to carry spare batteries for a long trip? You only need your hands and a minute to to change your battery.



PARTS:

- [HP MU09XL Replacement Laptop Battery](#) (1)
-


Step 1 — Battery



⚠ Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.

- Flip your device over so the bottom panel is facing up.

Step 2

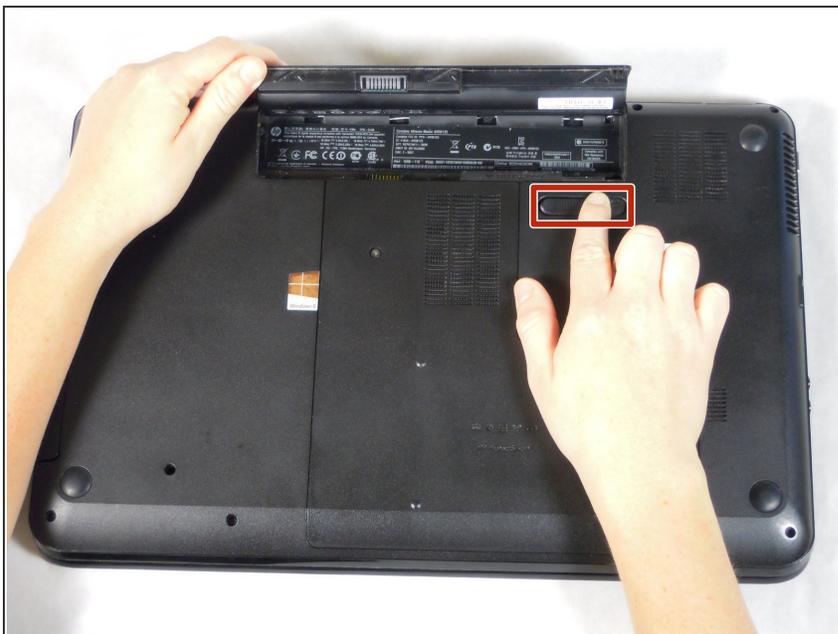

- The battery is held in by a latch in the front and tabs in the back.
- Slide the lock switch left, towards the center of the computer.
- Lift up the battery, rotating it up and away from you, then pull it out.
- ☑ To put the battery back in, line it up with the battery bay and the holes for the tabs. Then let the battery rotate towards you and press down until the latch engages and you hear a click.

To reassemble your device, follow these instructions in reverse order.