



HTC Incredible 2 Battery Replacement

How to replace a dead or broken battery in three simple steps.


Written By: Jonathan Morsch



INTRODUCTION

Is your battery not accepting a charge? This guide will show you how to replace the battery.

Step 1 — Disassembling HTC Incredible 2 Back Panel

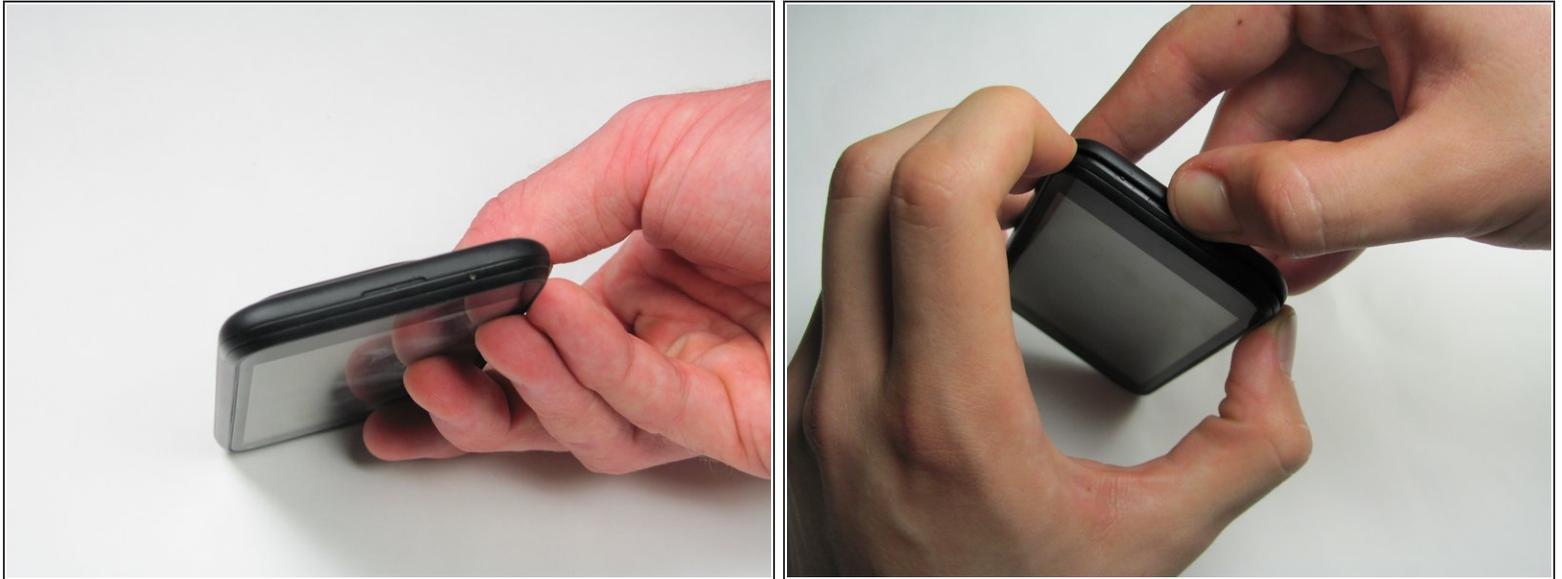

- Press your thumbnail into the slot between the rear panel and the front casing located on the bottom of the phone. Use a penny or dime if you have trouble using your thumbnail.
 - With a moderate amount of force, pry the rear panel up and away from the phone. You may need to slide your thumbnail up the crack to separate the rear panel from the front casing.
- i** This can take a little bit of effort. Don't be discouraged if you can't get it right away.

Step 2



- Remove the rear panel from the phone.

Step 3 — Battery



- Press your fingernail into the slot between the battery and the rear inner frame, located between the battery and LED lights.
- ⓘ Use a penny or dime if you can't use your fingernail.

Step 4



- Gently lever the battery up and away from the lights.
- Lift the top of the battery up and remove the battery from the rear inner frame.

To reassemble your device, follow these instructions in reverse order.