



# HTC One Max Motherboard Replacement

In this guide you will learn how to replace the...

Written By: Andrew Keller



# INTRODUCTION

In this guide you will learn how to replace the motherboard in the HTC One Max.

## TOOLS:

Spudger (1)  
Phillips #00 Screwdriver (1)  
Tri-point Y00 Screwdriver (1)

## PARTS:



HTC One Max Logic Board (1)

## Step 1 — Back Case



- Lift back cover while pressing highlighted release switch towards the center of the phone.

## Step 2

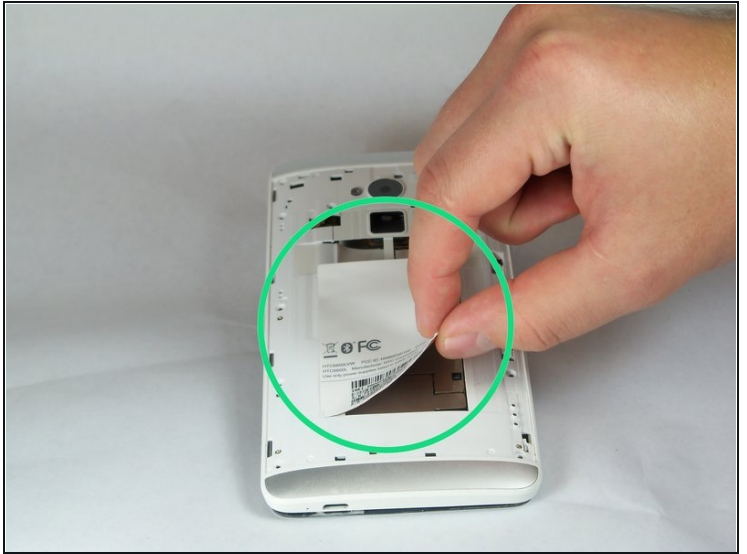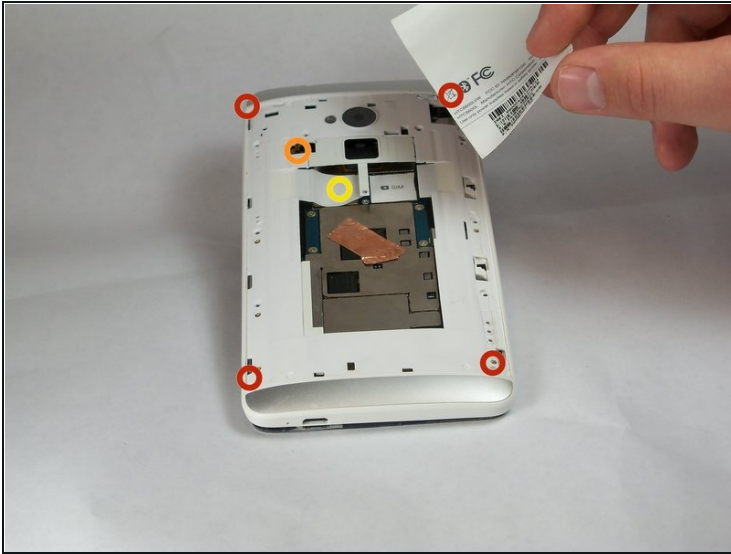

- Remove the four white stickers in each corner that cover the Tri-Wing screws.
- Remove the white sticker near the buttons that control the volume.
- Remove the white sticker near the SIM card.
- Remove the big white sticker with the bar-code in the center of the phone.


## Step 3



- Remove the thirteen Tri-Wing Y00 screws (Upper & Lower screws are 5 mm length, middle screws are 3.8 mm length) from the back case.
- Disconnect the cable near the volume buttons.




## Step 4

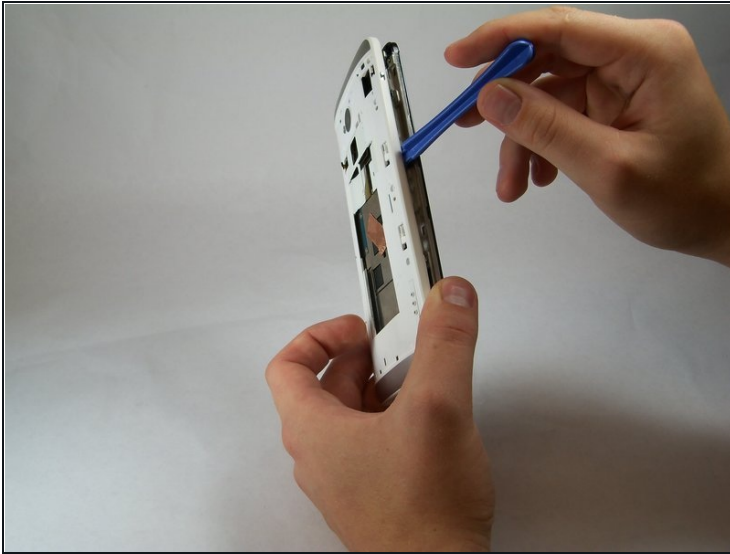



- Use the small plastic opening tool to pry between the screen and the rear case.

## Step 5 — Fingerprint Sensor

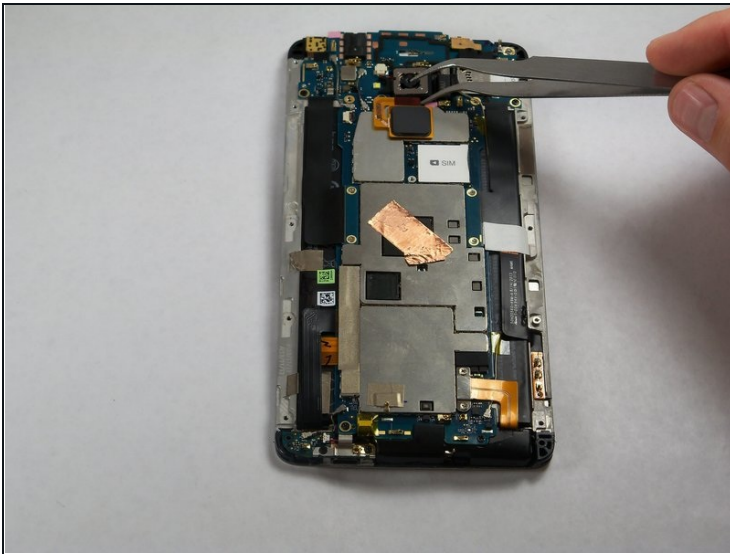



- Use [Tweezers](#) to disconnect the ribbon cable connecting the fingerprint sensor to the motherboard.
- When replacing the fingerprint sensor, make sure the ribbon cable snaps into the port on the motherboard.

## Step 6 — Motherboard

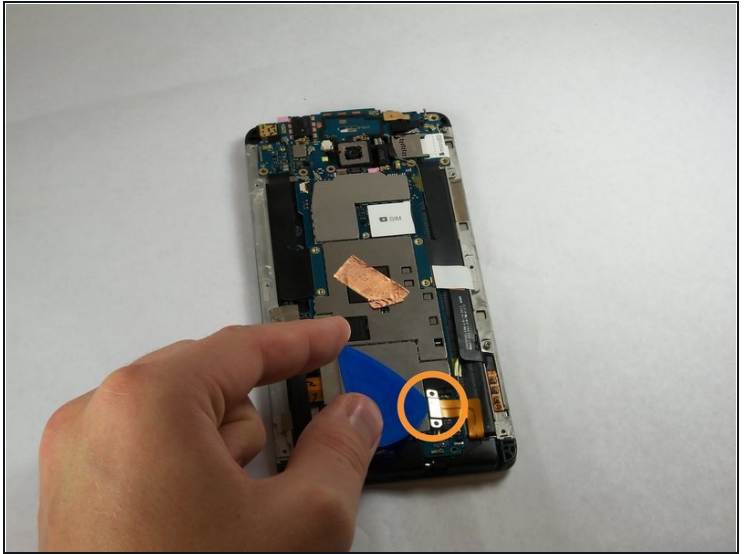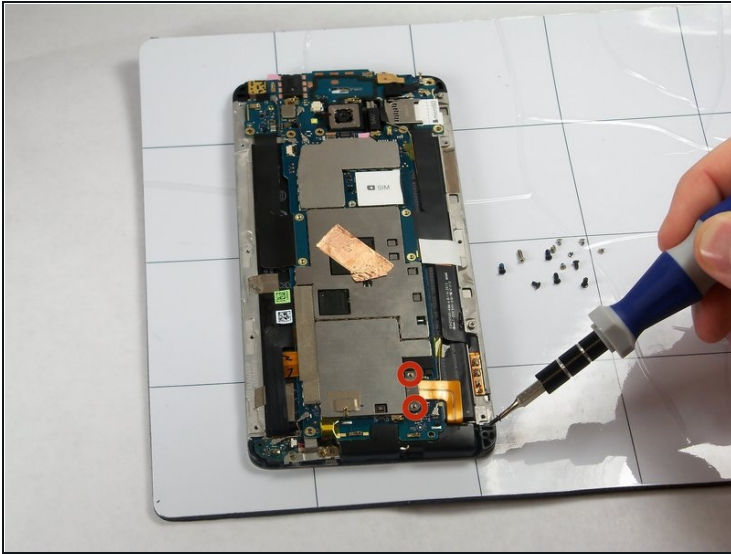

- Remove the two 2.2 mm Phillips #000 screws holding the battery cable.
- Use a plastic tool to remove the ribbon cable.

## Step 7

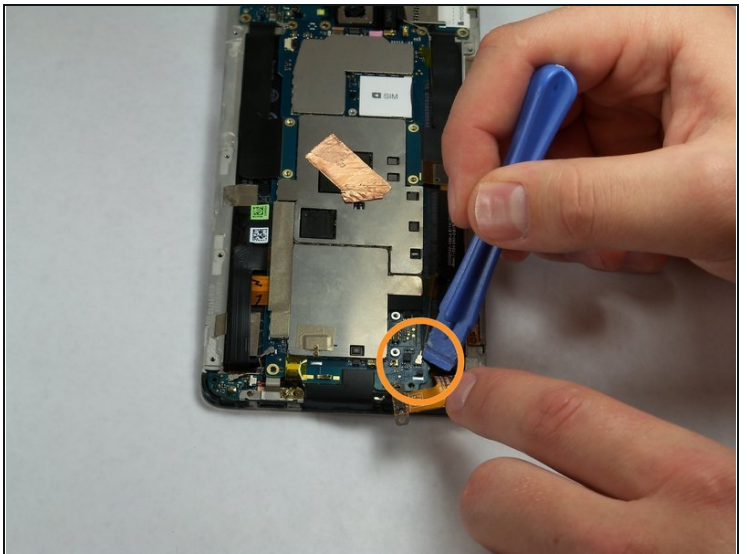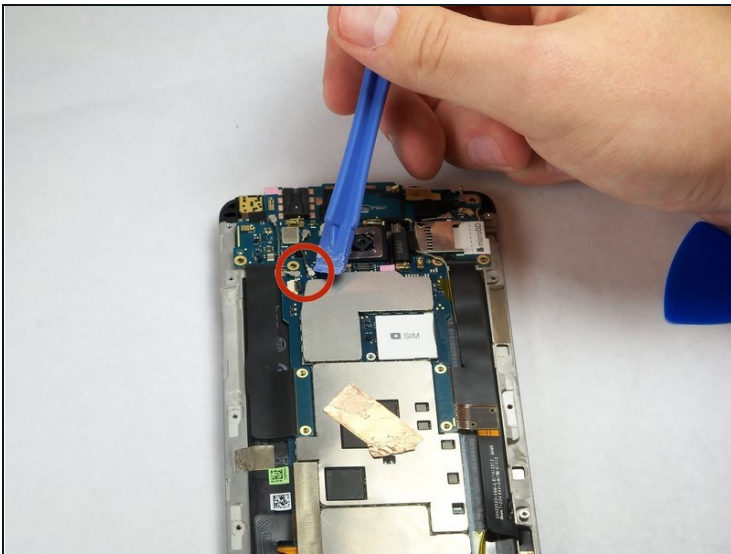




- Use the plastic opening tool to disconnect the two antenna wires at the top of the phone.
- Use the plastic opening tool to disconnect a third antenna wire at the bottom of the phone.

## Step 8



- Remove the seven 3 mm Phillips #000 screws from the motherboard.


## Step 9

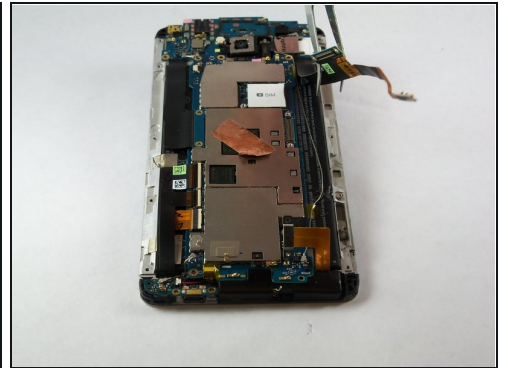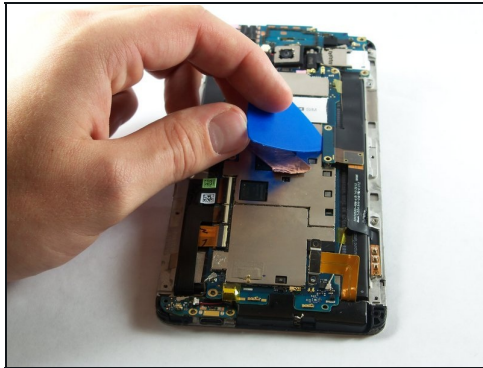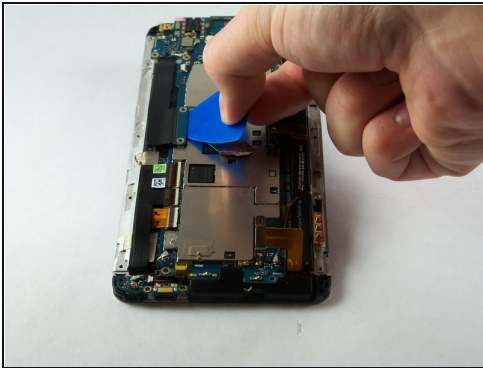

- Use a plastic tool to pry up and disconnect the large ribbon cables on each side of the motherboard.
- ① Use caution prying the ribbon cable on the right side because other ribbon cables run under it.




## Step 10

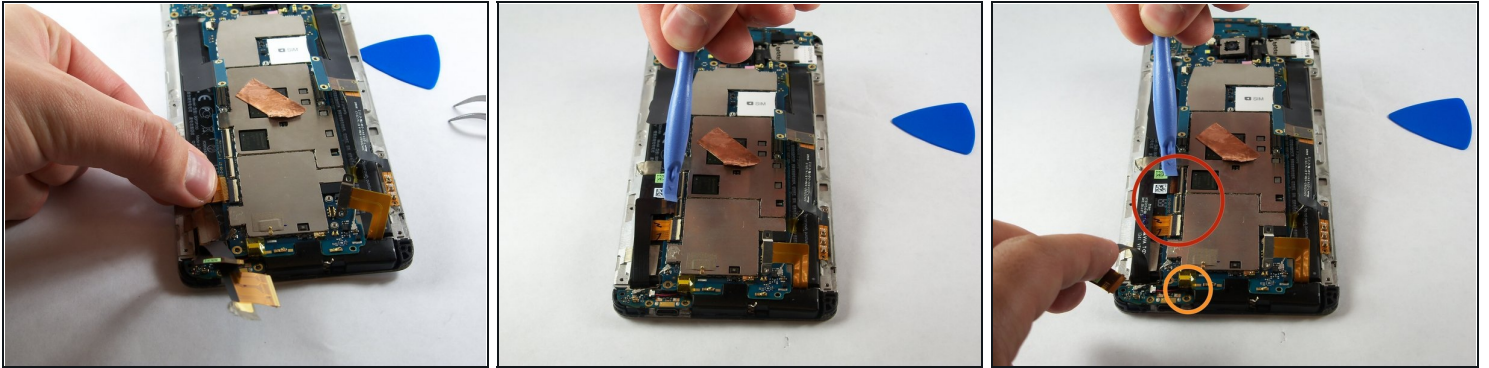

- Remove the tape covering three flex cable gate connectors on the bottom left side of the phone.
- Use small plastic opening tool to pry open the latch on each of these gate connectors to disconnect the three cables.
- Use small plastic opening tool to pry open the latch on each of these gate connectors to disconnect the three cables.

## Step 11

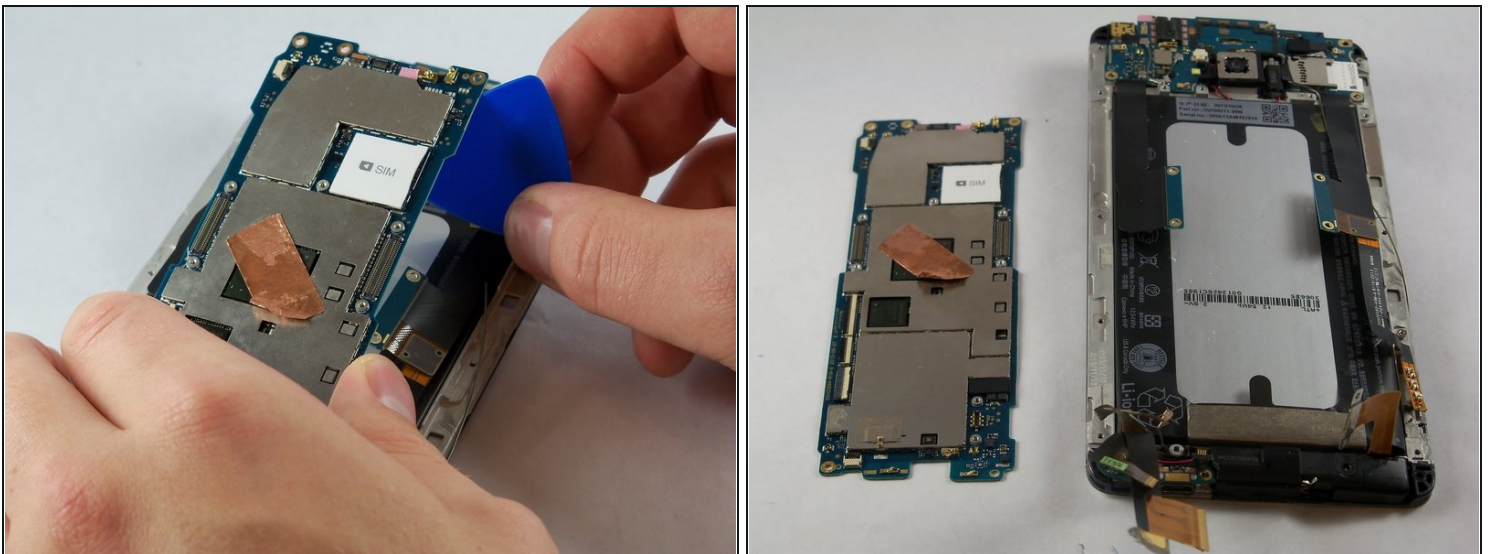

- Use a plastic tool to lift and remove the motherboard.
- Use a heat gun to loosen adhesive at bottom if needed.

---

To reassemble your device, follow these instructions in reverse order.