



# Samsung Galaxy Tab 3 7.0 3G Back Cover and Frame Replacement

This repair guide will show you how to remove the back cover and the plastic frame of the Samsung Galaxy Tab 3 7.0 3G.

Written By: Andrea Flores



---

## INTRODUCTION

This disassembling guide is useful for many repair guides involving the device such as battery replacement, camera replacement etc..

---

### TOOLS:


- [Spudger](#) (1)
  - [1.5 mm Flathead Screwdriver](#) (1)
-

## Step 1 — White Backing



- To begin working on your repair, turn your device over and open the micro SD slot, as shown in the first picture.
- Using the flat part of the spudger, begin pushing it between the white backing and the SD slot. Continue to pry off the white backing until you hear several clicks and see the white backing lift up, as shown in the second picture.
- Continue to pry off the white backing around the device, as shown in the third picture.

## Step 2

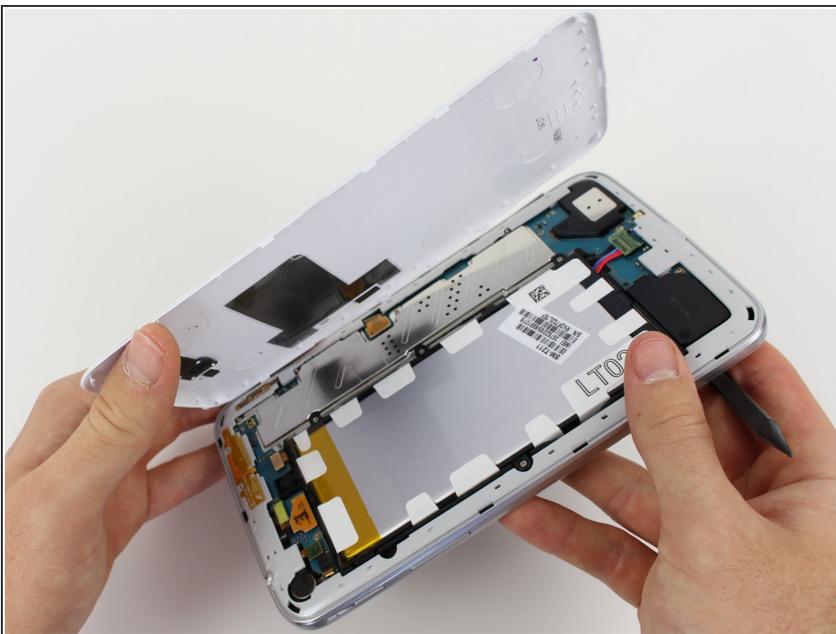

- Once the backing has been pried off all around the device, remove the white backing.

### Step 3 — Silver Siding



- To remove the silver siding, begin by pushing the spudger between the frame and the screen, as shown in the first picture.
- Do this until you see the silver siding begin to lift up. Continue doing this around the edges of the device, as shown in the second picture.
- Once you silver siding is loose all around the device, remove it carefully with your hand as shown in the third picture.

To reassemble your device, follow these instructions in reverse order.