




iRobot looj 120 Tread Replacement

If the tread on the device isn't working as intended, they may be damaged. This guide will show you how to replace the treads on the iRobot Looj 120.

Written By: Joshua

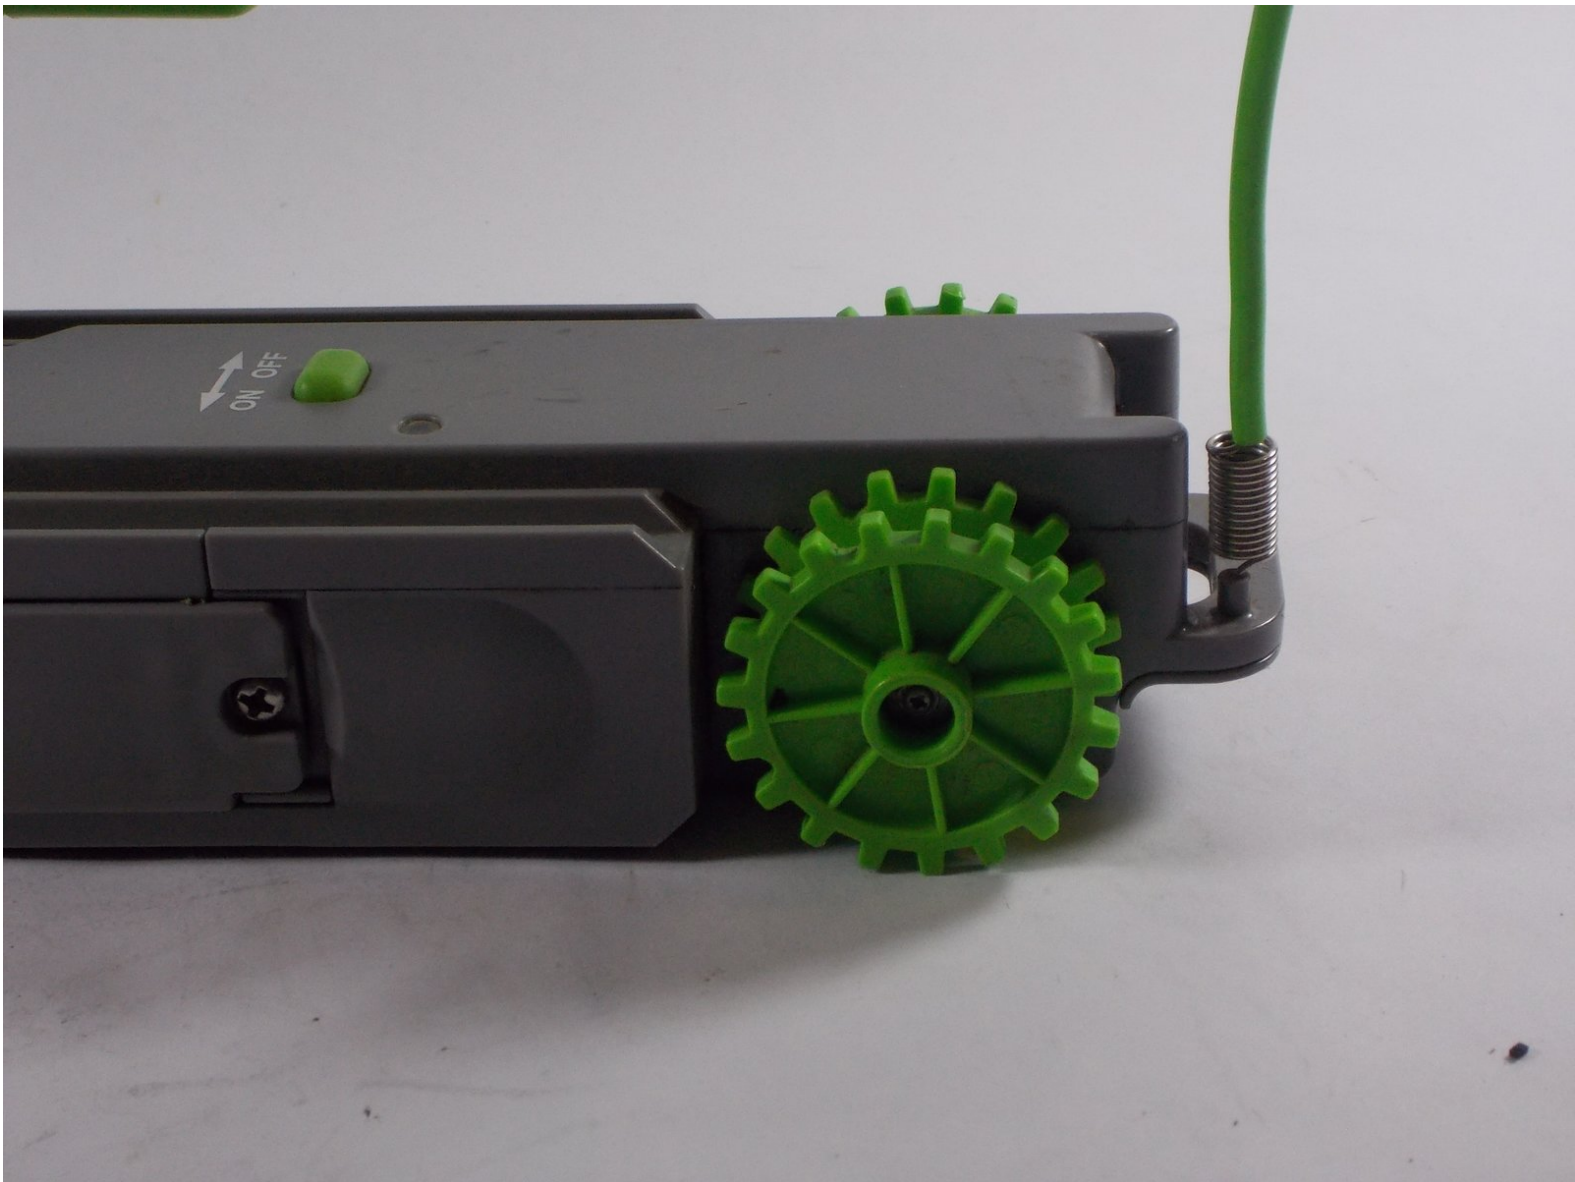

INTRODUCTION

This guide will teach you how to remove the device's treads, which cover the wheels and replace them with new ones.



PARTS:

- [2 Replacement Treads For Models 120](#) (1)
-

Step 1 — Treads



- To remove tread simply pull tread off of front wheels (on the auger side) and then slide the treads off of the rear wheels

To reassemble your device, follow these instructions in reverse order.