




JVC Adixxion GC-XA1BU Battery Cover Replacement

This guide will show you how to replace the battery cover for your JVC Adixxion GC-XA1BU.

Written By: Christina Michelle Johnson

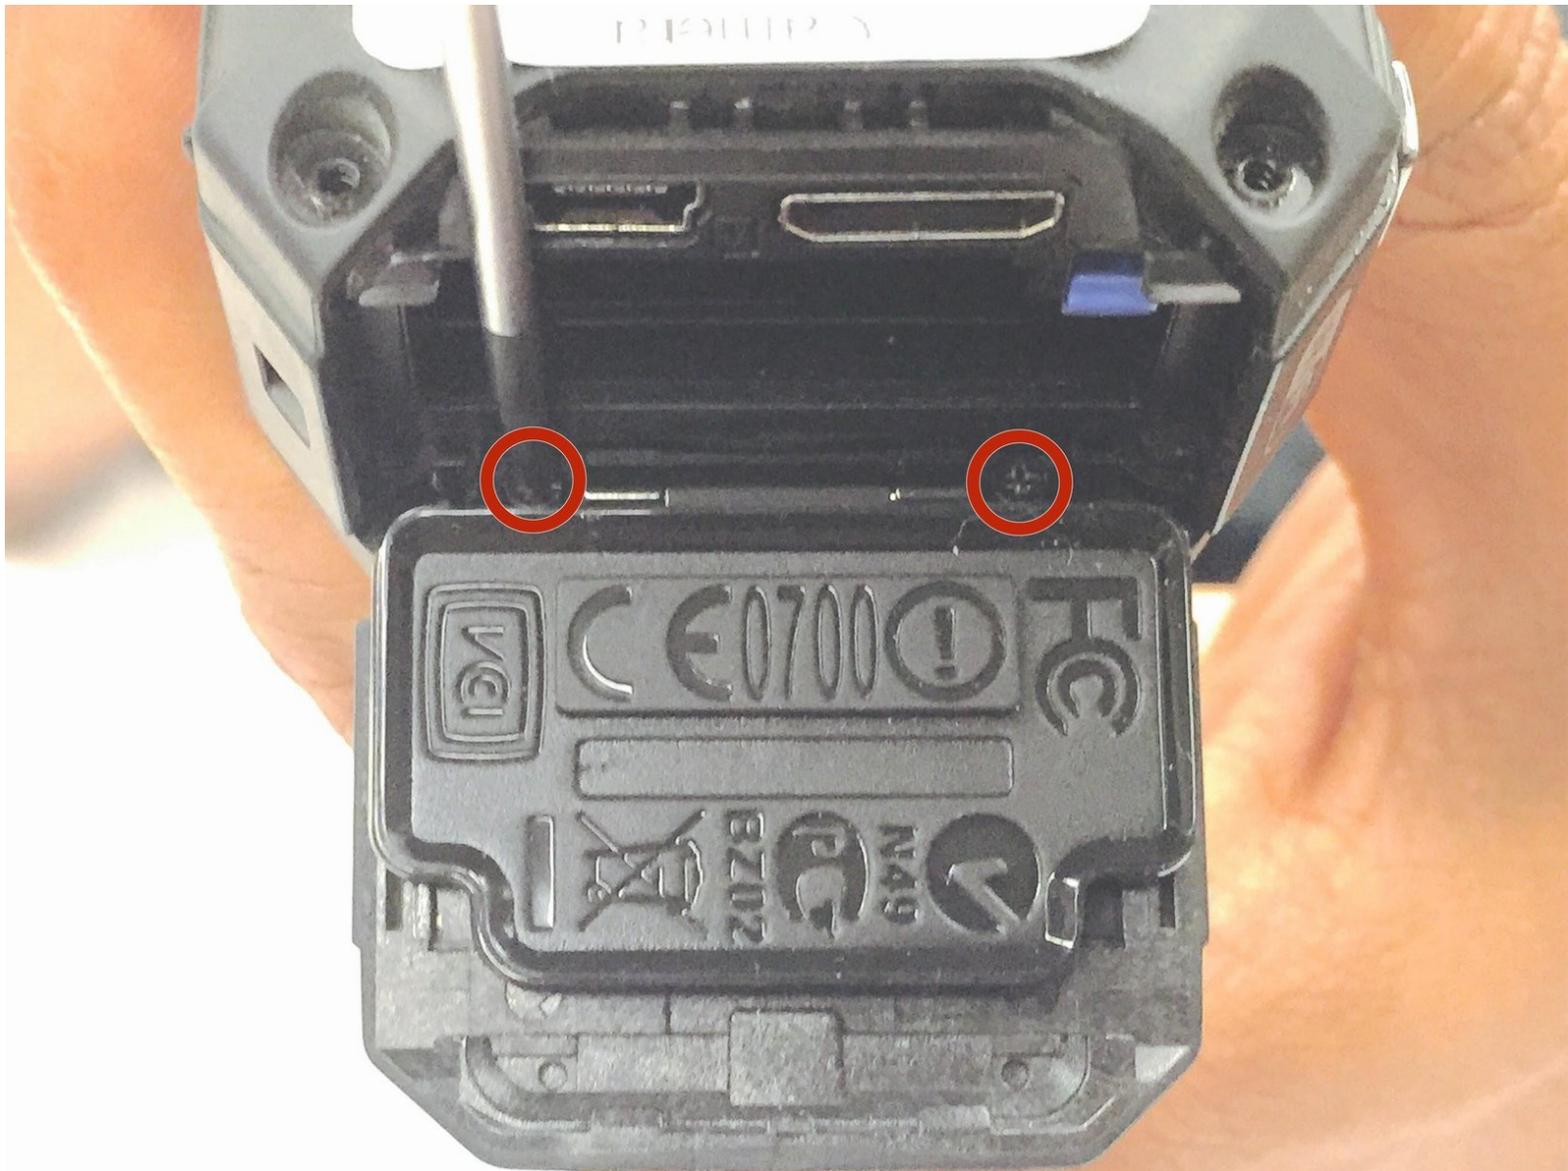

INTRODUCTION

To complete this guide, you will need to purchase a new battery compartment cover and make sure that you have the tools listed. While it is not necessary to remove the battery to be able to remove the battery cover, it is always good practice to make sure that the device is completely powered off before attempting any repairs.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Find the side of the camera that looks like this.

Step 2



- Push down on the black switch.

Step 3



- While still pushing down on the black switch, slide back the battery cover (see photo for direction).

Step 4



- Push the cover up to open the battery compartment, and then push the blue battery release switch.

Step 5



- You can now take the battery out of the camera.

Step 6 — Battery Cover



- After removing the battery, take out the two Phillips screws (4mm headsizes x 3mm length) screws.

You can now remove the battery cover.

To reassemble your device, follow these instructions in reverse order.