


# **Zeki Droid Tablet Camera Replacement**

Replacing the cameras that may be cracked or...

Written By: Colleen McFadden

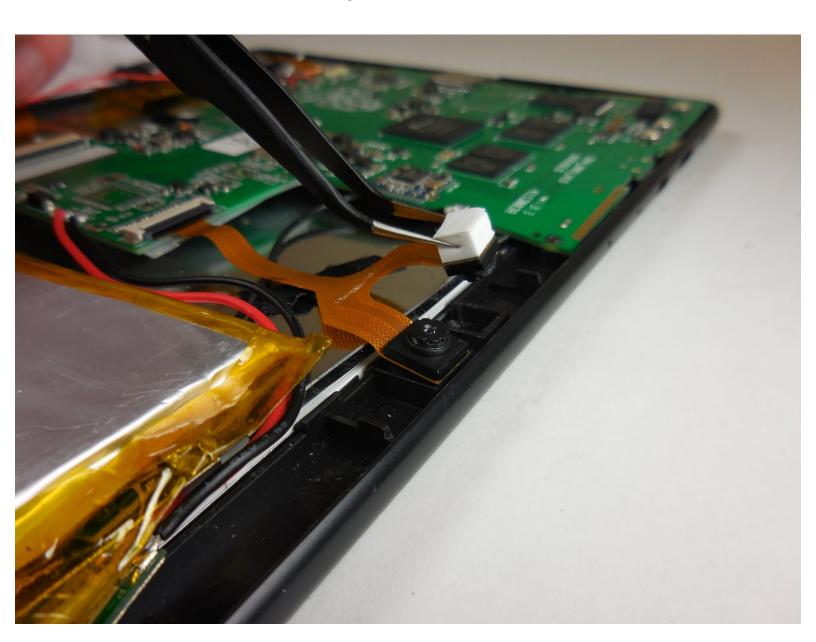

#### **INTRODUCTION**

Replacing the cameras that may be cracked or faulty on your Zeki Droid Tablet. This procedure should take no more then twenty minutes to complete. The process will include using tools such as spudgers, and tweezers.



# **TOOLS:**


- Spudger (1)
- iFixit Opening Tool (1)
- Tweezers (1)

# Step 1 — Back Casing




 Remove the back casing by slowly popping each tab out with a plastic opening tool.

# Step 2

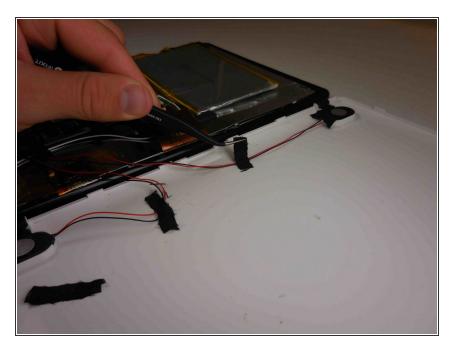


 Remove the tapes one by one from the connecting wires with tweezers.

# Step 3

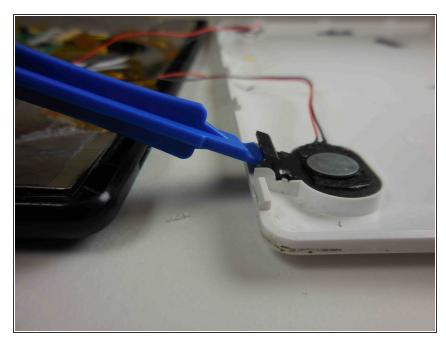

- Remove the black clips from both sides of the casing with a plastic opening tool.
- The clips should pop off separate from the speakers.

# Step 4

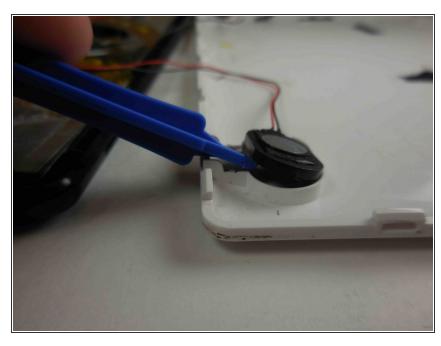


- Remove the speakers from the back casing.
- ↑ Do not tug on the speakers because they are connected to fragile wires.

# Step 5



 Pull the speakers away from the back casing carefullly.

#### Step 6 — Camera

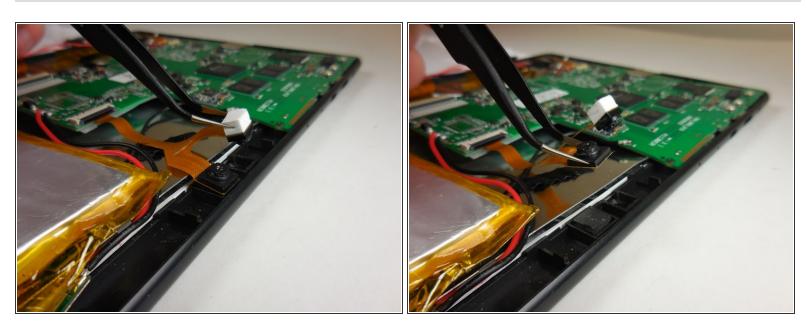

- Grip the camera on both sides using tweezers or your fingers, and carefully lift it off the board.
- The adhesive may make it difficult to remove the cameras from the tablet.

### Step 7



- Undo the ZIF connector that is connecting the cameras to the motherboard using a plastic spudger or fingernail.
- This guide has more information on how to undo the ZIF connector
- Do not yank the ZIF connector. It should come apart very easily with little force needed.

### Step 8



 Pull the copper connection carefully away from the motherboard of the tablet to completely remove the camera.

To reassemble your device, follow these instructions in reverse order.