




Bose SoundDock Portable v2 Speaker Replacement

If the speakers are not working follow these instructions for clean crisp sound. You will have to already have the speaker purchased to do this replacement.


Written By: Evan Low

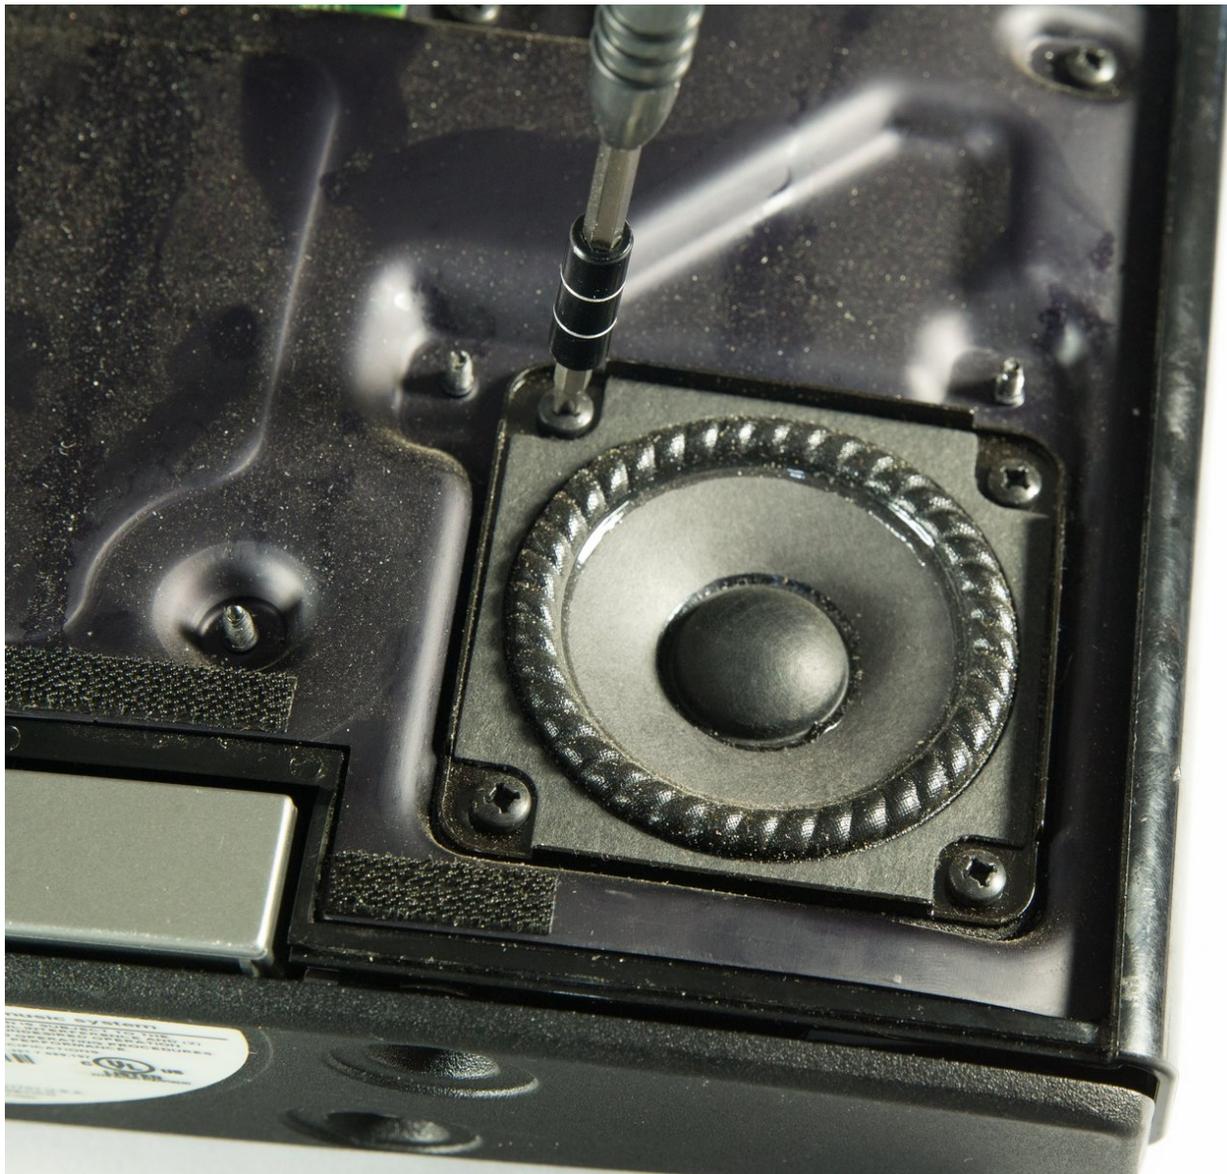

 **TOOLS:**


- Phillips #2 Screwdriver (1)
 - Metal Spudger (1)
-

Step 1 — Speaker

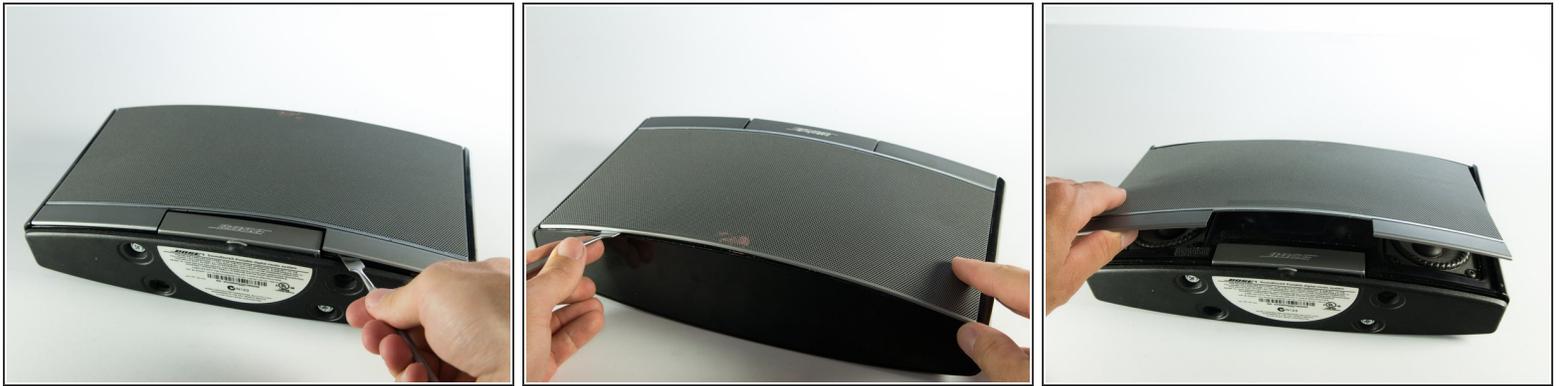

- Gently pry the front mesh cover off of the SoundDock using a metal spudger.
- ⓘ The mesh is held on by small velcro strips so if you hear a tearing sound it is just the velcro coming apart

Step 2

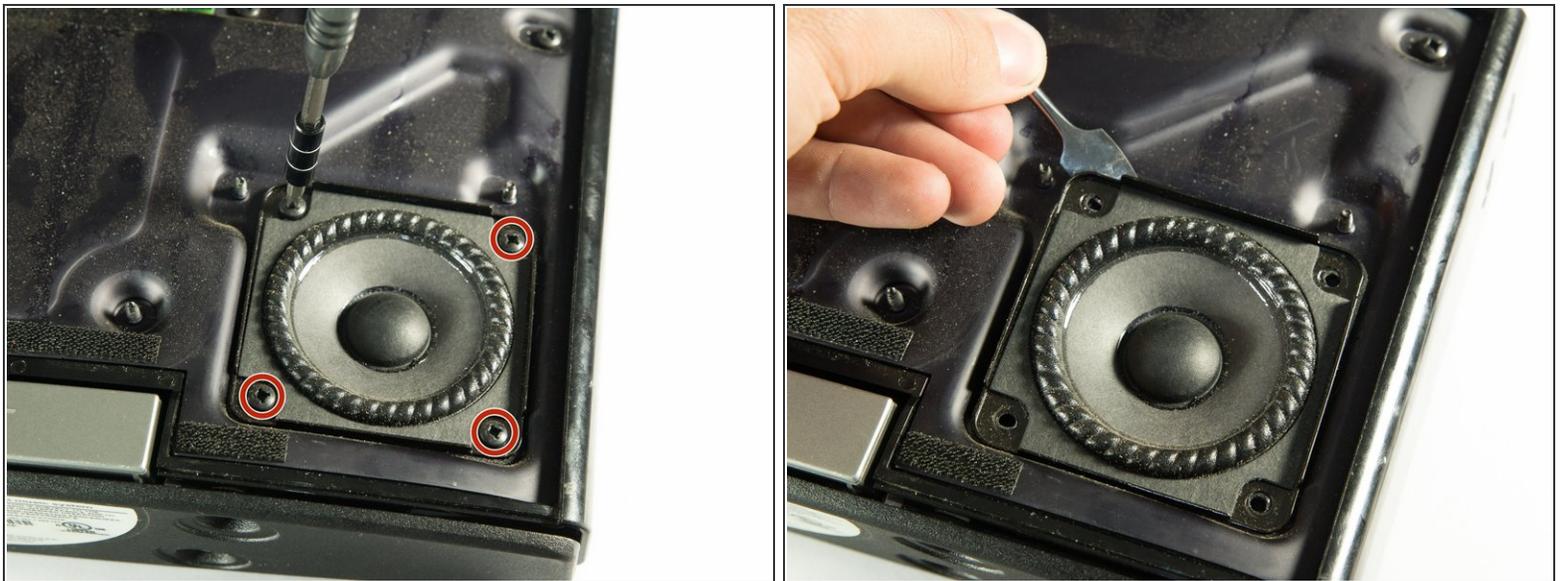

- Remove the four 16mm #2 screws holding the speaker to the base using a #2 screwdriver
- Gently lift the speaker from the base.
- ⚠ Do not lift the speaker too far out of the base, you may damage the wires.

Step 3



- You will notice 2 coils of wire around the speaker's input tabs. Slide these coils off as un-winding the wires may break the wires. Slide the coils around your new driver.

To reassemble your device, follow these instructions in reverse order.