

2011-2013 Scion tC Front Dome Light Replacement

How to replace the overhead lighting systems in the front of the cabin.

Written By: Nick d'Alencon



This document was generated on 2020-11-13 08:06:47 PM (MST).



• Dome light replacement bulb (1)

Step 1 — Front Dome Light



 Remove the plastic covering of the lights by pulling it down quickly from the windshield side.

Step 2




 Disconnect the plastic header from system by pressing inward on the side tabs.

Step 3



Turn blue knobs counter clockwise and pull to remove bulb housing.

Step 4

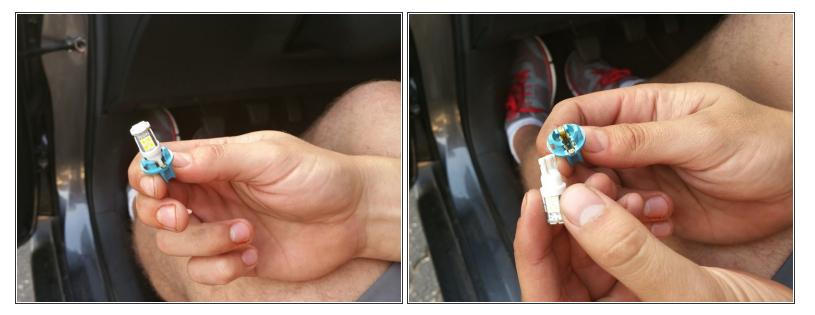

- Pull burnt bulb out of knob/housing.
- (i) When inserting the replacement, take note of the direction and polarity of the unit.

To reassemble the dome, follow these instructions in reverse order.