



HP ElitePad 900 Volume Control Buttons Replacement

Use this guide to replace the volume control...

Written By: Kyle Marques



INTRODUCTION

Use this guide to replace the volume control buttons in your HP ElitePad tablet (Model 900). If the buttons on your tablet are not working properly or seem to be getting jammed consistently, they may need to be replaced. The volume buttons control the volume within the device and function by being pressed on from the sides of the tablet. The functionality of these buttons should be able to move back and forth in order to increase or decrease volume. Volume control buttons that are unable to be pressed all the way down or feel loose or have no response when being pressed down need to be replaced. Before using this guide ensure that nothing is in the way of the buttons preventing them from working. Prior to beginning the process of replacing the buttons it is important that the device is fully turned off and disconnected from any external power sources.

TOOLS:

[Phillips #000 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Suction Handle](#) (1)

Step 1 — Front Panel Assembly




- Unscrew the two 2.8mm Phillips #000 screws near the power connector.

Step 2



- Use a suction cup to pull the display assembly up.

Step 3

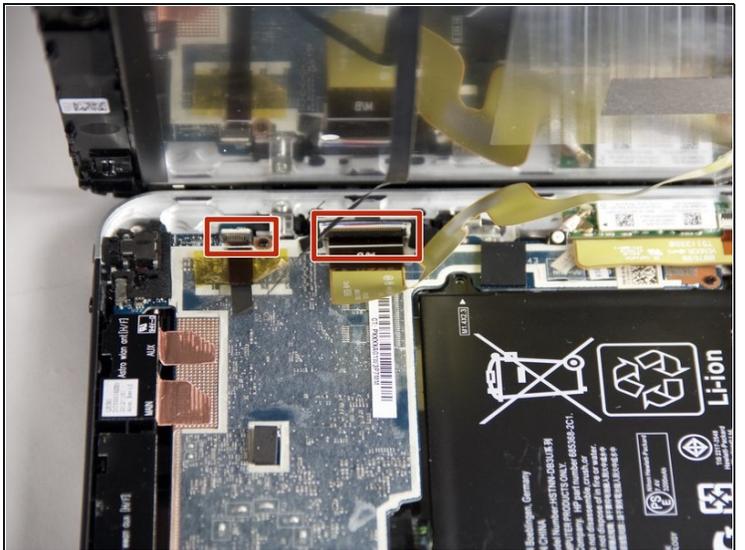

- Use the tip of a spudger to disconnect the two display [ZIF connectors](#).

Step 4 — Volume Control Buttons



- Using the Phillips screwdriver remove the two 2.4mm #000 screws that are securing the volume control buttons to the device.
- Lift up the silver panel, removing it completely from the device
- Push the buttons through the slot to remove them from the device

To reassemble your device, follow these instructions in reverse order.