



Amazon Fire Phone Headphone Jack Replacement

This guide shows you how to replace the headphone jack of the Amazon Fire Phone

Written By: Savannah Moen



INTRODUCTION




Use this guide to learn how to replace the headphone jack at the top of the back of the phone

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Suction Handle](#) (1)
 - [T3 Torx Screwdriver](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Front Panel Assembly



-  If the display is damaged use clear packing tape to contain any glass shards.
-  Make sure the entire surface of the display is covered with tape.
-  Wear safety glasses to protect your eyes.

Step 2 — Preparation for Opening

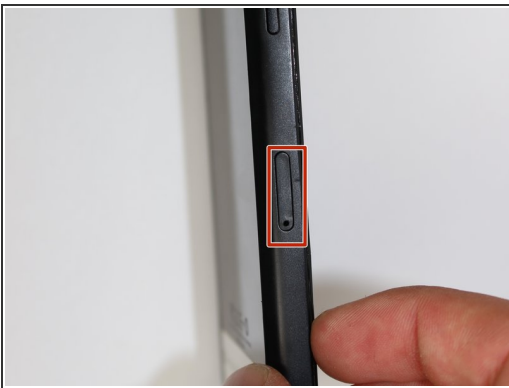


- Power off your phone.
- Remove the sim card from the left side of the phone by pressing the small hole and allowing it to eject using the 0.8 screwdriver head.
- Remove the two 4mm screws on the bottom of the phone using the Torx T3 screwdriver.

Step 3 — Manual Opening



- Press the single suction cup just above the home button.
 - While lifting up on the suction cup place the plastic opening tool at the rim of the screen, separating the screen from the back casing.
- ⚠ Carefully separate the two halves to avoid tearing the volume rocker ribbon cable.
- Using the opening tool, disconnect the volume rocker ribbon cable from the base of the phone, freeing the two halves.

Step 4

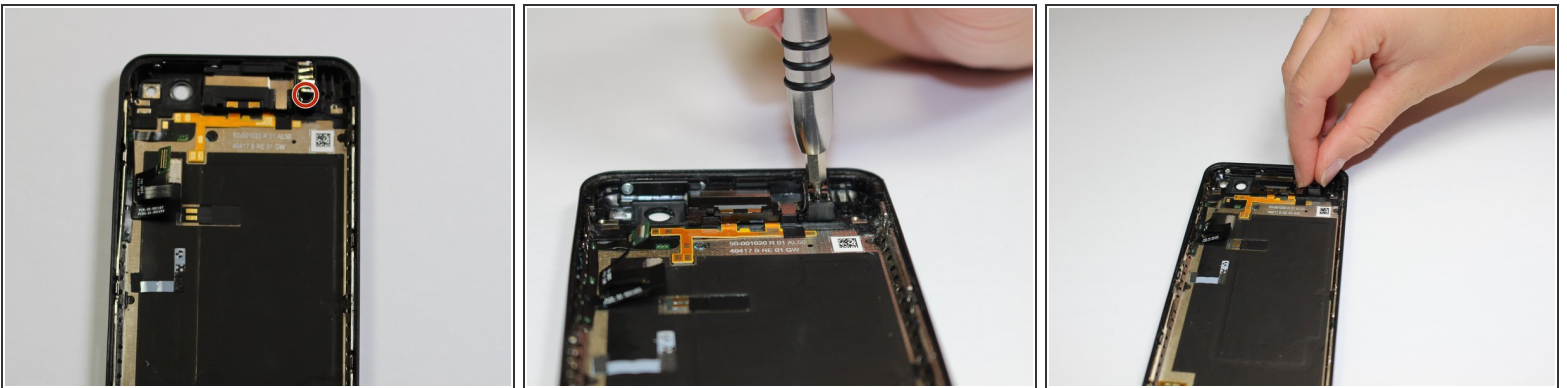

- Remove the 1mm screw concealed in the headphone jack.
- Afterwards the headphone jack will easily pop off.

To reassemble your device, follow these instructions in reverse order.

