



# Samsung Galaxy Tab E 9.6 Verizon Back Camera Replacement

Replace your back camera to have one clear photograph.

Written By: Tingting Liu



---

## INTRODUCTION


The camera in a phone or a tablet is easy to damage if it is dropped. So this guide highlights how to remove the back cover of the tablet in order to replace the back camera.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Suction Handle](#) (1)
-

## Step 1 — Back Camera

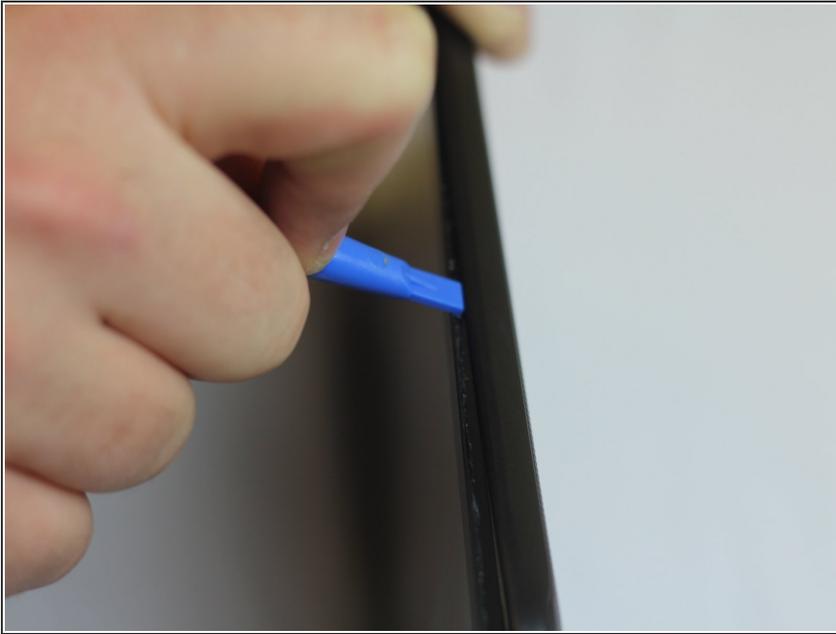



- ⚠ Make sure the device is turned off.
- Using the plastic opening tool, start in the center and wedge the angled tip between the plastic back and the screen.
- Try to pressure it, wedge it back and forth.
- ⚠ Do not wedge the plastic opening tool directly on top of the power buttons and headphone buttons.

## Step 2

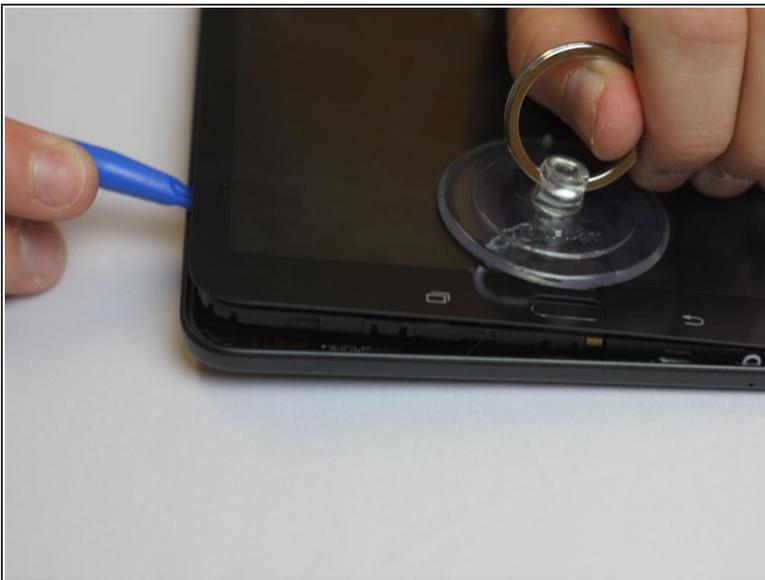


- Once the bottom edge has been loosened, use the suction tool to pull it.
- The second picture shows the internal portion of the tablet once the back cover is removed.

### Step 3

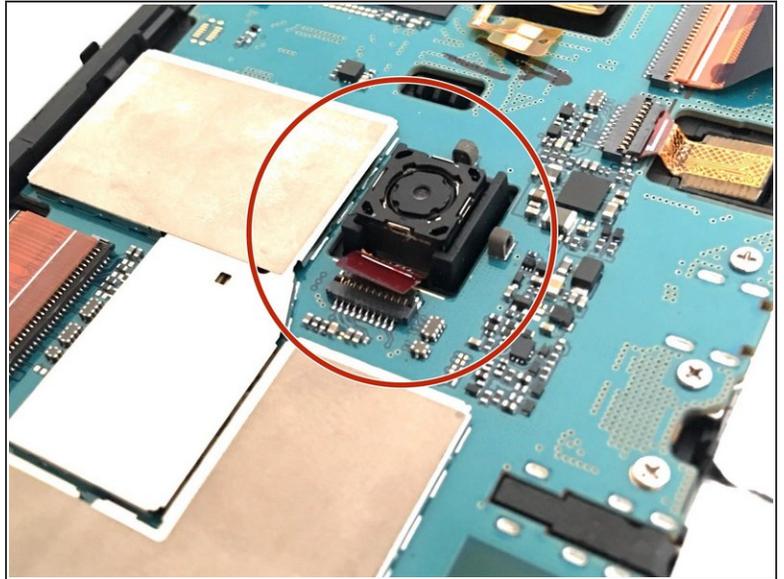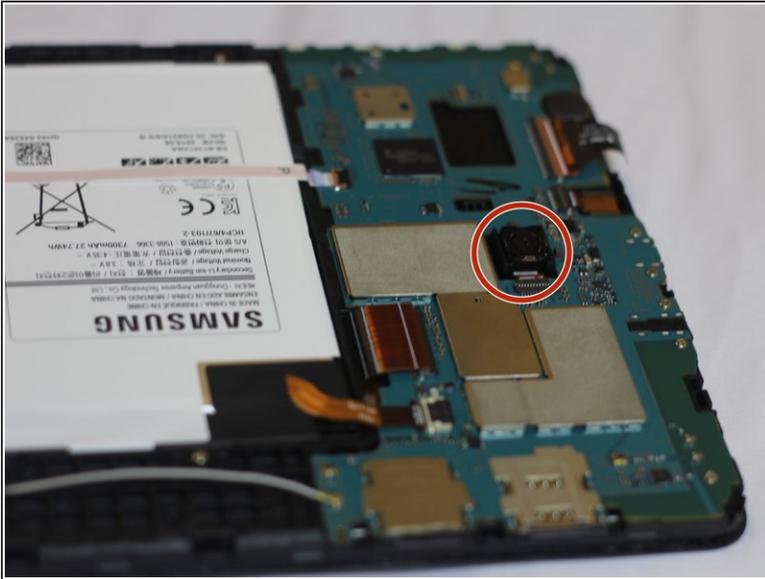

- The first picture shows the location of back camera.
- Disconnect the rectangular connection from the back camera to the motherboard.

### Step 4

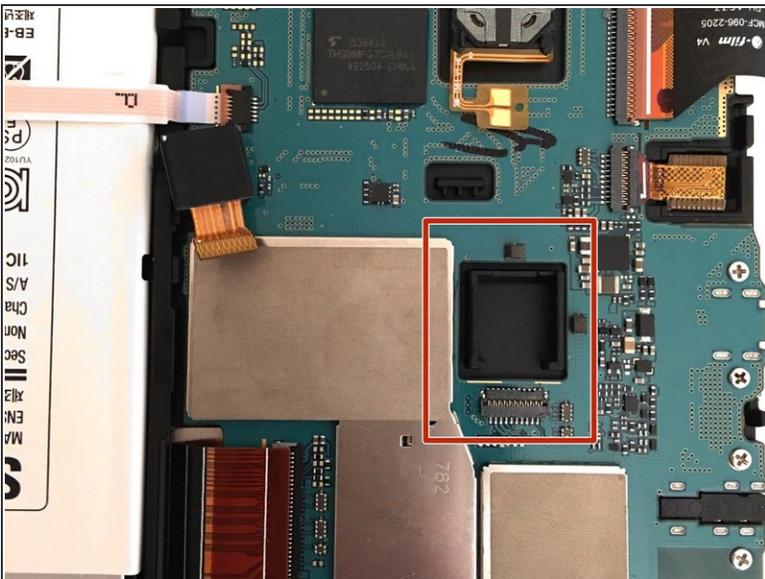

- The picture illustrates what the device should look like once the back camera is removed.

To reassemble your device, follow these instructions in reverse order.