




Samsung Galaxy Tab E 9.6 Verizon Speaker Replacement

This guide will walk you through replacing the...

Written By: Dave Dorzback

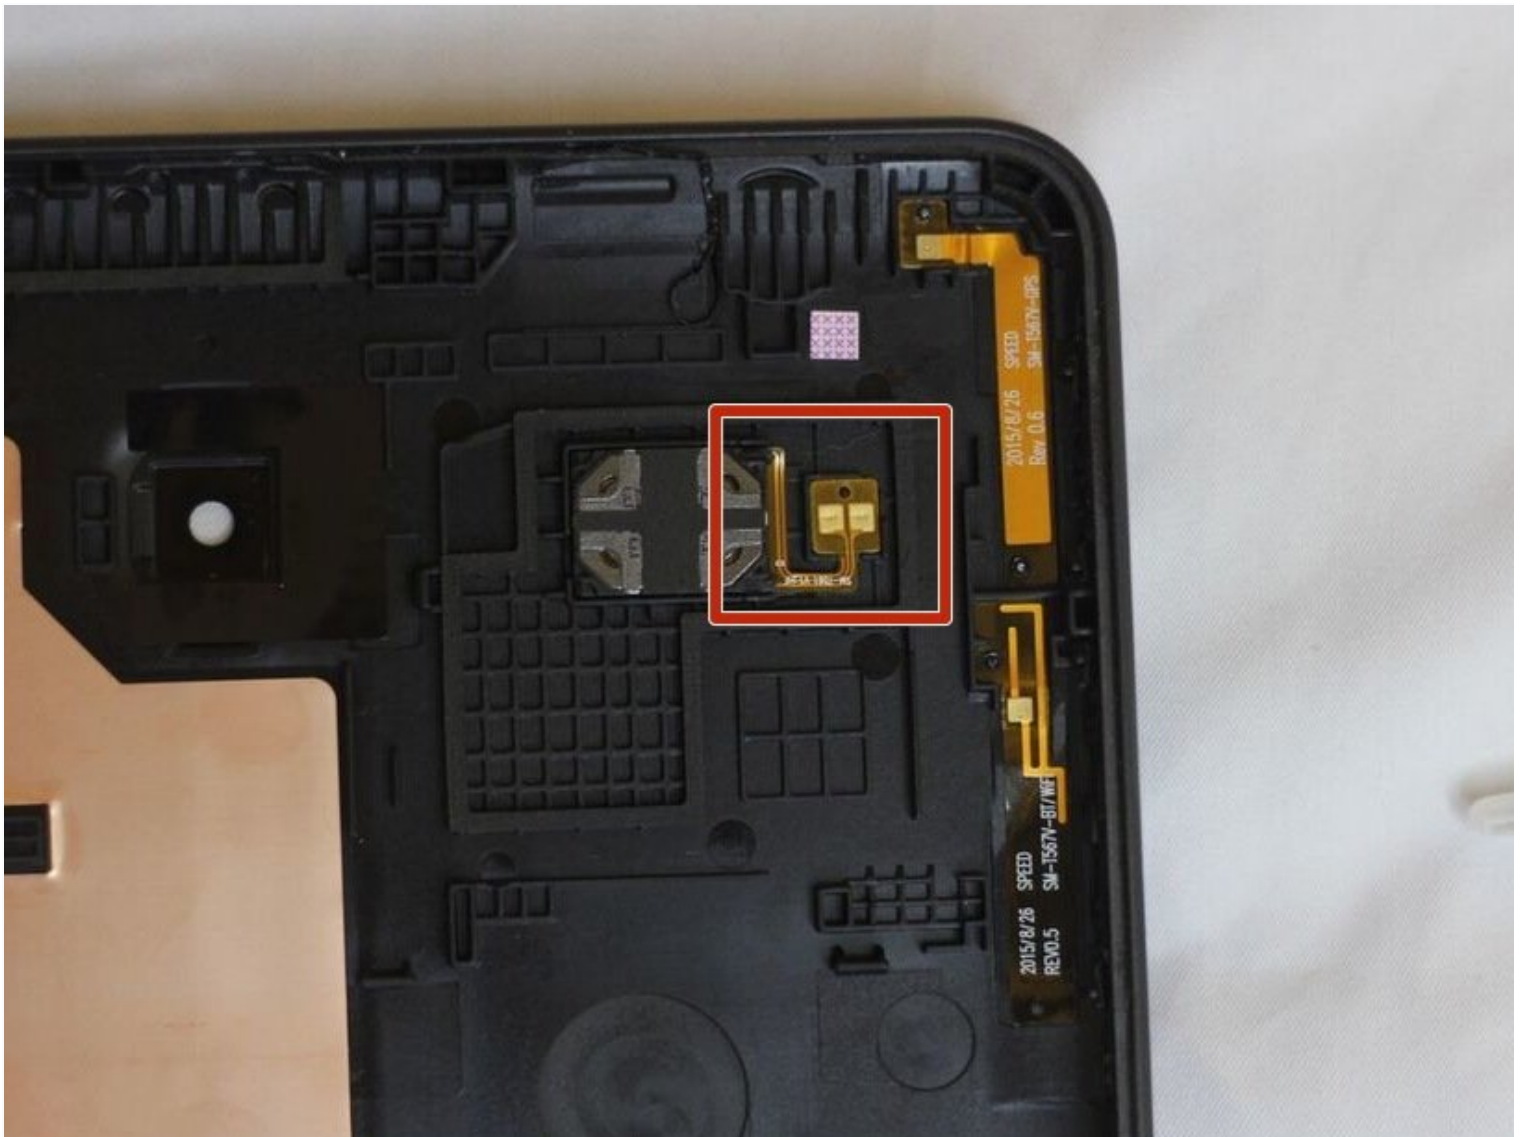

INTRODUCTION

This guide will walk you through replacing the speaker on the Samsung Galaxy Tab E.

TOOLS:


[Suction Handle](#) (1)

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Back Casing






 Remove any micro-SD or SIM cards before continuing.

 Verify your device is turned OFF.


 Disconnect all external devices from your tablet.

Step 2

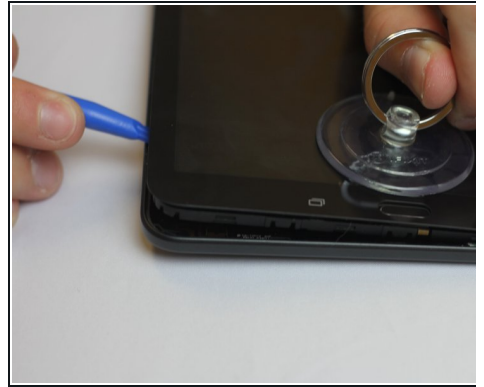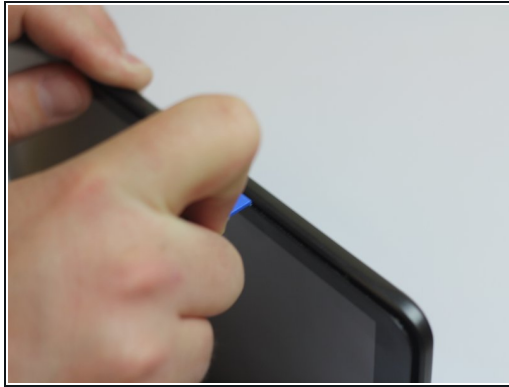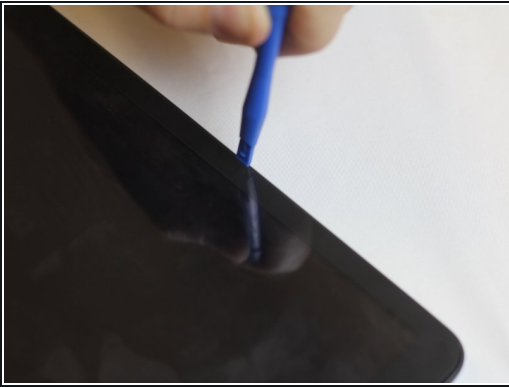



- Insert the plastic opening tool by wedging it between the device's screen and back cover.
 - Move the plastic tool around the edges of the device to undo the plastic lips holding the casing together.
- i** This step may require more force than expected. If difficult, try using a suction cup on the screen.

Step 3

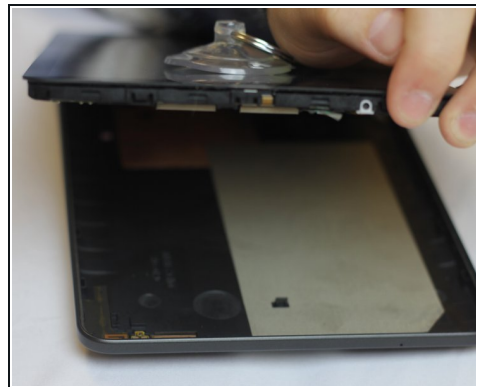


- This process will become easier as more clips are separated.
 - Use your hands to gently pull the back cover off the device after about half of the clips are separated.
- ★** A suction cup can be used in this step as well to assist in pulling the device apart.

Step 4 — Speaker

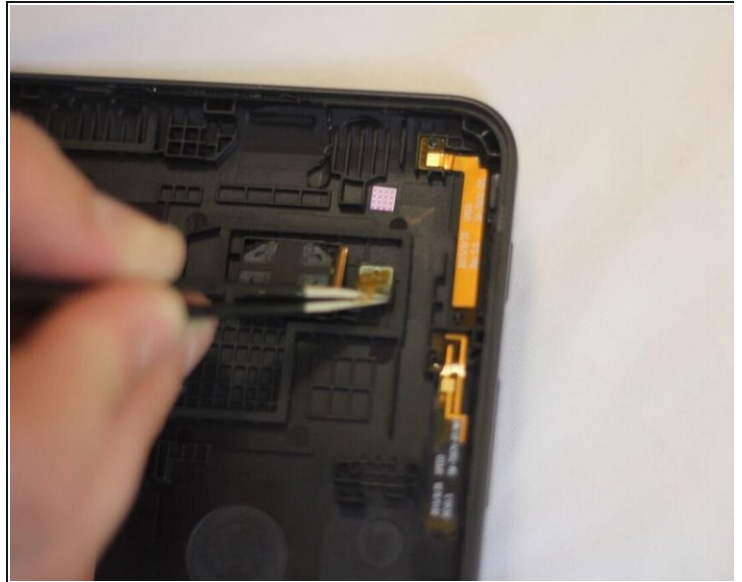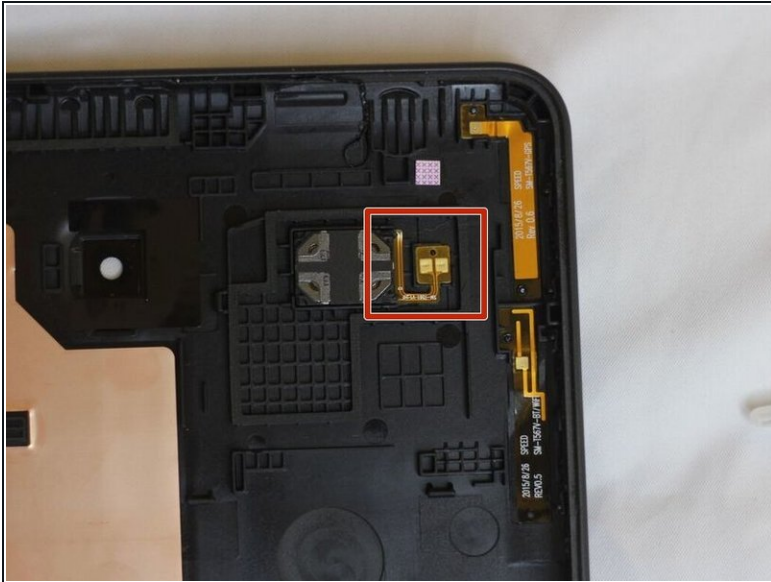

- Locate the speaker in the top right corner of the back casing. Use a pair of tweezers to pull peel up the film connecting the speaker to the case.

Step 5

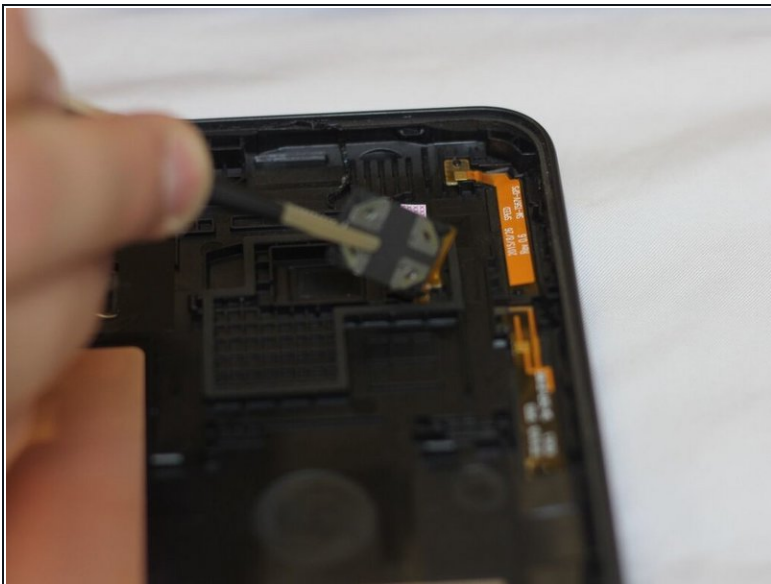

- Once you've detached the film connecting the speaker to the case, use the tweezers to remove the speaker completely.

To reassemble your device, follow these instructions in reverse order.