


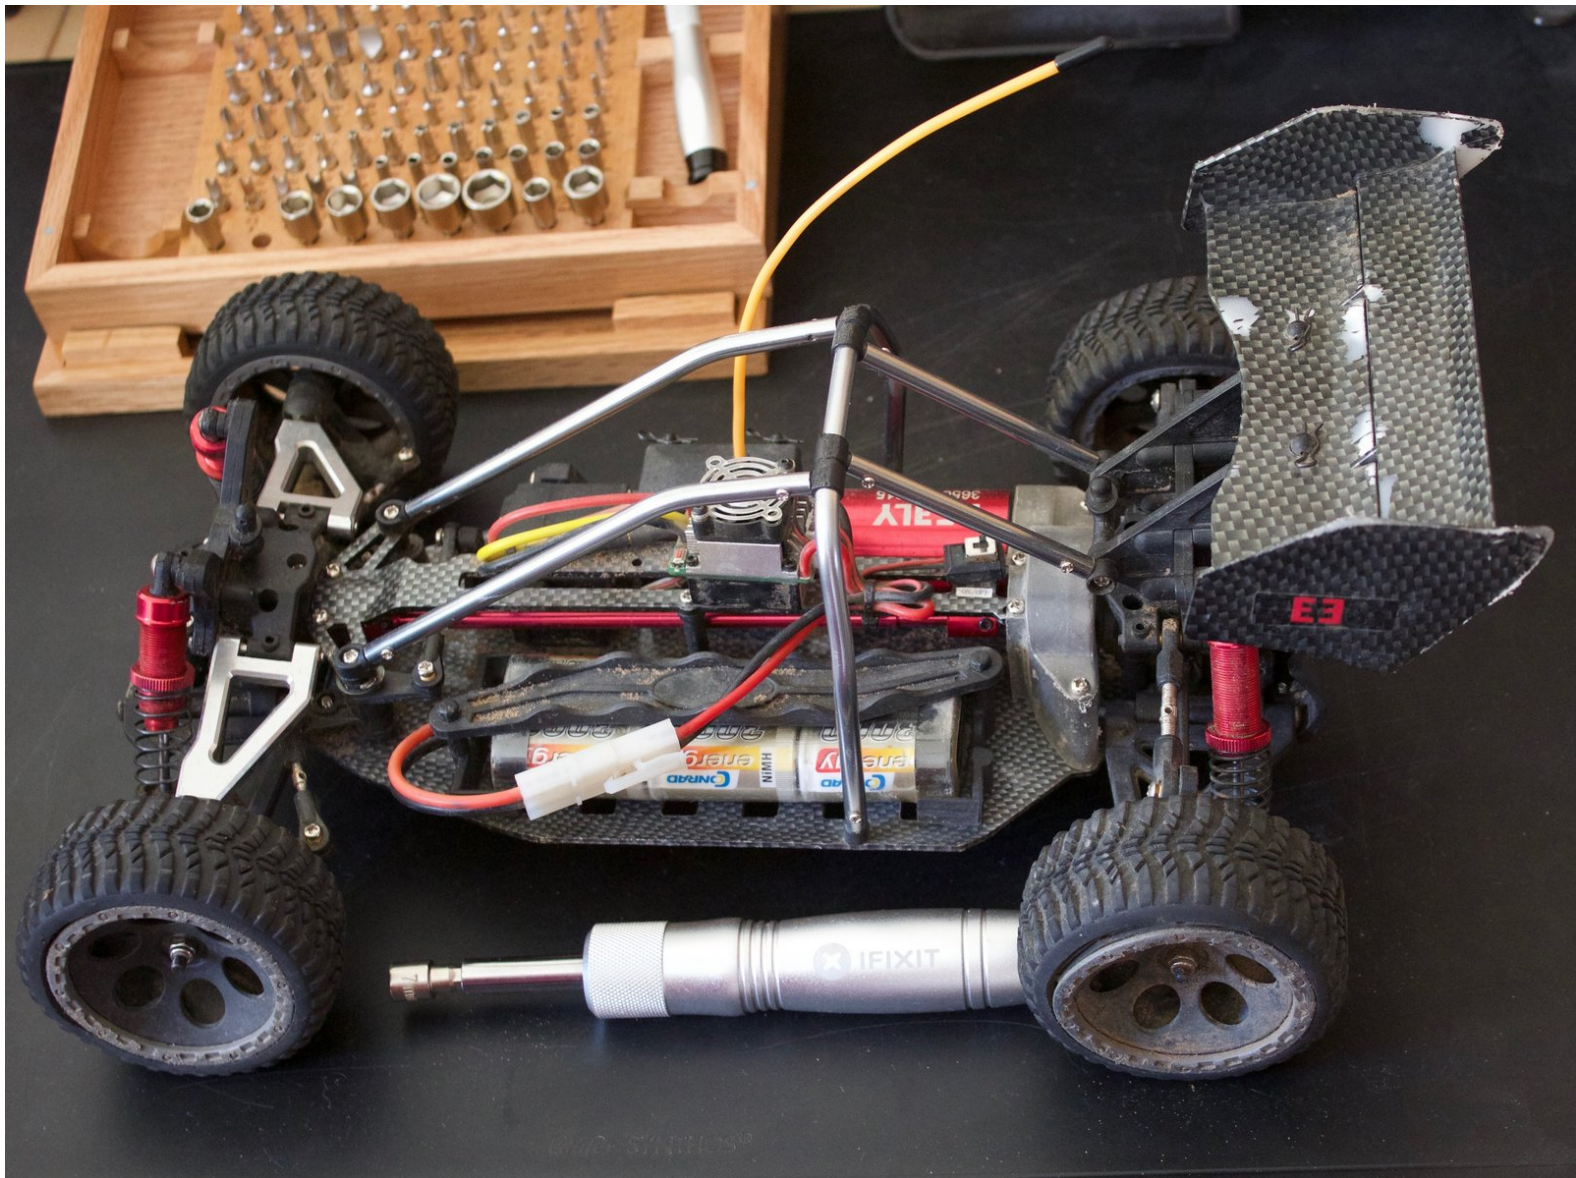

Reely Carbon Fighter Brushless Replacing the wheels

This guide will show you how to replace the wheels.

Written By: Leonard Kesting



INTRODUCTION

The replacement of the wheels is necessary if no profile is available, or they dissolve into their individual parts, which unfortunately occurs more often in the standard tires. The above-linked spare parts are the original wheels, which I would advise against because of the lower quality. It should fit all current 1:10 wheels.



TOOLS:



- [7 mm Nutdriver](#) (1)



PARTS:


- [New Item](#) (1)
standart Bereifung

Step 1 — bikes

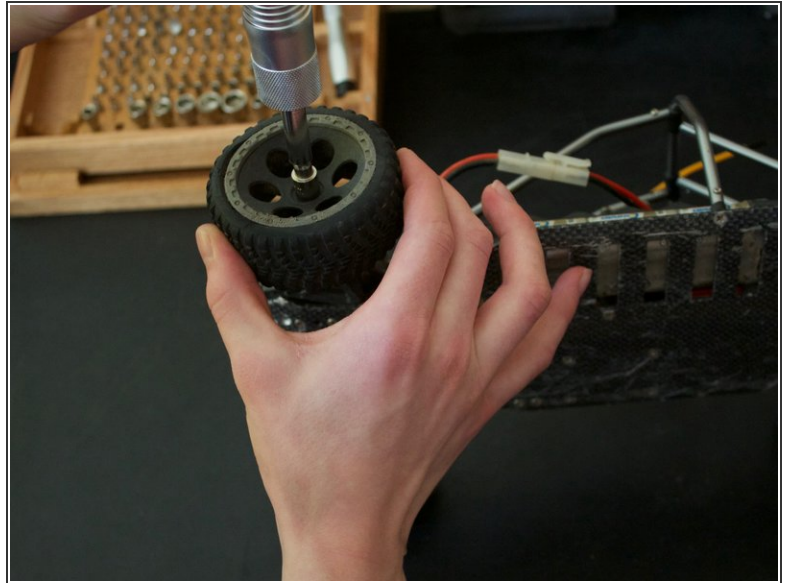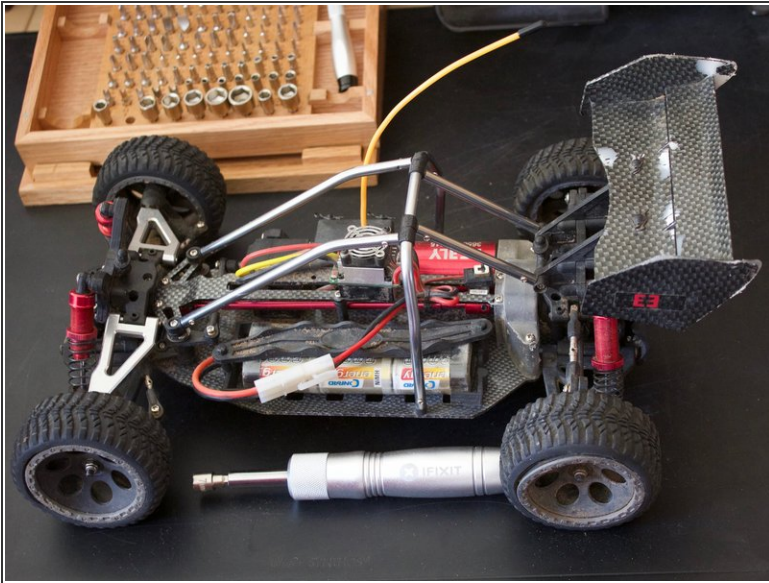


- Put the 7mm nut ready (spanner or combination wrench may turn out to be unsuitable)
- Put the car upright

Step 2

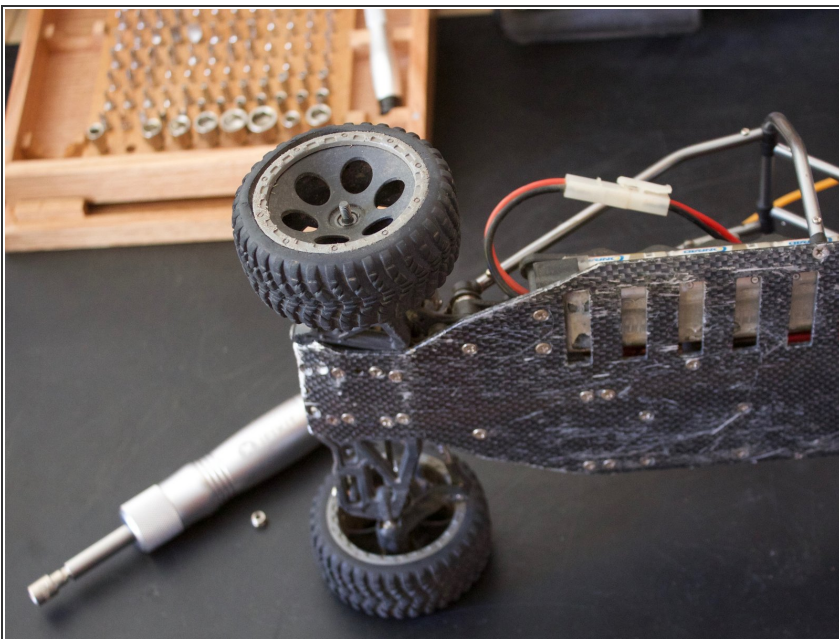

- Loosen the nut (standard right-hand thread)

Step 3

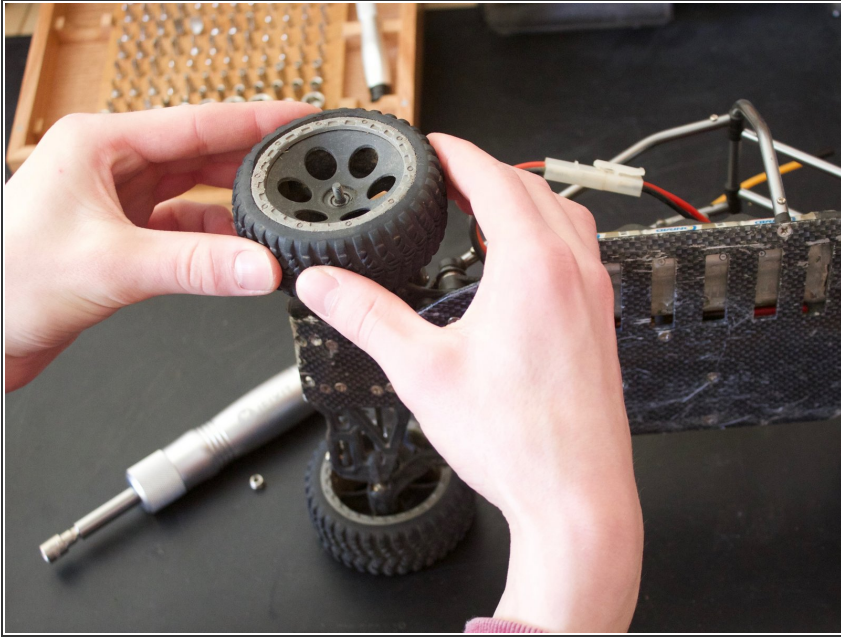

- Pull off the wheel

reverse the steps to reassemble your device.