



HP Compaq Presario CQ56-110US RAM Replacement

Use this guide to replace the RAM stick on your HP Compaq Presario CQ56-110US laptop. Your laptop runs slowly or lags.

Written By: Jorge Villarreal



This document was generated on 2020-11-28 05:43:29 AM (MST).

INTRODUCTION

Use this guide to replace the RAM stick. If your computer freezes up momentarily while running several programs, this may be the guide for you.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — RAM




- Ensure the laptop is unplugged and completely powered off. Loosen the three small screws using a #1 Phillips screwdriver.
- ⓘ The screws do not come free from the panel. They only need to be loosened enough so the panel can be lifted/pried.

Step 2




- Carefully pry the panel up using a plastic opening tool.
- Pull the panel away from the laptop and set it off to the side.

Step 3

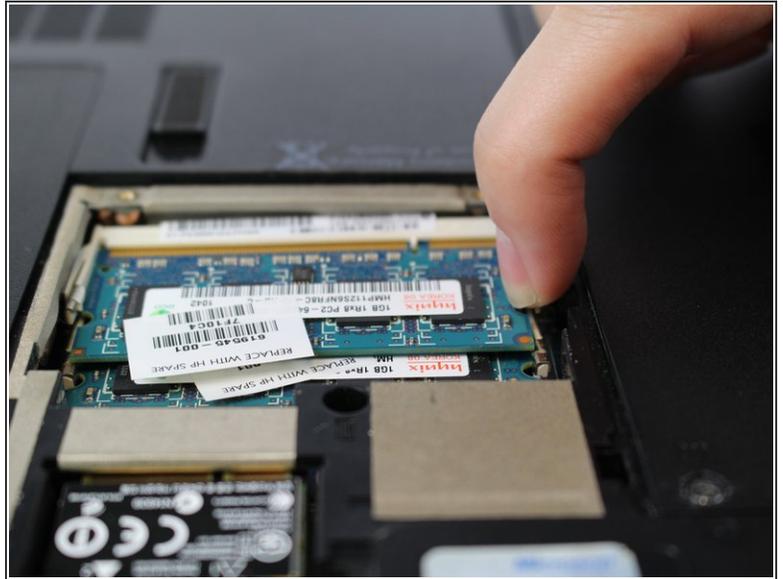

- Locate the latches on the RAM
- Push the latches away from the RAM

Step 4

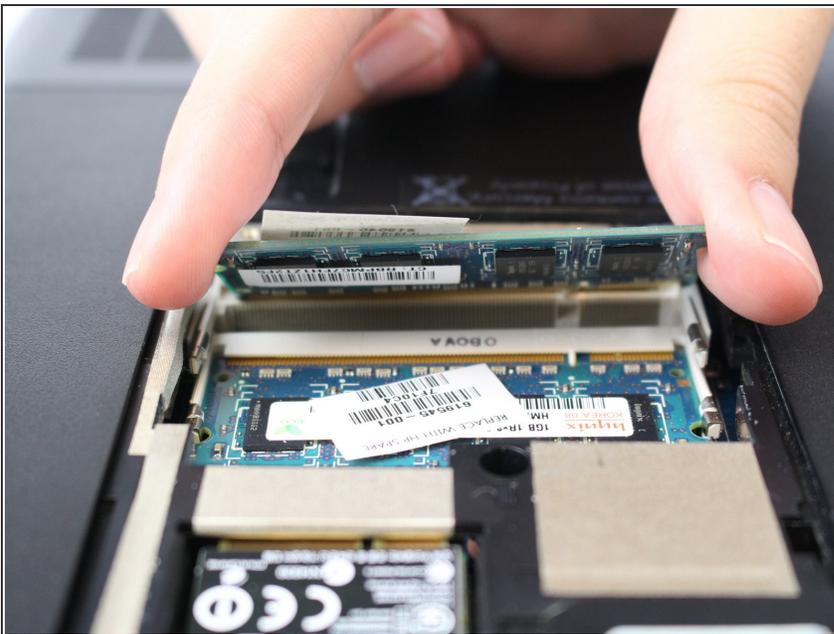

- Carefully pry the RAM upwards
- Remove the RAM

To reassemble your device, follow these instructions in reverse order.