



Protocol Slipstream EVO Propeller Guards Replacement

Replacing Propeller Guards on the Slipstream EVO

Written By: Michael Dang



**TOOLS:**

- [iFixit Opening Tools](#) (1)

**PARTS:**



- [Propeller Blade Guards](#) (1)

Step 1 — Propeller Guards





- With the drone flat on the ground, identify which propeller guard you will be replacing.
- ⓘ The front of the drone is where there are no wires exposed.

Step 2

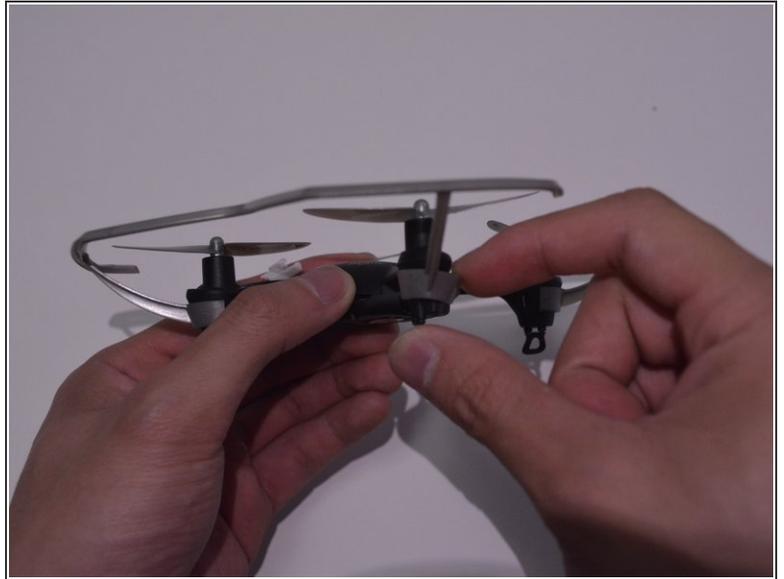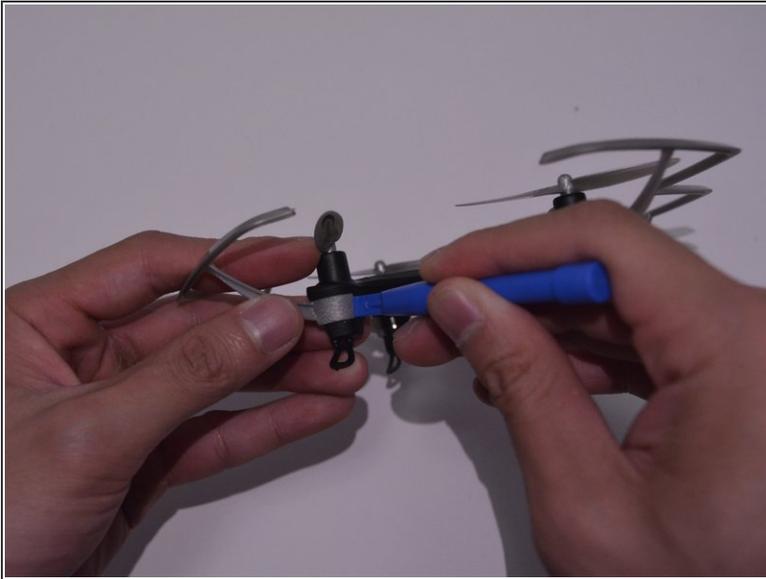

- With the plastic opening tool, pry the side of the guard closest to the front or the back of the drone depending on where you decided to start from.
- After prying off one side of the guard, pushing down on the same side will release the other side of the clip.
- ⓘ Repeat this step for the following side as needed.

Step 3

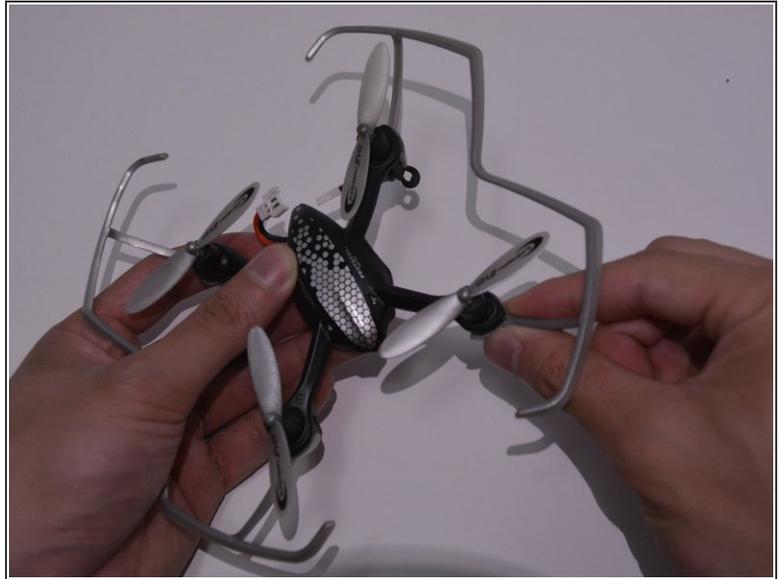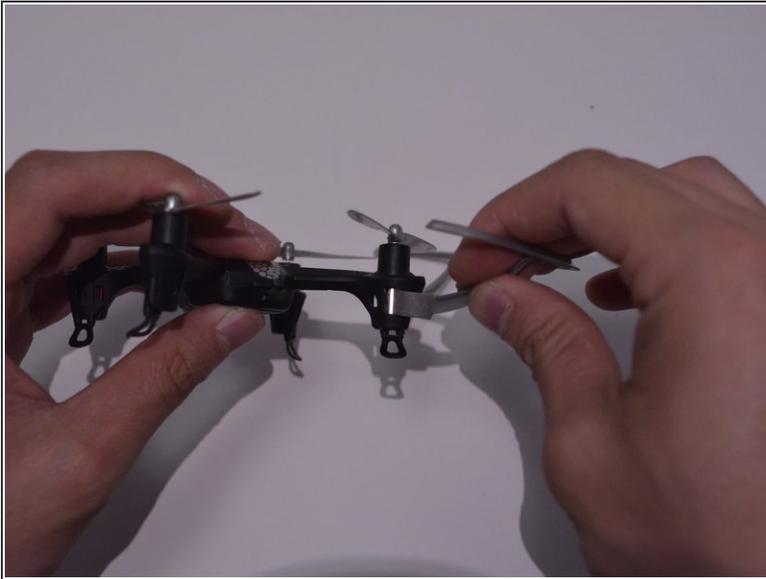

- With the replacement guard line up the clips and push the clips into place.
- After the guard has been attached to the drone, pinch the clips as you push the guards to ensure they are secured.

To reassemble your device, follow these instructions in reverse order.