



Astro A40 TR Plus Mixamp M80 Wires in speaker Replacement

Written By: Yang Li



TOOLS:

[iFixit Opening Tool](#) (1)



[J1 Screwdriver Bit](#) (1)

[Phillips #000 Screwdriver](#) (1)

[Spudger](#) (1)

Step 1 — Ear Cushions



- Use your hand to firmly grasp the cushion and remove it from the speaker.
 - Repeat the process for the other side if needed.
-  The best place to grip it is where there is a tab sticking out. The tab will make it easier to remove.
-  When reassembling, note the curvature of the cushion to determine whether it's the left or the right cushion.

Step 2 — Motherboard




- Slide the plastic spudger beneath the dust cover of the speaker.
- Lift the dust cover up with the plastic spudger.
- Using your fingers, completely remove the dust cover from the speaker.

Step 3



- Remove four 5 mm screws from the speaker protector using a JIS #1 screwdriver.
- Use your hands to remove the speaker protector.

Step 4

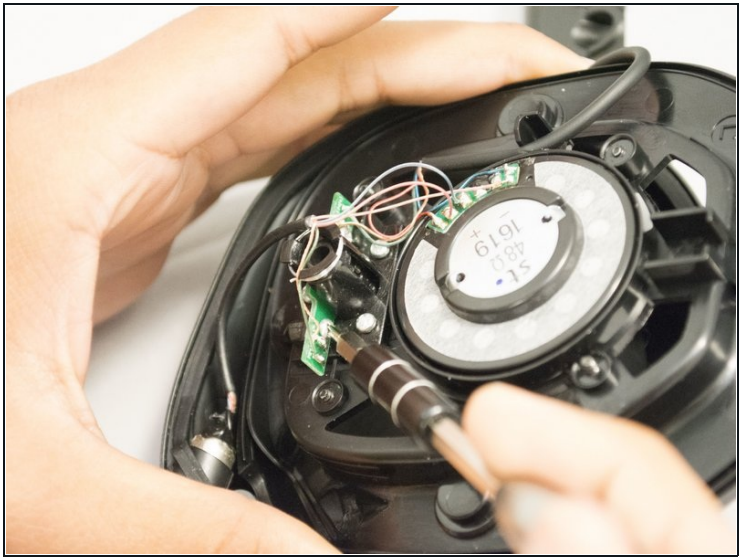

- Remove the two 2 mm long screws securing the motherboard using a Phillips #000 screwdriver.

Step 5



- Use your fingers to hold the wire located by the covered part and gently lift it out of its cradle.
- Carefully use your fingers to disconnect the colored wires connected to the motherboard.
- ☑ If replacing the wires, ensure you carefully disconnect the remaining colored wires to replace them with new standard wires.

Step 6 — Wires in speaker



- Use your fingers to remove the black wire from your headphones.

To reassemble your device, follow these instructions in reverse order.