


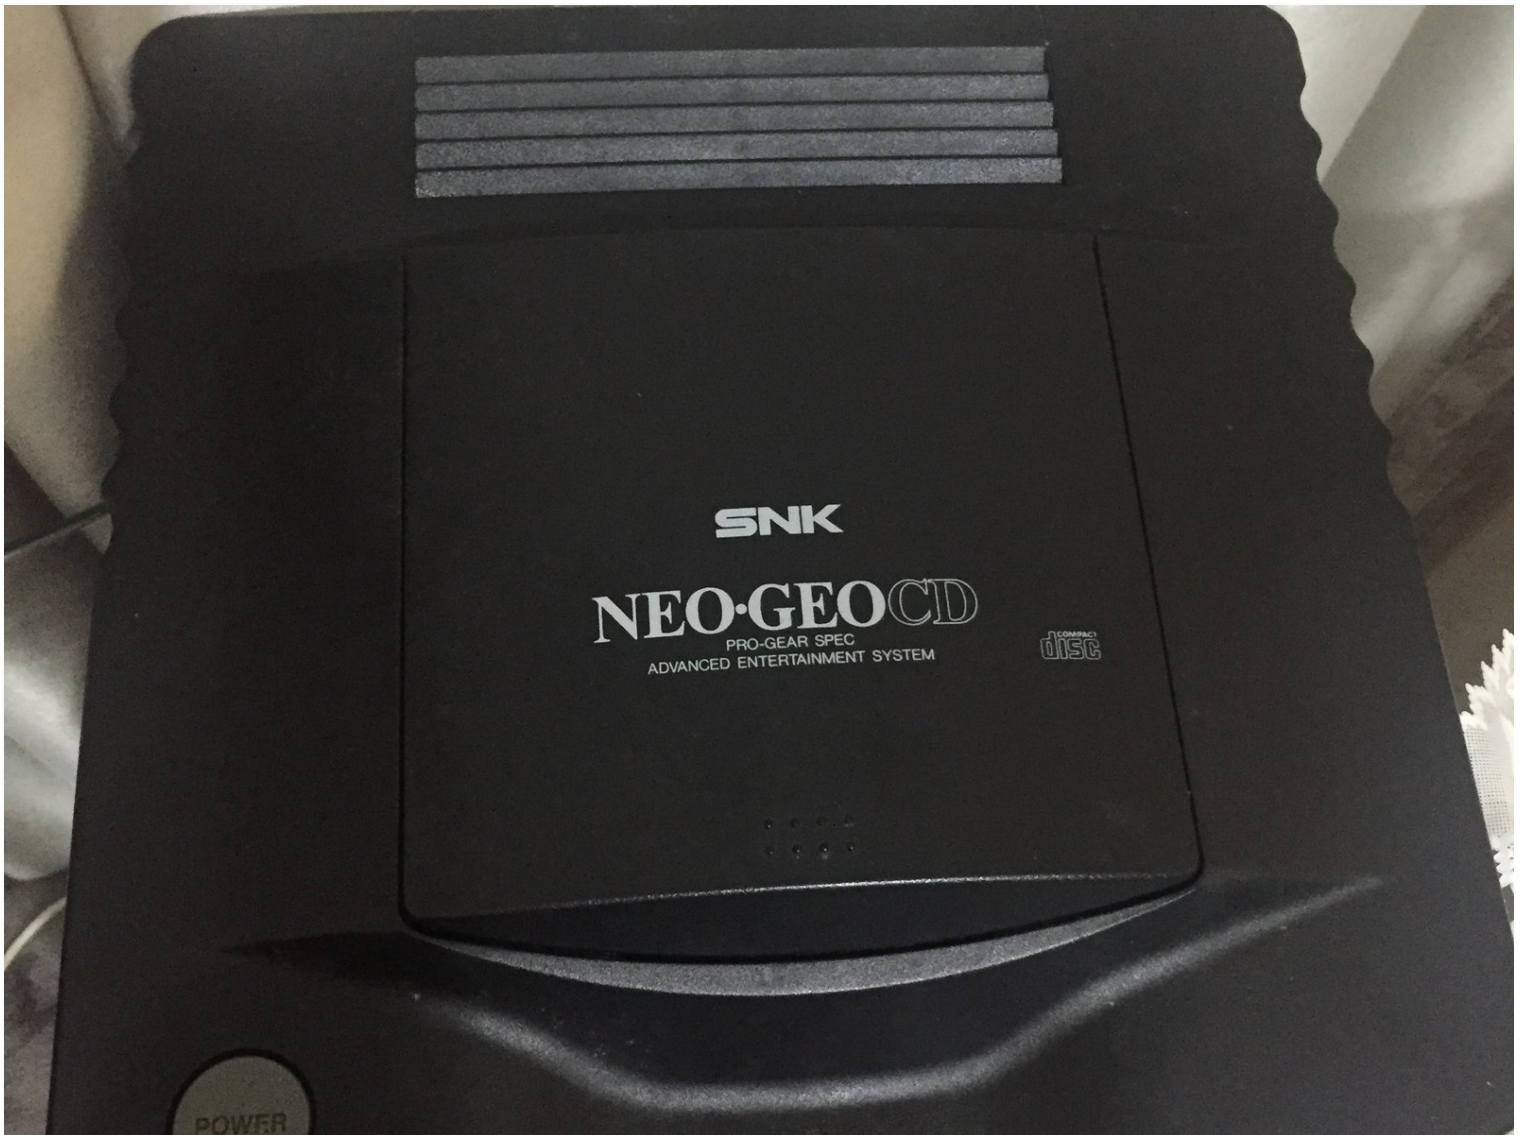

SNK Neo Geo CD Teardown

The Neo Geo CD was first unveiled at the 1994...

Written By: Everton Nascimento



INTRODUCTION

The Neo Geo CD was first unveiled at the 1994 Tokyo Toy Show.[6] The console uses the same CPU set-up as the arcade and cartridge-based Neo Geo systems, facilitating conversions, and SNK stated that they planned to release Neo Geo CD versions of every Neo Geo game still in the arcades.[7]



Three versions of the Neo Geo CD were released:

A front-loading version, only distributed in Japan, with 25,000 total units built.

A top-loading version, marketed worldwide, as the most common model.



The Neo Geo CDZ, an upgraded, faster-loading version, released in Japan only.

Step 1 — SNK Neo Geo CD

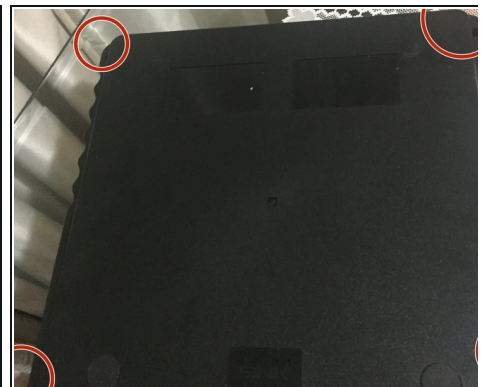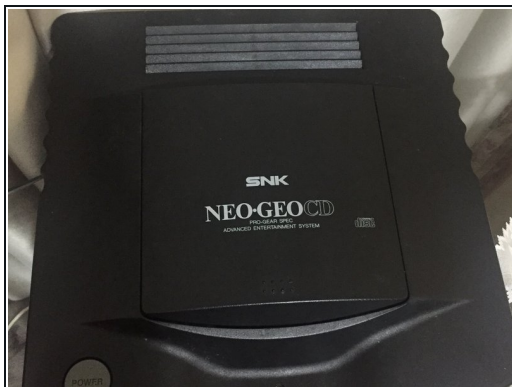




- SNK NEO GEO CD (1994-1995)

Step 2 — Top Case

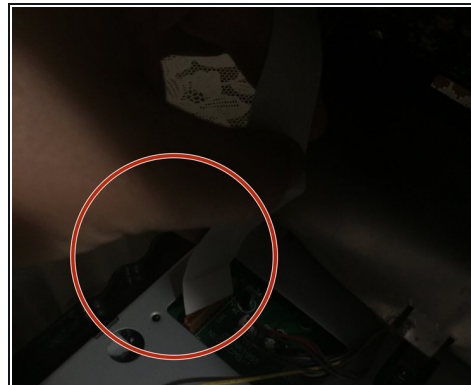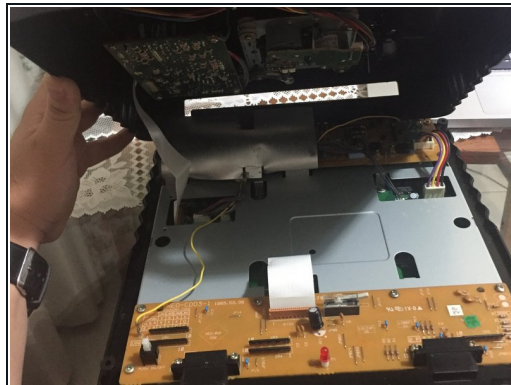



- Top case

Step 3 — step 3

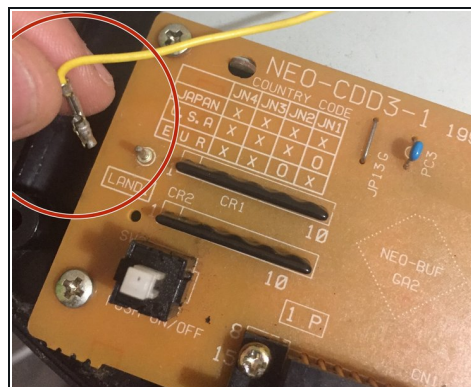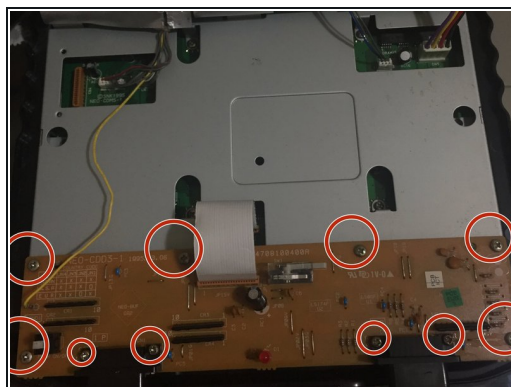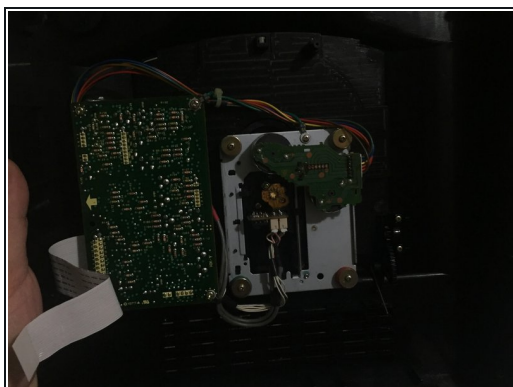



- Remove 10 screw

Step 4 — ste 4

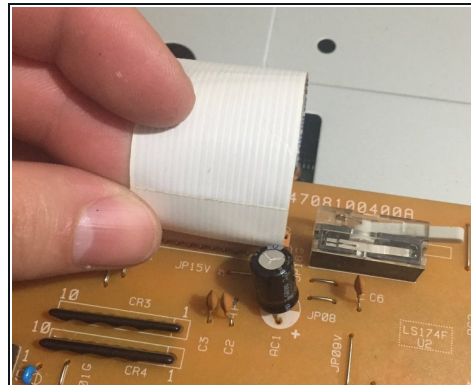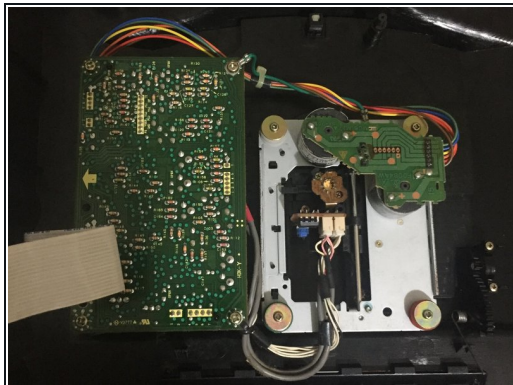



- Inserir instruções aqui.

Step 5 — step 5

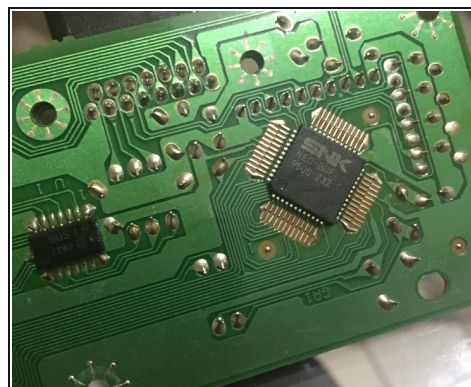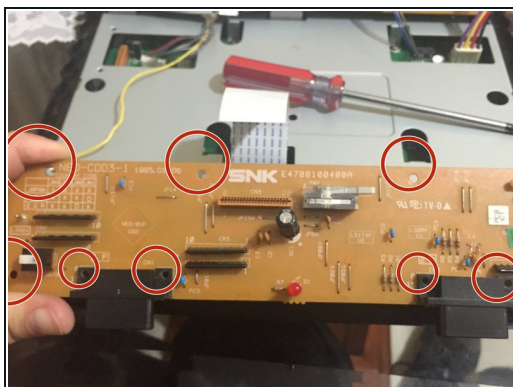


- Inserir instruções aqui.

Step 6 — step 6

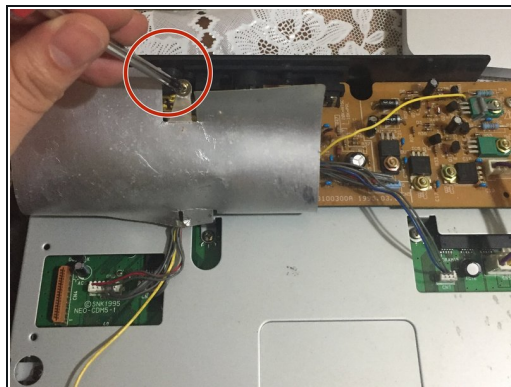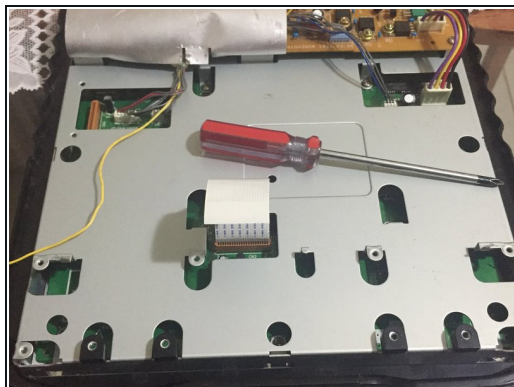




- Inserir instruções aqui.

Step 7 — step 7

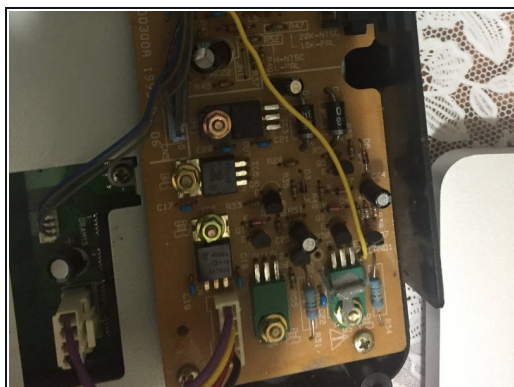



- Inserir instruções aqui.

Step 8 — step 8

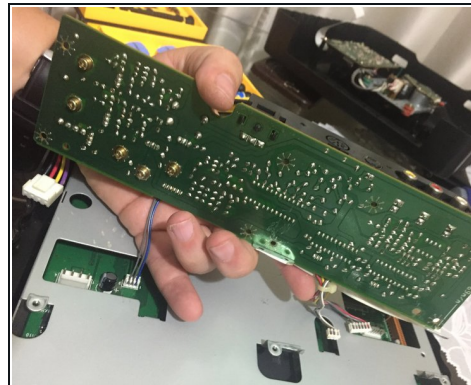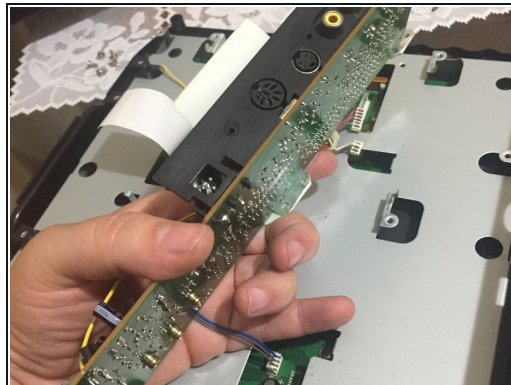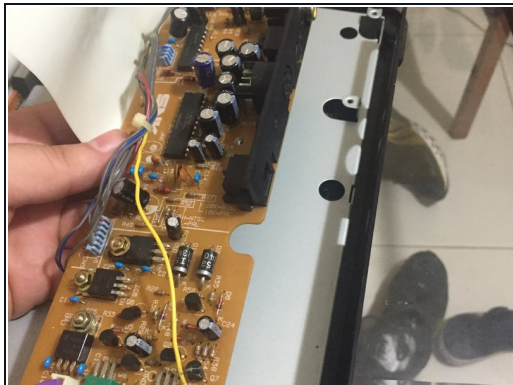


- Inserir instruções aqui.

Step 9 — step 9

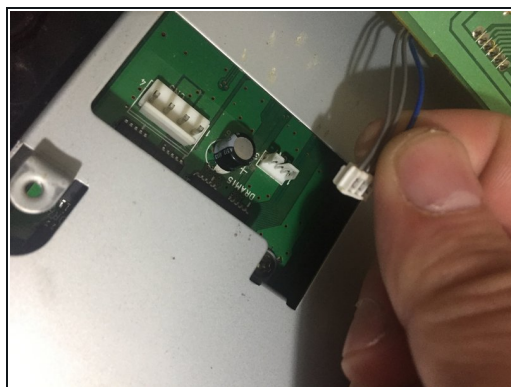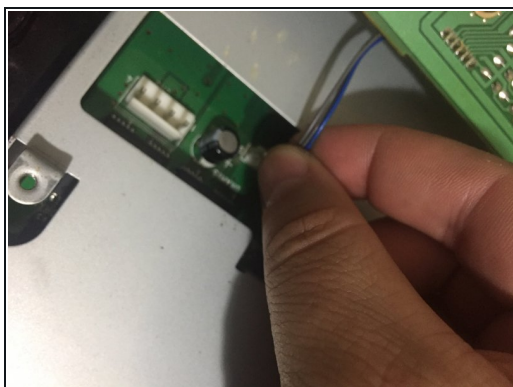



- Inserir instruções aqui.

Step 10 — step 10

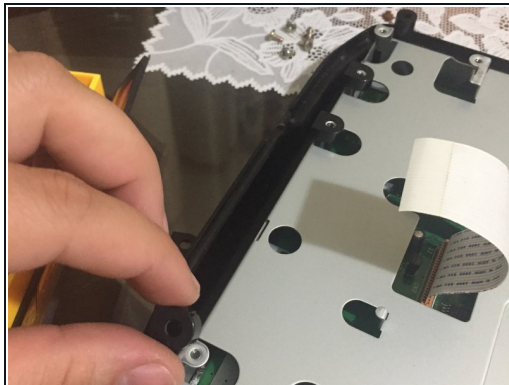


- Inserir instruções aqui.

Step 11 — step 11

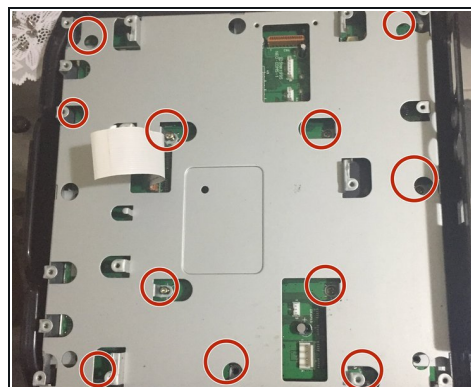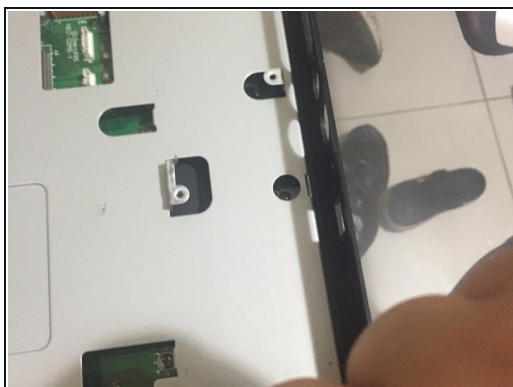


- Inserir instruções aqui.

Step 12 — step 12

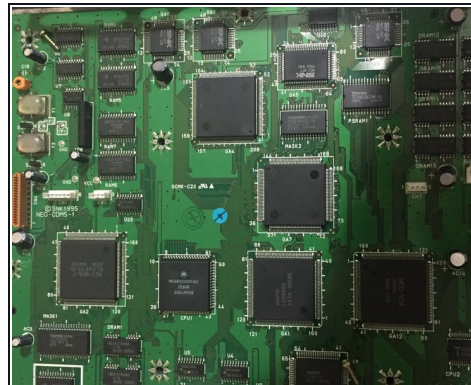




- Inserir instruções aqui.

Step 13 — step 13

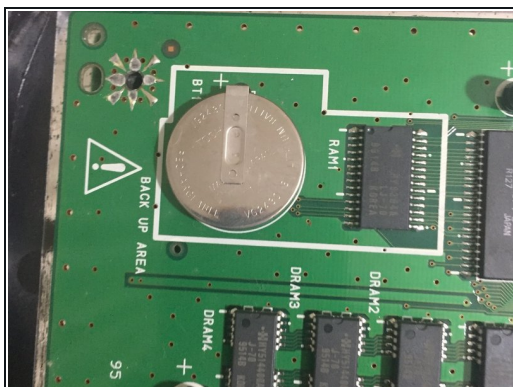


- Battery

Step 14 — step 14

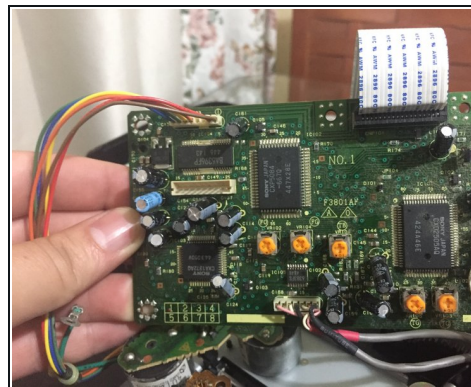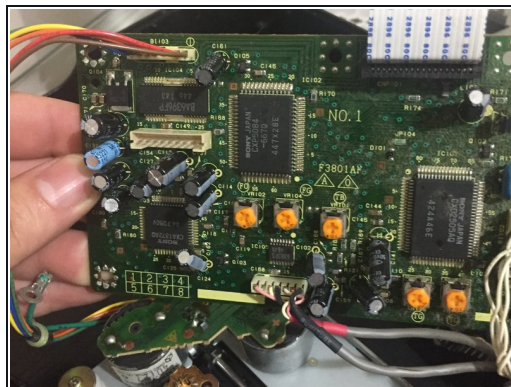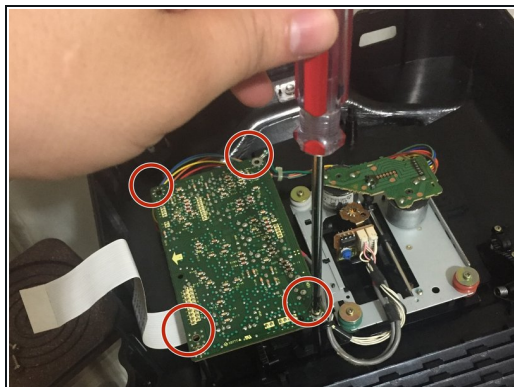

- CD ROM

Step 15 — step 15

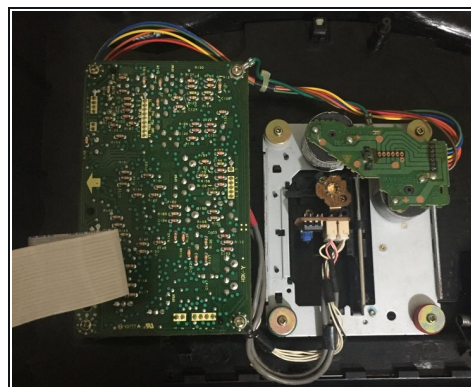

- Inserir instruções aqui.

Para remontagem de seu dispositivo, siga estas instruções na ordem inversa.