


Bissell Bolt ION 2-in-1 Cordless Release Button Replacement

This guide will provide instructions on how to replace the release button.

Written By: Valeria Soto

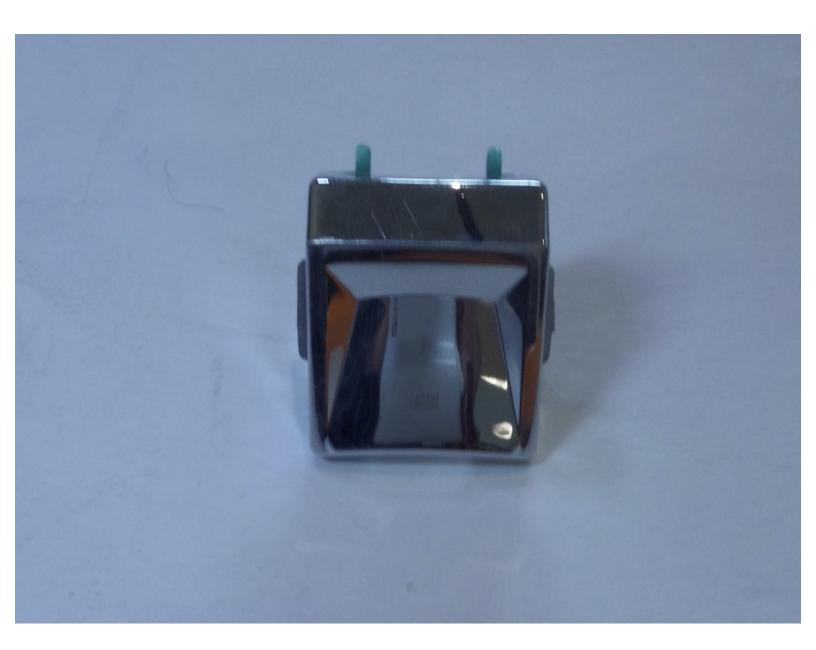

This document was generated on 2020-11-27 06:30:22 PM (MST).

INTRODUCTION


This guide will provide steps on how to replace the release button.



TOOLS:

- Phillips #2 Screwdriver (1)
- Metal Spudger (1)

Step 1 — Release Button

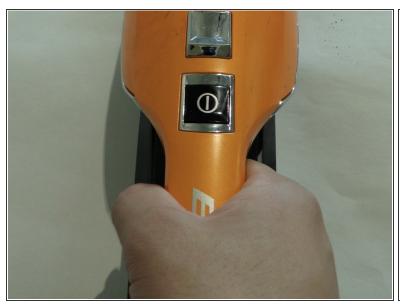



- Grab the handle of the handheld vacuum.
- With great force, remove the handheld vacuum from the entire unit.

Step 2






- Remove the two 4.4cm screws using the 2.0 screw.
- Remove the two 4.4cm screws using the 2.0 screw.

Step 3






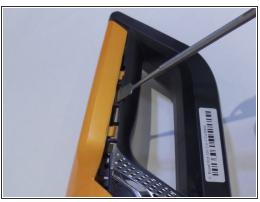

- Using the metal spudger, insert and lift up to remove the frame from the body.
- Move along the line and repeat on the other side.

Step 4



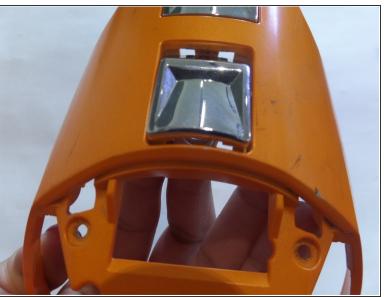

When placing new button in make sure the bottom end goes in first.

To reassemble your device, follow these instructions in reverse order.