




MacBook Pro 13" Two Thunderbolt Ports 2020

Touchbar Replacement

Use this guide to replace a touchbar on an...

Written By: Thomas Kirschbaum

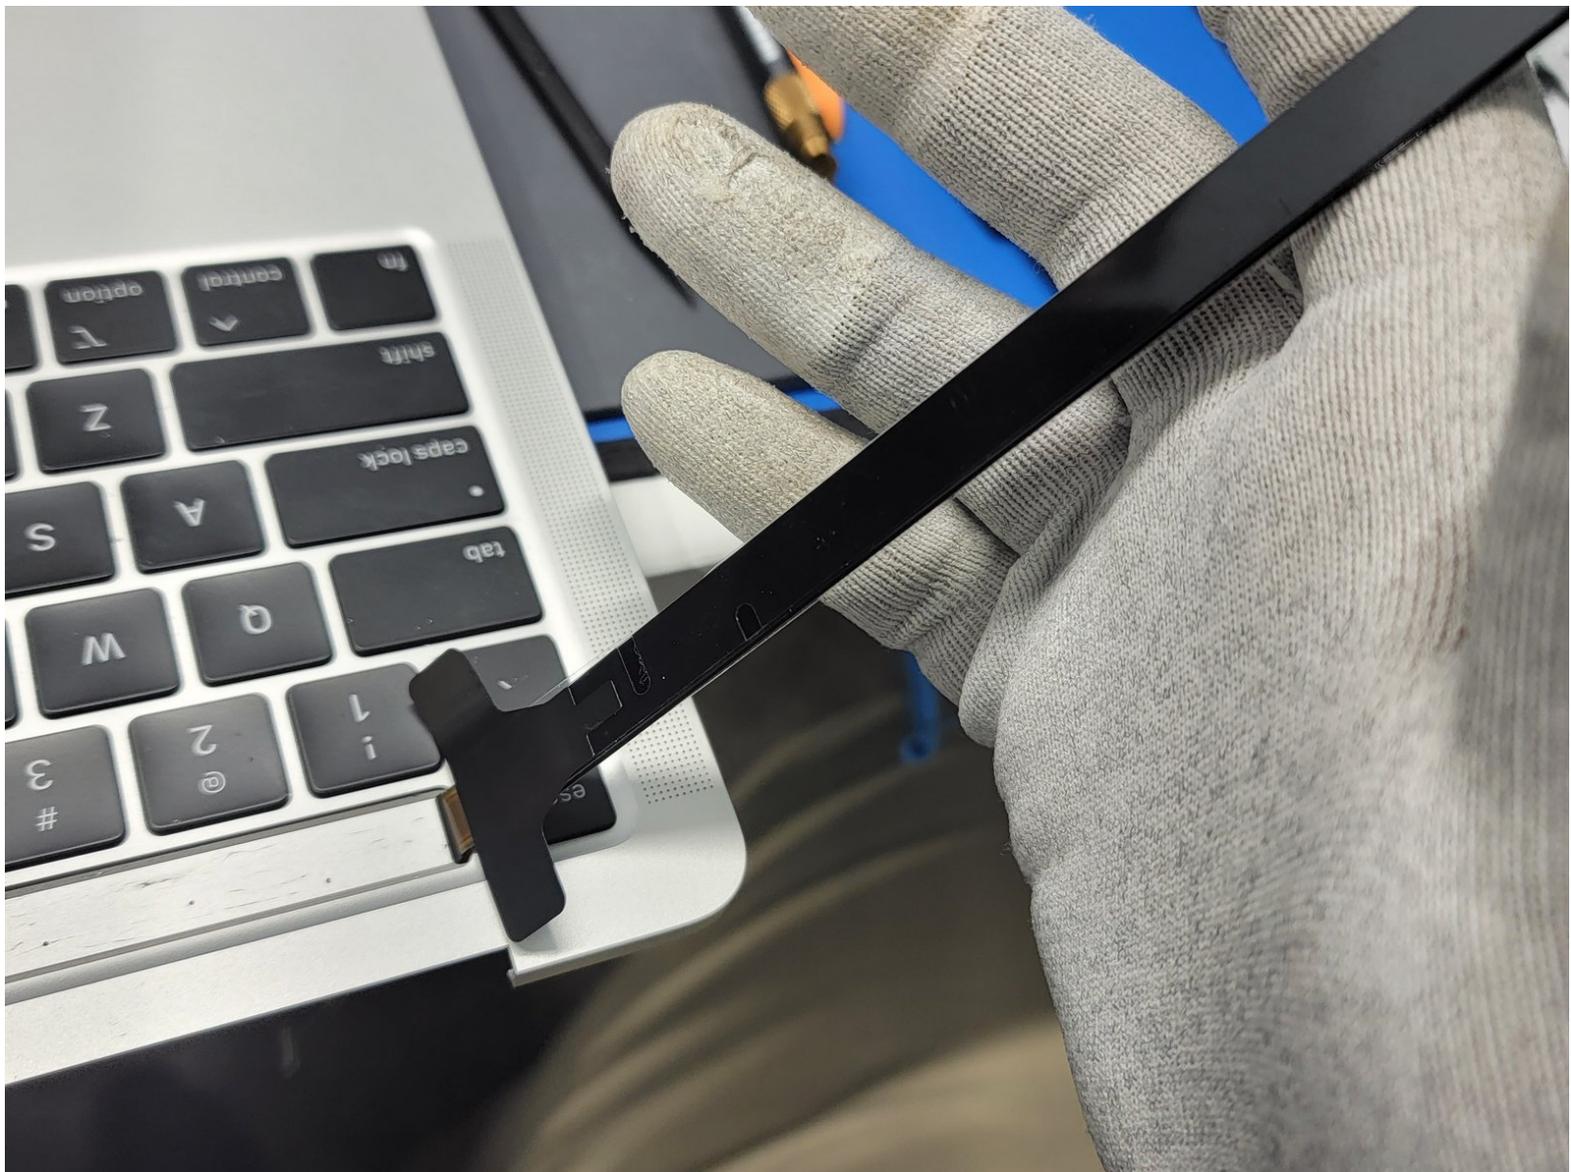

INTRODUCTION

Use this guide to replace a touchbar on an A2289 Macbook Pro 13" Mid 2020.

Be mindful to keep all screws and brackets organized. This will keep from damaging sensitive components by accidentally screwing the wrong size screw in.



TOOLS:


- [64 Bit Driver Kit](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)
- [Halberd Spudger](#) (1)
- [Spudger](#) (1)
- [Heavy-Duty Suction Cups \(Pair\)](#) (1)
- [Technician's Razor Set](#) (1)
- [iFixit Adhesive Remover \(for Battery, Screen, and Glass Adhesive\)](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Touchbar Assembly](#) (1)

Step 1 — Remove Back Panel Screws

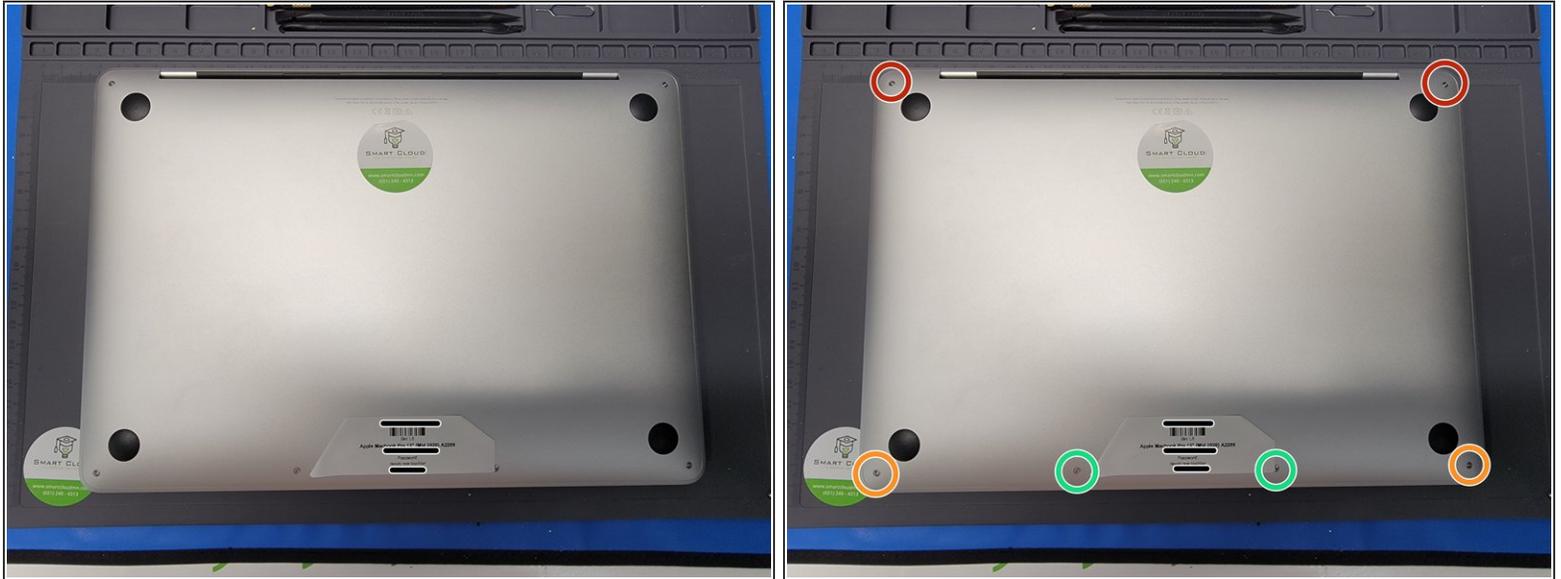

- To begin, we will need to remove 6 total screws
 - 2x **6.9mm** Pentalobe P5
 - 2x **5.5mm** Pentalobe P5
 - 2x **3.5mm** Pentalobe P5

Step 2 — Prop Up Back Panel




- After the screws are removed, grab a suction cup. We used [iFixit's Heavy Duty Suction cup](#).
- Place the suction cup towards the bottom of the Macbook
- Pull up on the suction cup; Creating about 0.15in worth of space from the panel and the Macbook.
⚠ Don't lift it any higher, as it could damage inside components

Step 3 — Prop Up Back Panel



- While creating the gap between the Macbook and the back panel, insert an [opening pick](#) into the gap about 0.2in.
 - ⚠ **Don't insert the pick further, as this could cause internal damage**
- Move the pick towards the left side of the Macbook and around the corner edge.
- Bring the pick up towards the top of the Macbook
 - Once you reach about the middle of the Macbook, you should hear a click. This is good! You have now unhooked part of the back panel.

Step 4

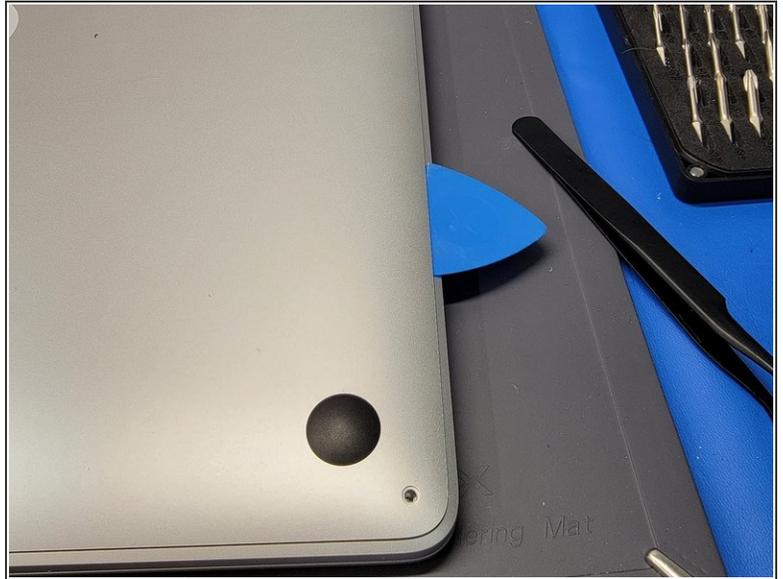

- Repeat Step 3 but on the right side of the Macbook
- ⚠ Once done, don't remove the back panel just yet. It is still attached to the Macbook

Step 5 — Prop Up Back Panel




- Insert your fingers in-between the back panel and Macbook and pry upwards to unhook the middle hook keeping the back panel connected to the Macbook
- ⚠ Don't attempt to remove the back panel yet. It is still connected to the Macbook

Step 6 — Removing Back Panel



- Grip the back panel with one hand
- Grip the Macbook with the other hand
- And pull the left side of the back panel **AWAY** from the **HINGE** side of the Macbook
 - ⓘ This will require a **lot** of force. Don't be afraid to pull hard while keeping the Macbook steady and in position.
- Repeat this with the right side of the Macbook
 - ⓘ Once pulled from the hinge area, you may now remove the back panel and place it out of the way.

Step 7 — Removing Battery Connector Cover

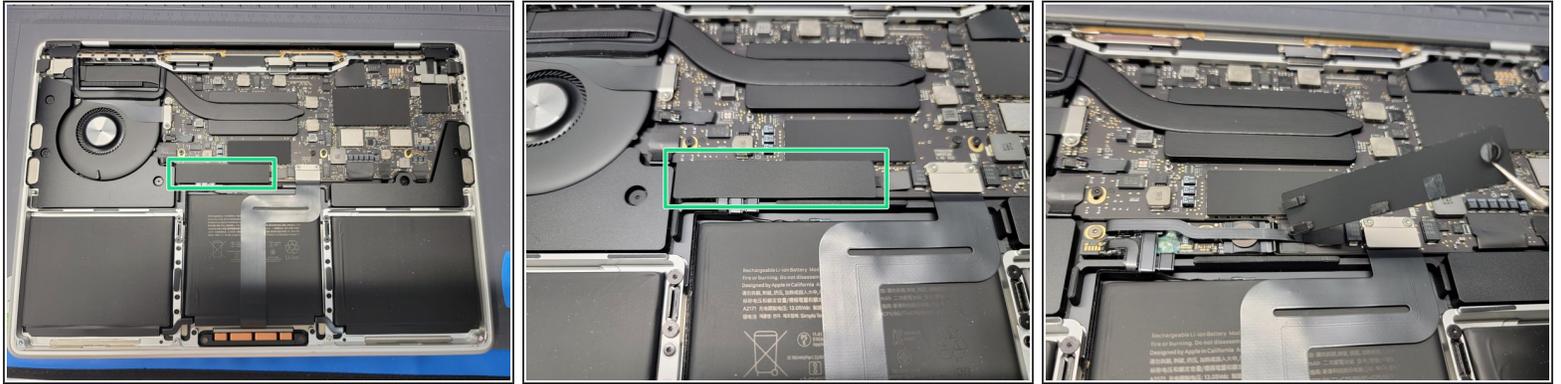

- Locate the battery connector cover
- Take a pair of [tweezers](#) and gently remove the plastic cover from the Logic Board

⚠ Be careful not to pull on any flex cables

Step 8 — Disconnecting Battery




- Locate the small flex cable covering the battery terminal
- Take a pair of [tweezers](#) in one hand and pull up on the plastic flap
- Take the hook end of a [Halberd Spudger](#) in the other hand and gently pry up the retaining flap on the battery cable ZIF socket

⚠ Be sure you are prying up on the hinged retaining flap, not the socket itself.

⚠ Make sure to use gentle force as this shouldn't require a lot of force. If excessive force is used, you could break the flex cable.




Step 9 — Disconnecting Battery

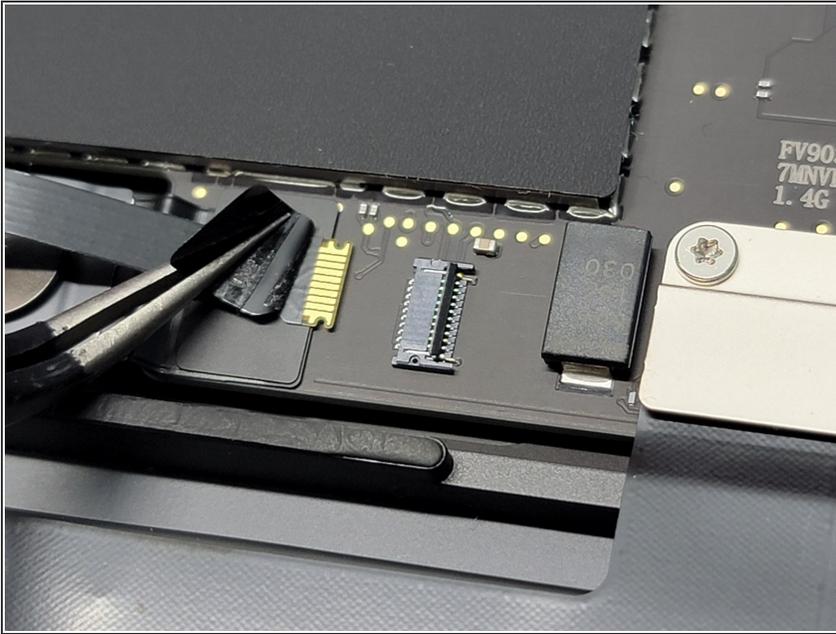

- Take your [tweezers](#) and pull on the plastic cover away from the ZIF socket to remove the flex cable from it's socket


⚠ Make sure to use gentle force as this shouldn't require a lot of force. If excessive force is used, you could break the flex cable.

Step 10 — Disconnecting the Battery

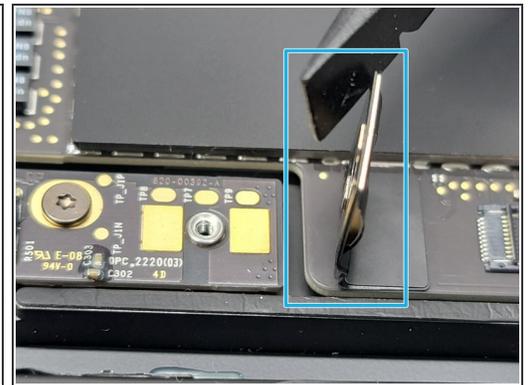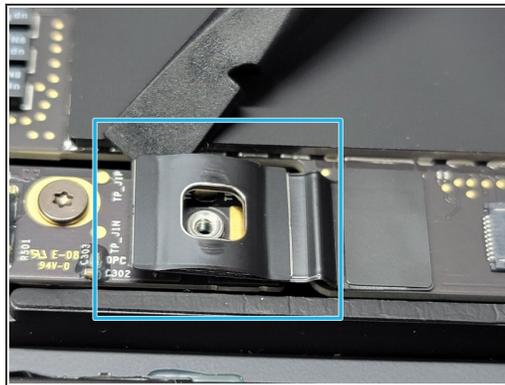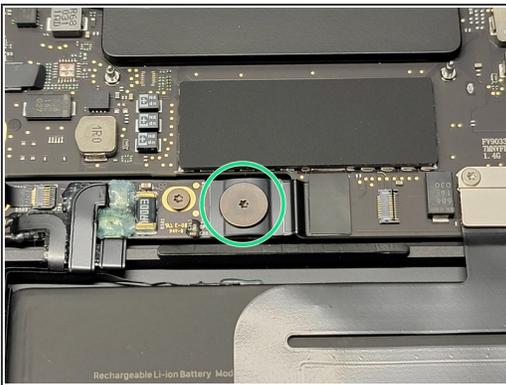


- Remove the **3.8mm** Torx T5 screw from the battery connector
- Take the flat end of a [spudger](#) and pry up the battery connector to a **90°** angle
 - ⓘ Prying it this far away from the contact pads ensures there won't be any contact between the Logic Board and the battery
- ⚠ Be mindful of the battery connector. If you flip the Macbook and lay it down on the table, you could damage the battery connector

Step 11 — Removing Left Hinge Cover

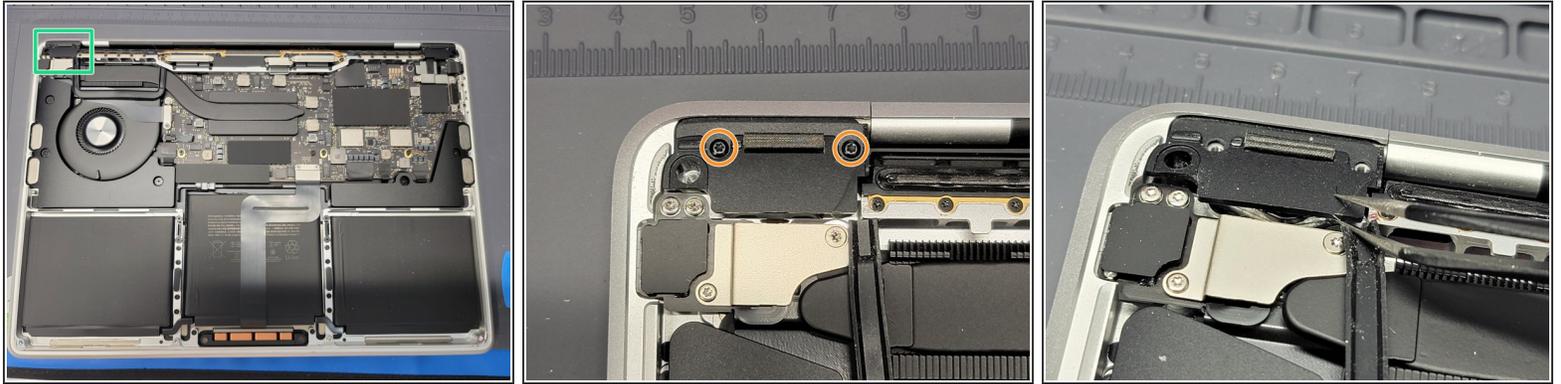


- Locate the left hinge cover
- Remove 2x **2mm** Torx T3 screws securing the hinge cover to the Macbook
- Take a pair of [tweezers](#) and remove the hinge cover

Step 12 — Removing Right Hinge Cover

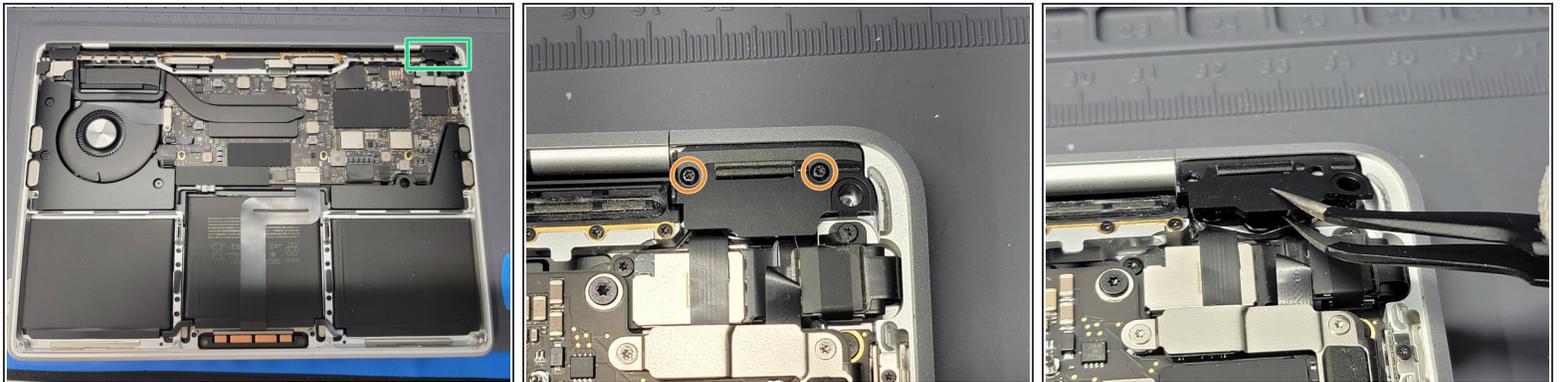


- Locate the right hinge cover
- Remove 2x **2mm** Torx T3 screws securing the hinge cover to the Macbook
- Take a pair of [tweezers](#) and remove the hinge cover

Step 13 — Removing LCD Flex Cable Brackets

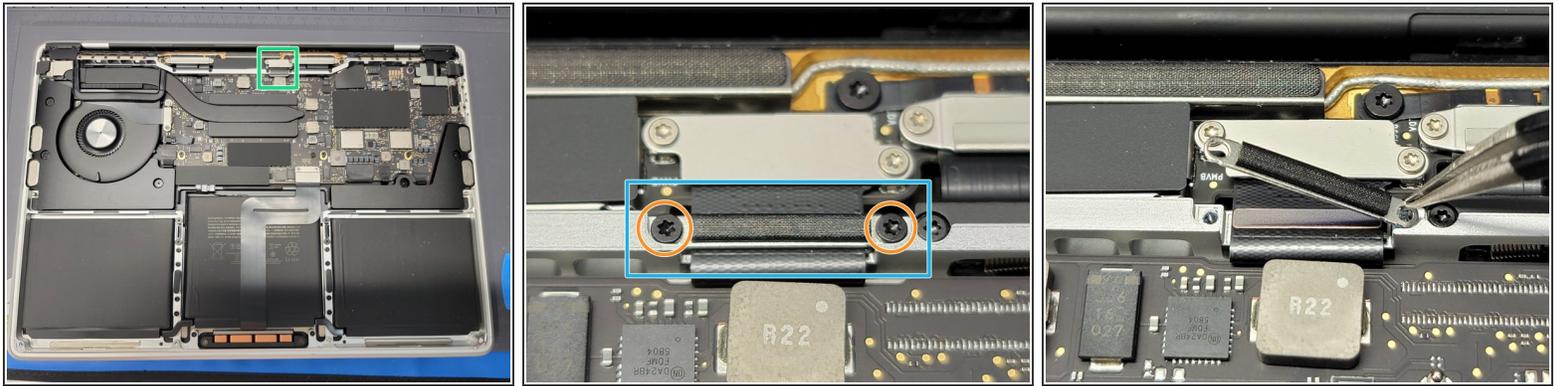


- Locate your LCD flex cable towards the top of the Macbook
- Locate the bottom cover plate
- Remove 2x **3.2mm** Torx T3 screws securing the bottom cover plate to the MacBook
- Take a pair of [tweezers](#) and remove the brackets

Step 14 — Removing LCD Flex Cable Cover Plates

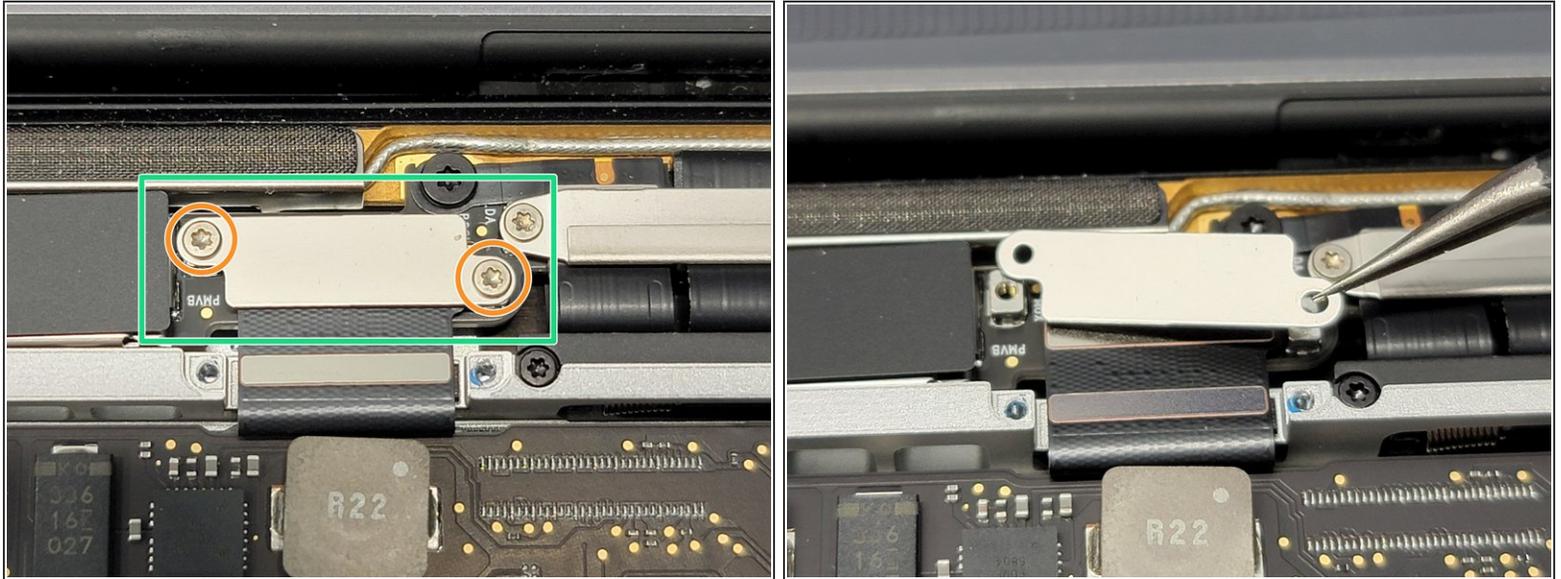



- Locate the top cover plate of the LCD flex cable
- Remove 2x **1.8mm** Torx T3 screws securing the top cover plate to the Macbook
- Take a pair of [tweezers](#) and remove the now free cover plate

Step 15 — Disconnecting LCD Flex Cable

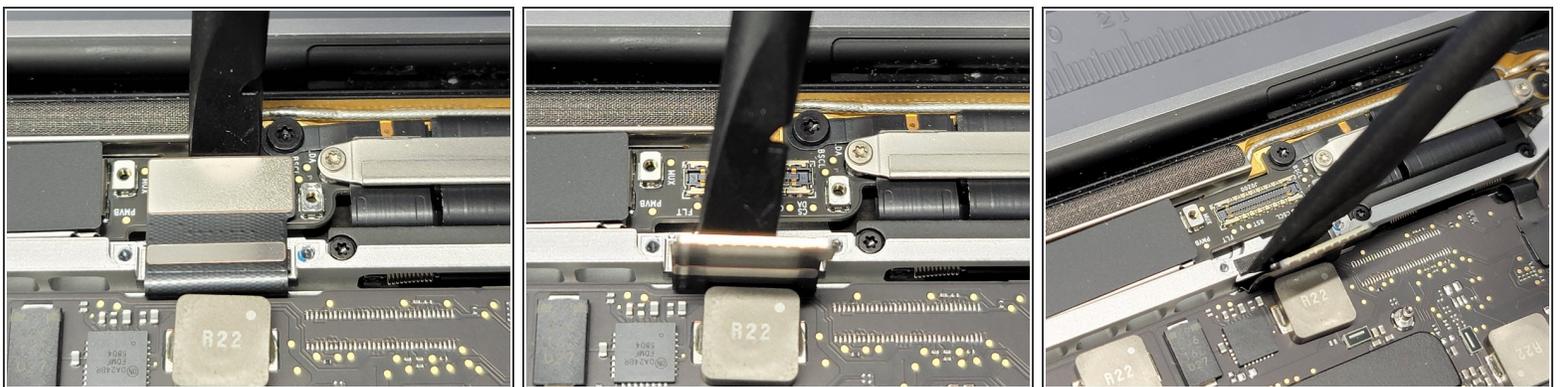



- Take the flat end of a [spudger](#) and gently pry up the LCD flex cable from its port
 - ⚠ **Make sure not to pry the socket itself**
- Lift LCD flex cable up and away from the Macbook

Step 16 — Removing Left LCD Spring Screws

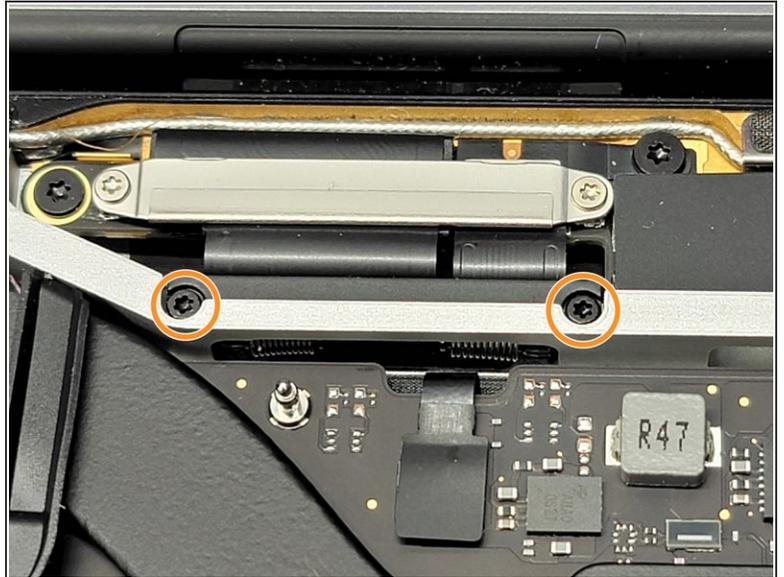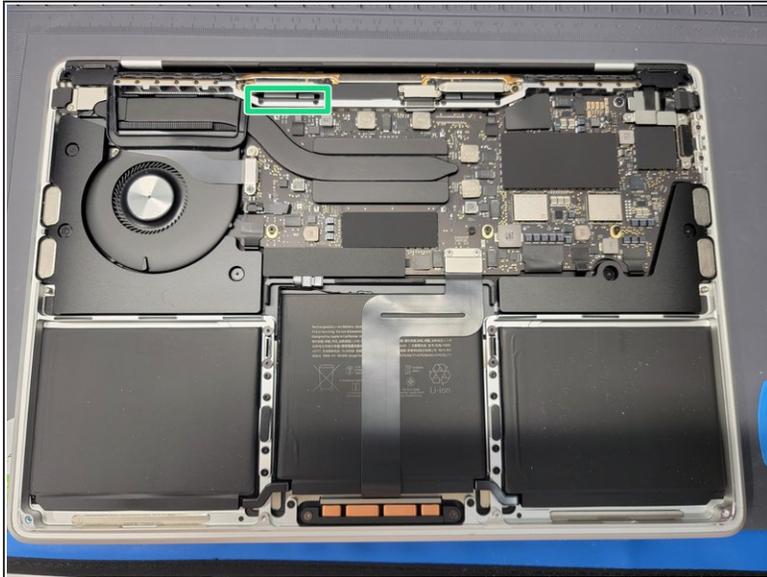

- Locate the left LCD screen spring
- Remove 2x **4.1mm** Torx T3 screws securing the spring to the MacBook

Step 17 — Removing Right LCD Spring Screws

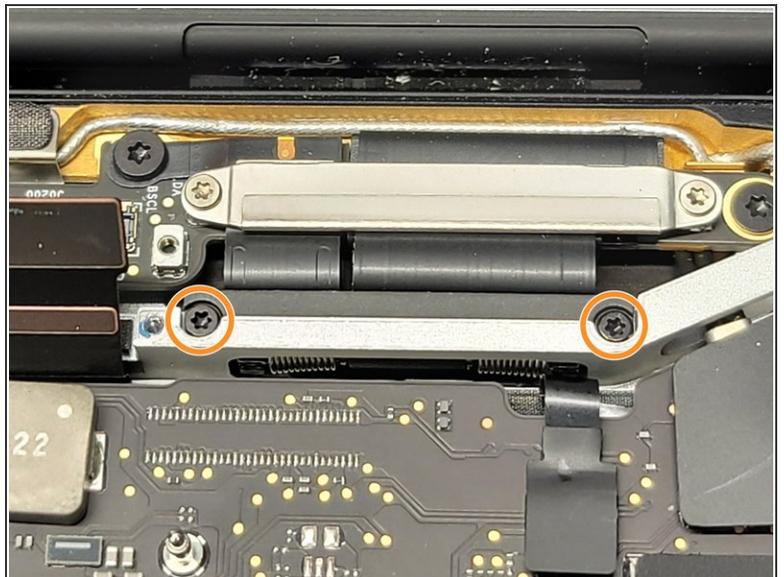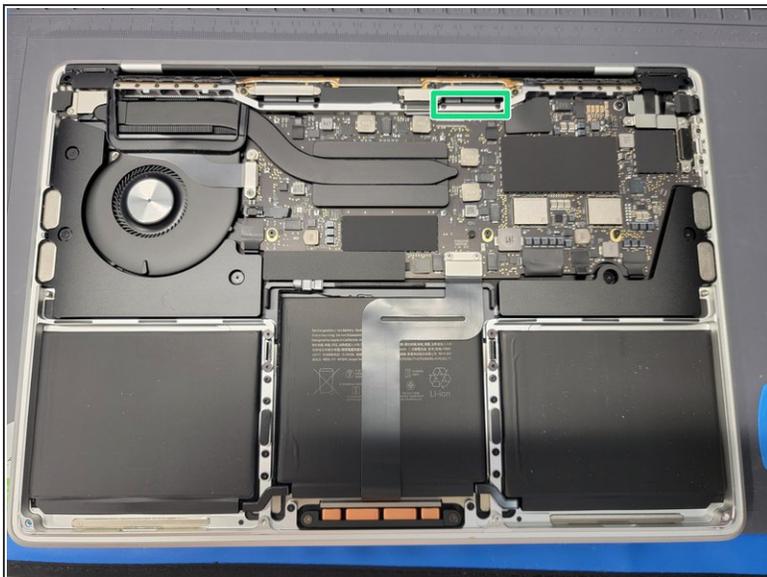

- Locate the right LCD screen spring
- Remove 2x **4.1mm** Torx T3 screws securing the spring to the MacBook

Step 18 — Disconnecting Antenna From Logic Board



- Locate antenna connector cover
 - Take a pair of [tweezers](#) and gently pry up the cover from the Logic Board
 - ⚠ Be careful not to pry anything but the plastic cover
- Remove 1x **3.9mm** Torx T5 screw securing the antenna cables to the MacBook
- Take the flat end of a [spudger](#) and gently pry up the antenna cables from their sockets
 - ⚠ Be careful not to pry up the socket itself

Step 19 — Removing Antenna Screws




- Locate the antenna towards the top of the Macbook
- Remove 12x **1.2mm** Pentalobe P2 screws securing the antenna to the MacBook

Step 20 — Removing LCD Board Screws





- Locate the LCD board towards the top of the Macbook
- Remove 4x **3.4mm** Torx T5 screws securing the LCD board to the MacBook and to the antenna

Step 21 — Removing Antenna from Macbook

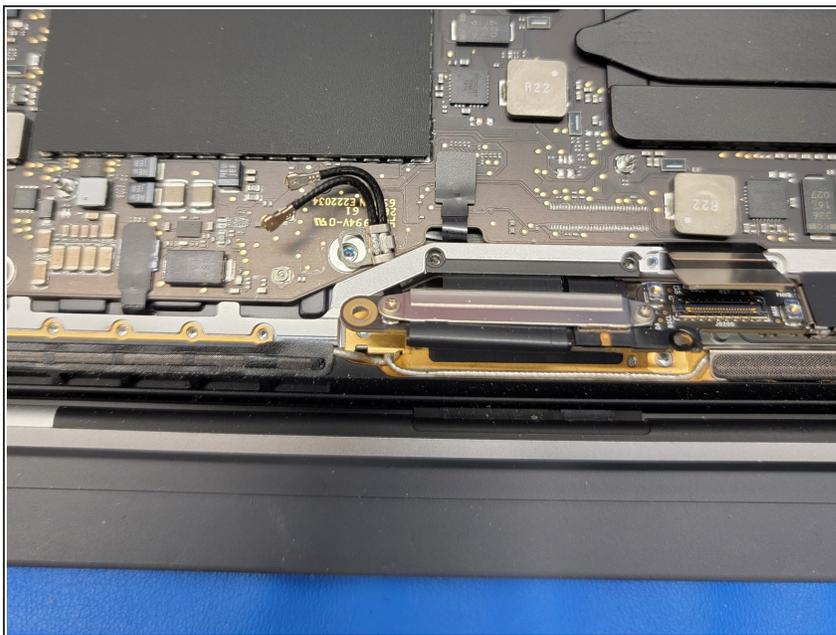


- You should now be able to remove the antenna from the Macbook.
 - Gently pry & pull away the antenna cable from the Macbook while routing it's cable through their hole. Take care here, as the antenna sockets can be ripped from the board easily.
- i** You can straighten out the cables to make it easier or simply twist and turn the antenna to maneuver the cables out of their hole.

Step 22 — Removing Left Hinge Screws

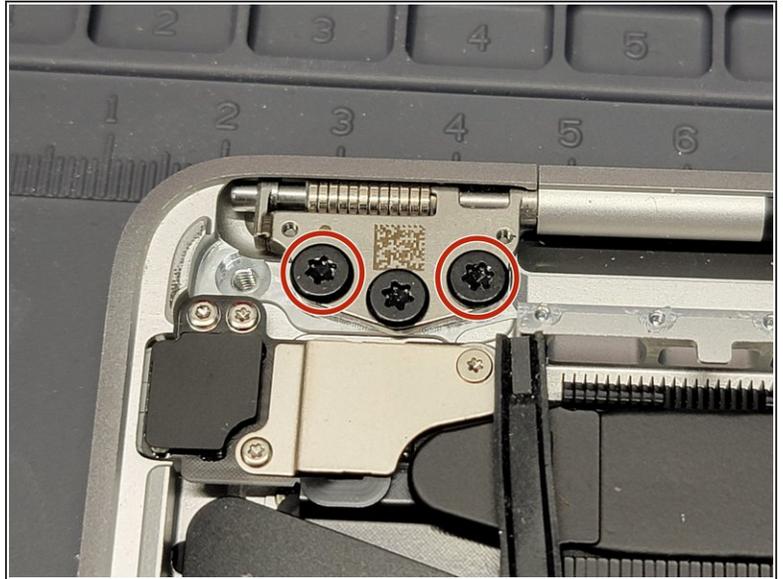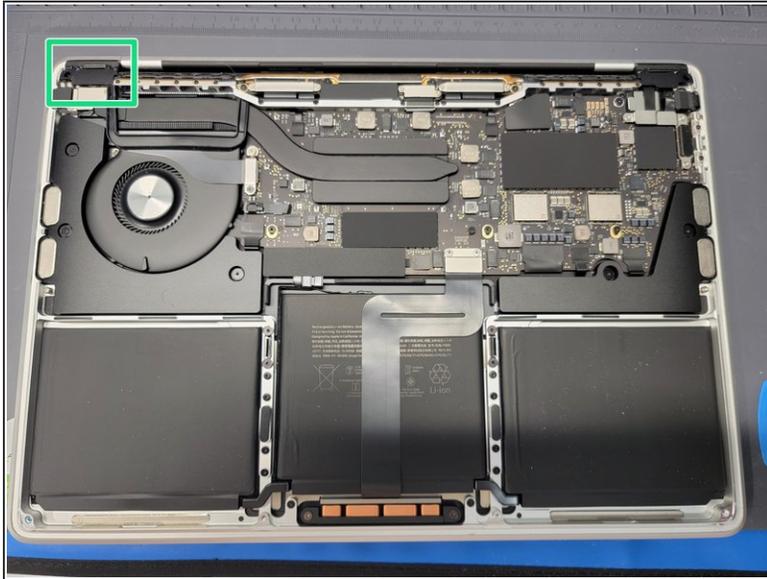

- Locate the left LCD screen hinge
- Remove 2x **4.5mm** Torx T9 screws that secure the hinge to the MacBook
- ⓘ Leave 1 screw to make removing the LCD screen easier

Step 23 — Removing Right Hinge Screws

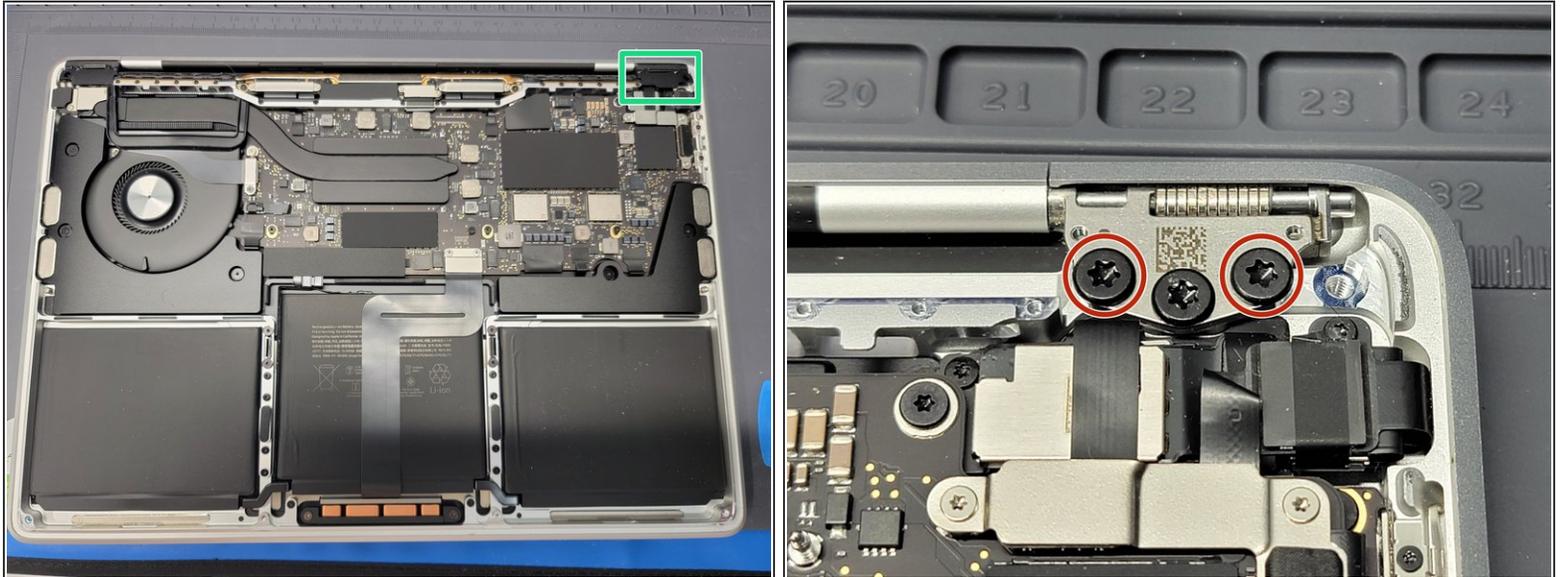


- Locate the right LCD screen hinge
- Remove 2x **4.5mm** Torx T9 screws that secure the hinge to the MacBook
- ⓘ Leave 1 screw to make removing the LCD screen easier

Step 24 — Removing LCD Screen




- Place MacBook at the edge of your work bench and let the screen overhang
- Locate and remove the remaining 2x **4.5mm** Torx T9 screws securing the 2 hinges to the MacBook
- ⓘ The MacBook display will now freely dangle on the edge of the table. It won't fall due to the hinges being inside a divot in the MacBook

Step 25 — Removing LCD Screen

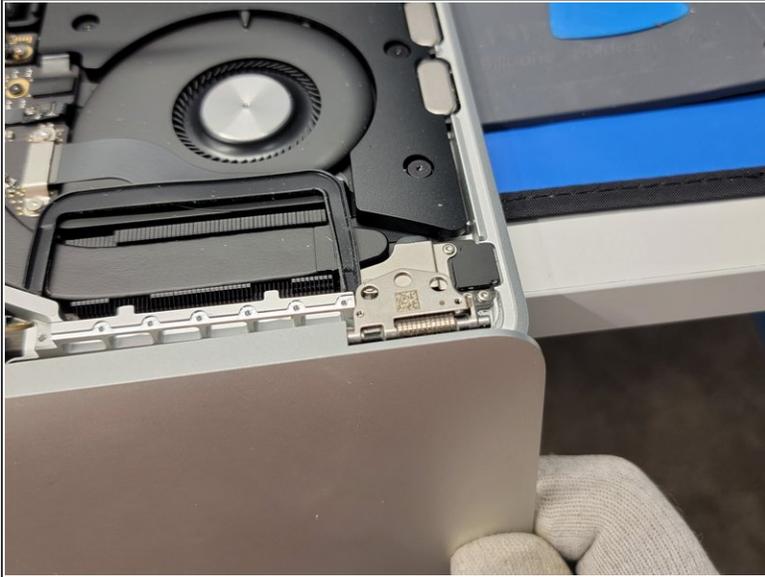


- Bend the LCD screen slightly towards you
 - Gently pry up the LCD screen from the Macbook, while guiding the hinges out of their divots
- During reassembly make sure to place the hinges into the divots. Once in the divots, you can then screw 1 screw back into each hinge and then shut the Macbook. This will allow you to properly arrange and align the LCD hinges

Step 26 — Removing Power Button Bracket

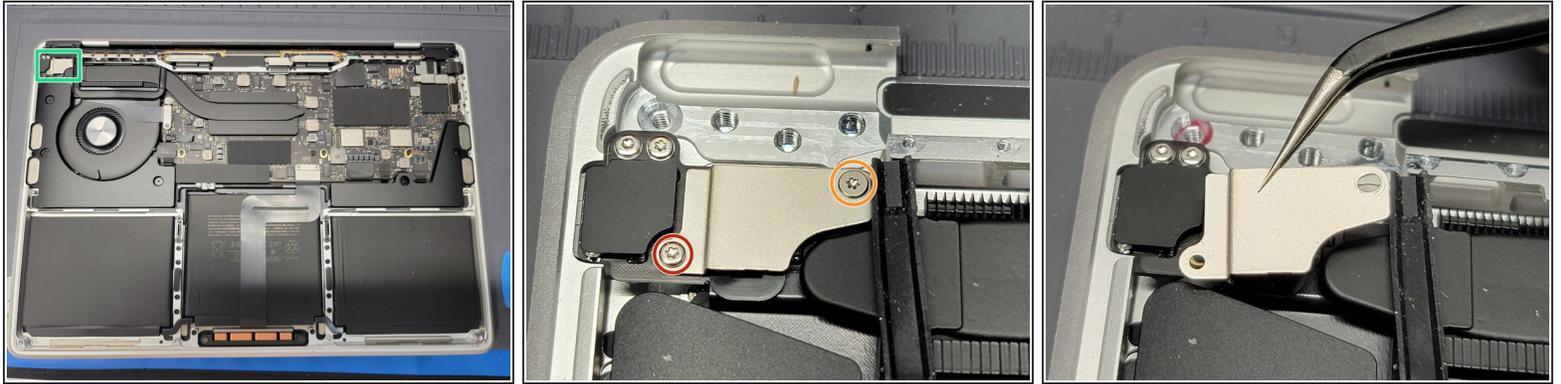


- Locate the power button flex cable bracket towards the top left of the MacBook
 - Remove 2x screws securing the bracket to the MacBook
 - 1x **5mm** Torx T3 Screw
 - 1x **1.4mm** Torx T3 Screw
 - ⓘ *During Reassembly:* You may want to use this screw to screw in the logicboard standoff underneath.
 - Take a pair of [tweezers](#) and remove the bracket
- ⚠ **Make sure to grab and pickup **ONLY** the bracket.**

Step 27 — Removing Trackpad Cable Bracket

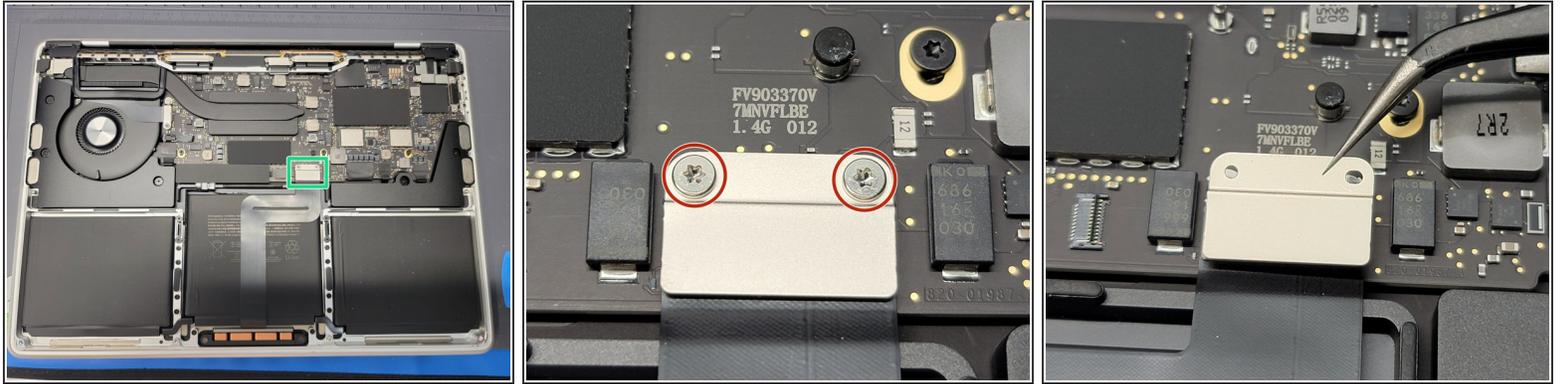


- Locate the trackpad's flex cable bracket towards the middle of the Macbook
 - Remove 2x **1.9mm** Torx T5 screws securing the bracket to the Macbook
 - Then take a pair of [tweezers](#) and remove the bracket
- ⚠ Make sure to grab and pickup **ONLY** the bracket.

Step 28 — Disconnecting Trackpad From Logic Board

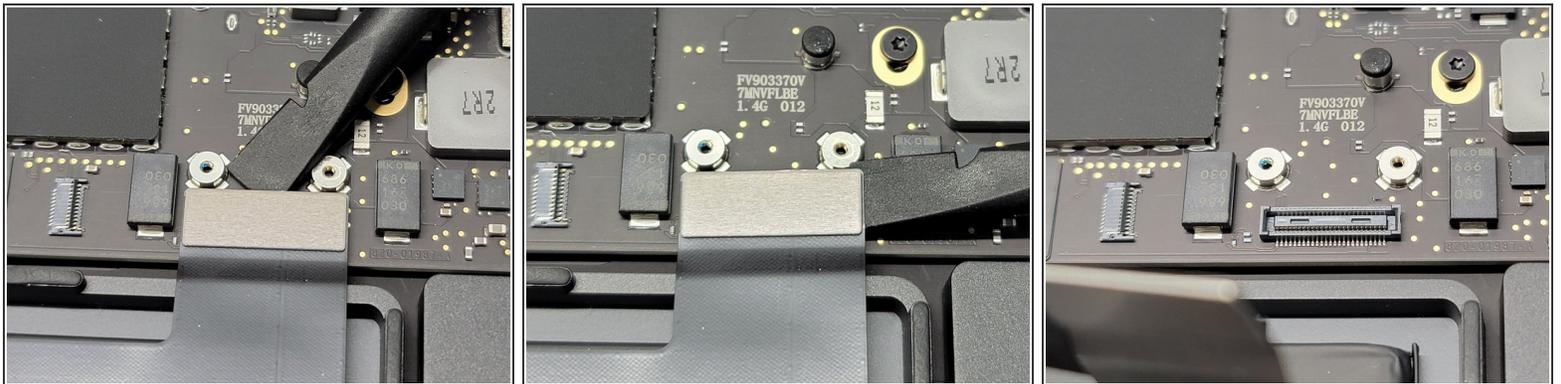



- Using the flat end of a [spudger](#) gently lift the connector from its socket
- ⚠ Make sure to not pry the socket itself
- ⓘ It might make it easier if you pry it up a little on all 3 sides

Step 29 — Removing Right Speaker Flex Cable Bracket

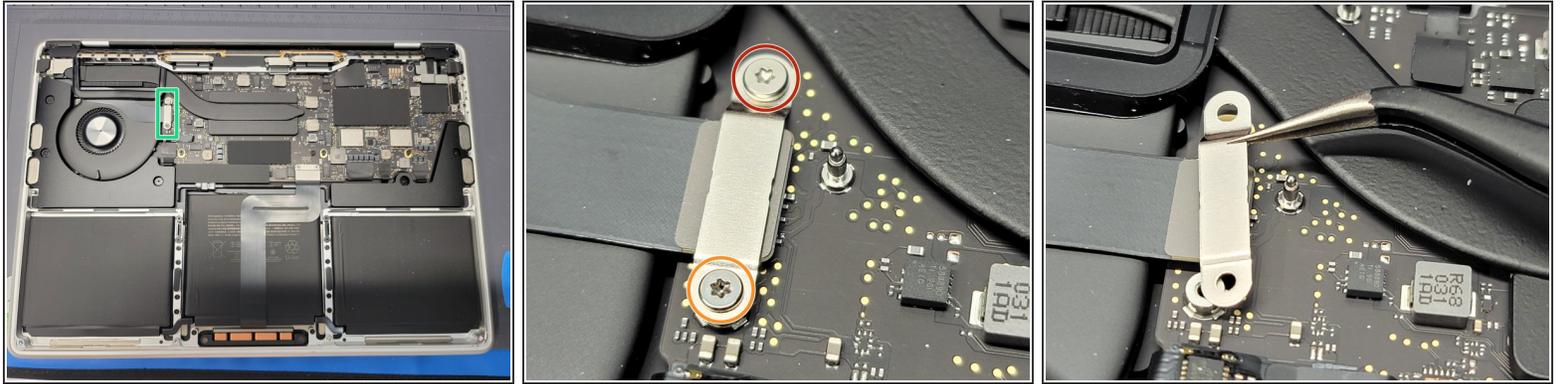


- Locate the right speaker flex cable bracket
 - Remove 2x screws securing the bracket down to the Logic Board
 - 1x **3.7mm** Torx T5
 - 1x **2.6mm** Torx T5
 - Take a pair of [tweezers](#) and remove the bracket
- ⚠ **Make sure to not grab the flex cable while removing the bracket**

Step 30 — Disconnecting Right Speaker From Logic Board

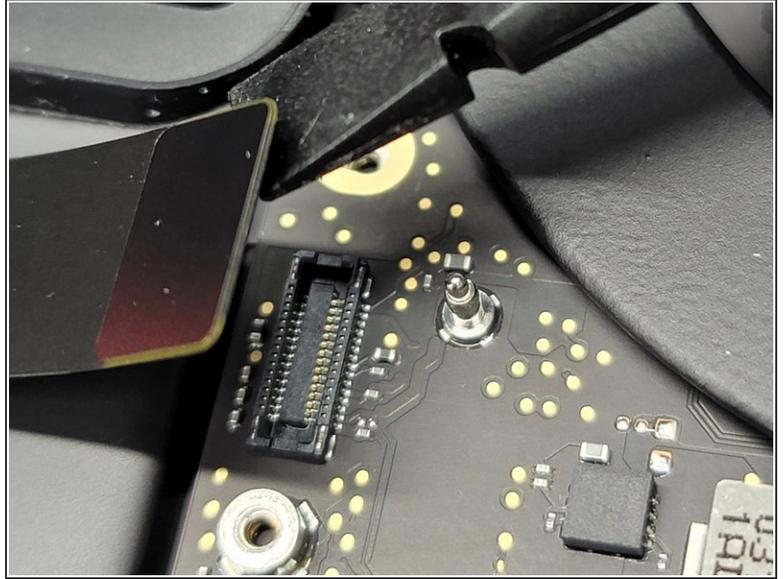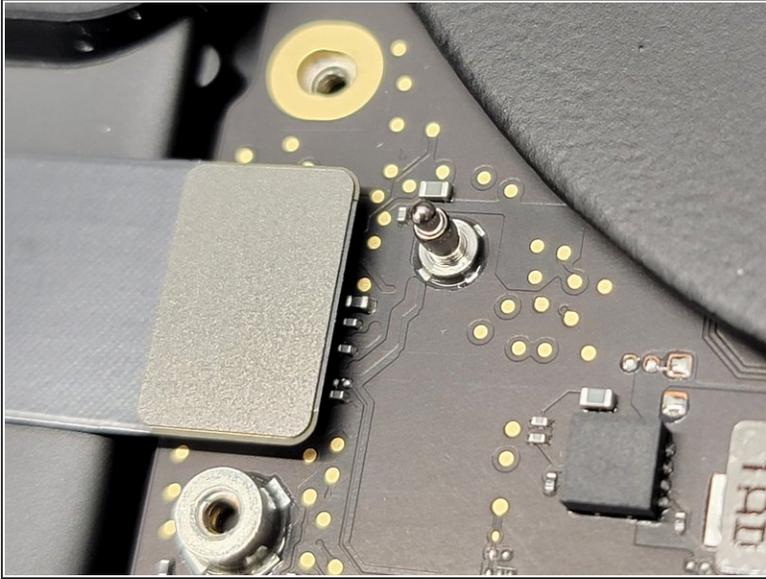

- Take the flat end of a [spudger](#) and carefully pry up the flex cable from its socket
 - ⚠ Be careful not to pry up on the socket itself
 - ⚠ There are sensitive filters near the socket. Make sure to be ultra careful not to knock one of those "**microscopic**" filters off.

Step 31 — Removing Left Speaker & Touch Bar Flex Cable Bracket

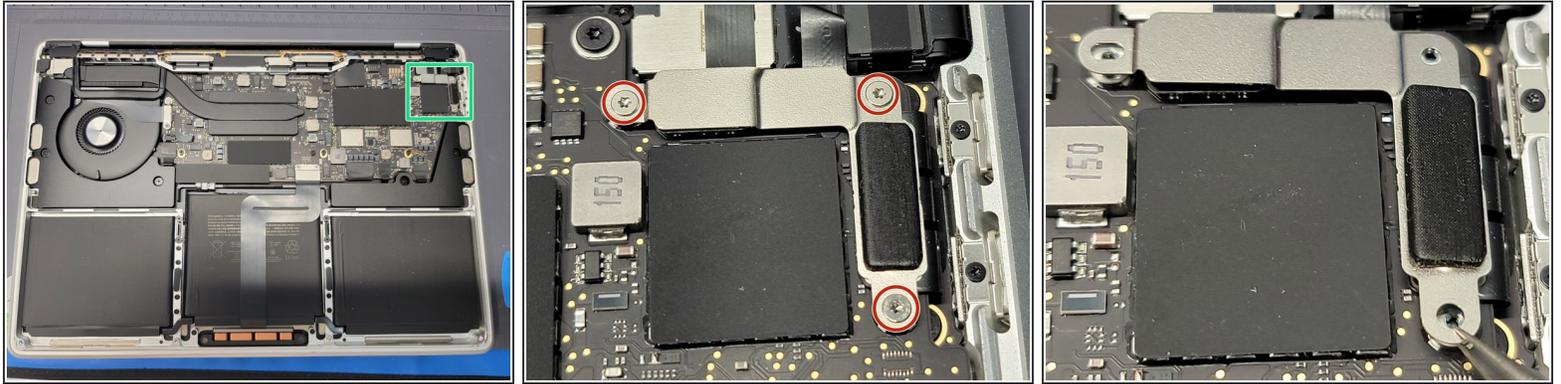


- Locate the left speaker and touch bar bracket
 - Remove 3x **1.4mm** Torx T3 screws from the bracket
 - Take a pair of [tweezers](#) and remove the bracket
- ⚠ Be sure not to grab any of the flex cables while removing the bracket

Step 32 — Disconnecting Flex Cables





- Take the flat-end of a [spudger](#) and gently pry up all 3 flex cables from their sockets
- ⚠ Be careful not to pry up on the socket itself
- ⚠ There are sensitive filters near the socket. Make sure to be ultra careful not to knock one of those "**microscopic**" filters off.

Step 33 — Disconnecting More Flex Cables

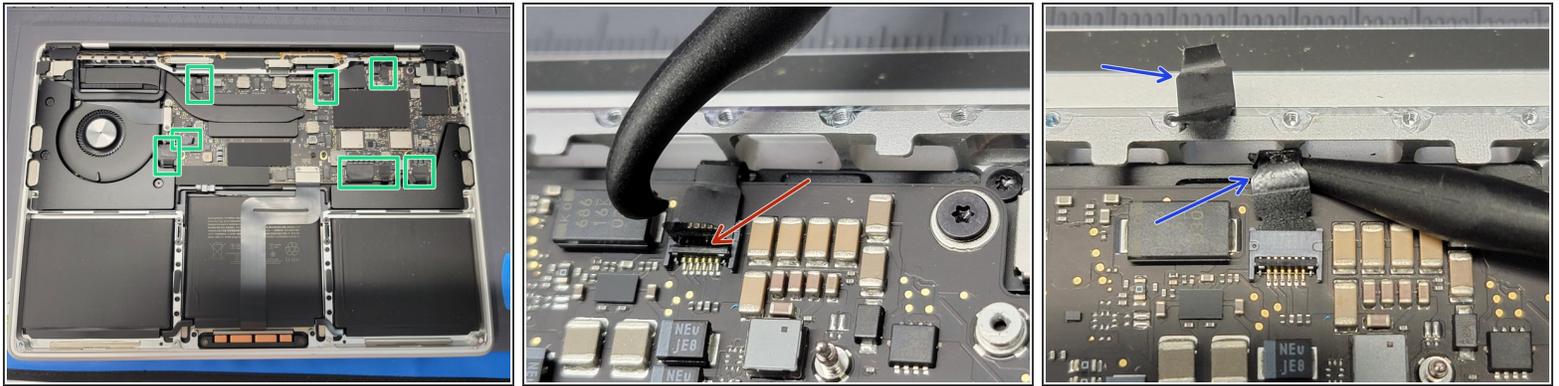


- Locate 8x flex cables connected the logic board
- For each flex cable, pull up on their plastic flap with a pair of [tweezers](#)
- Take the hook end of a [Halberd Spudger](#) and gently pry up the retaining flap on the ZIF socket of each cable
 - ⚠ Make sure to use gentle force as this shouldn't require a lot of force. If excessive force is used, you could break the flex cable.
 - ⚠ Be sure you are prying up on the hinged retaining flap, not the socket itself.
- Take your [tweezers](#) and pull on the plastic cover to pull each cable away from the ZIF socket to remove the flex cable from it's socket
 - ⚠ Make sure to use gentle force as this shouldn't require a lot of force. If excessive force is used, you could break the flex cable.
- If any of the plastic flaps break off don't worry! You can use a combination of your [spudger](#) and [tweezers](#) to gently pull out the flex cable from it's respective socket

Step 34 — Removing Logic Board Screws

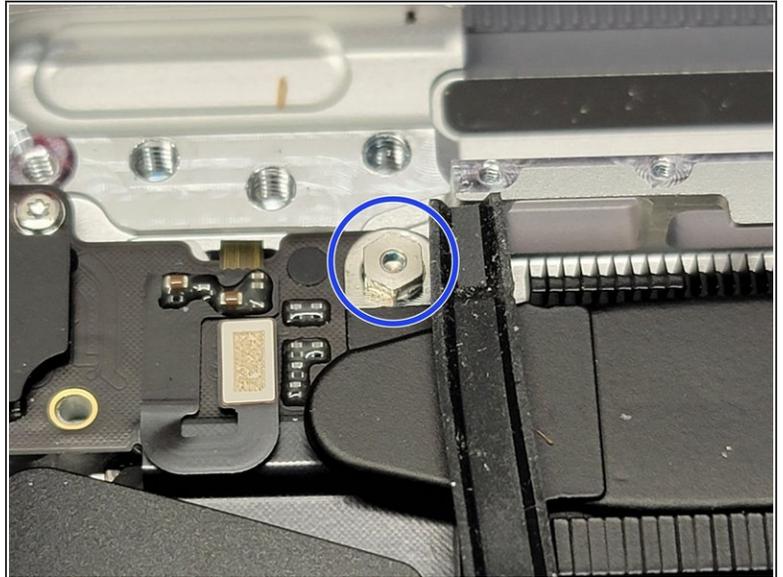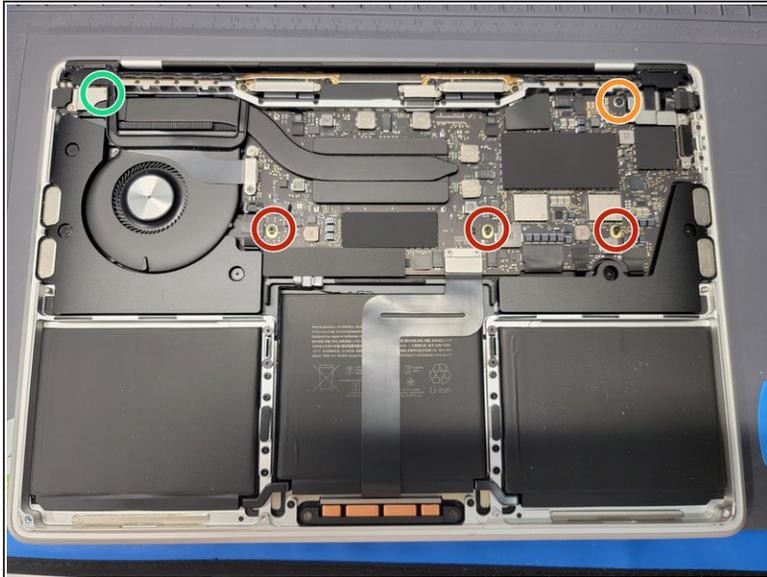




- Locate and remove 5x Logic Board Screws
 - 3x **3.4mm** Torx T5 screws
 - 1x **3.6mm** Torx T5 stepped screw
 - 1x **3.3mm** hex standoff (3mm drive)
- *During Reassembly:* It may be difficult to screw the top left logic board standoff back in. If you are finding it hard to do this, take the **1.4mm** screw that we removed to remove the power button bracket and screw it into the top left logic board standoff. Afterwards, take the now "**cyborg**" screw and screw it into the logic board.
- ☑ Don't forget to remove the **1.4mm** screw from the logic board standoff during reassembly

Step 35 — Removing Logic Board From Macbook

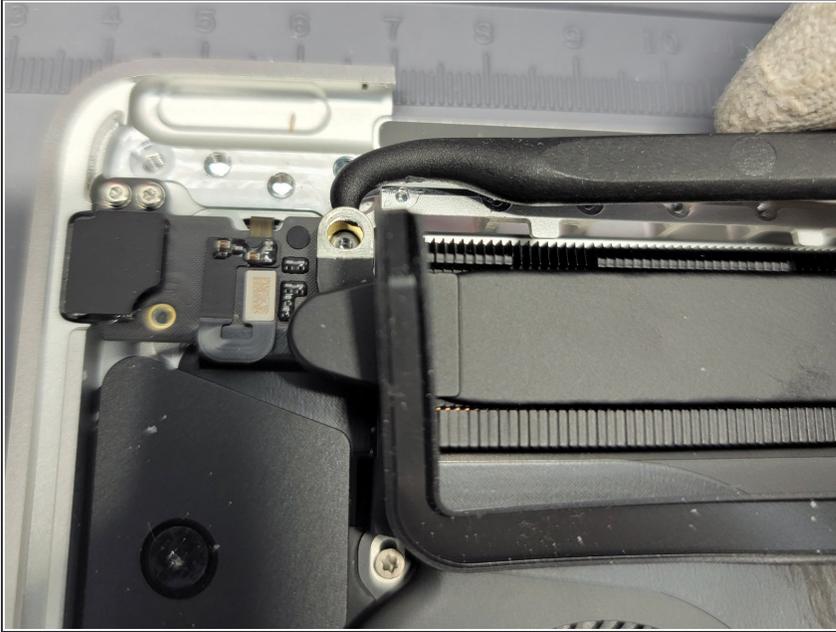

- Take the hook end of your [Halberd Spudger](#) and gently pry up the top left corner of the logic board
 - Now remove the logic board from the Macbook
- ⚠ Be careful not to rip or tear any flex cables while removing or placing down the logic board
- 👉 During reassembly, make sure to take your [spudger](#) while placing the logic board down and move any flex cable away from being squashed, tore, or ripped.

Step 36 — Removing Touchbar Screws

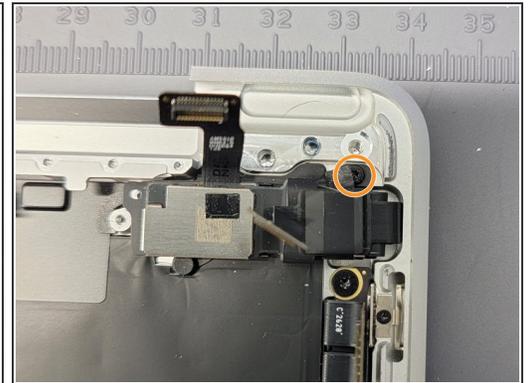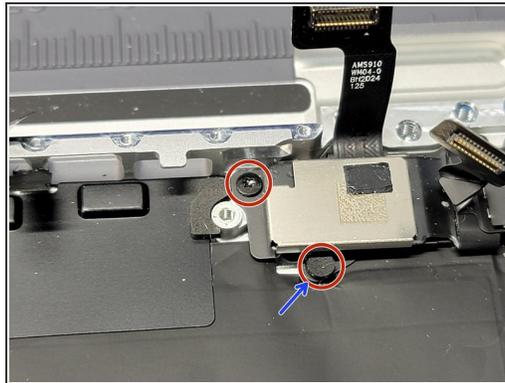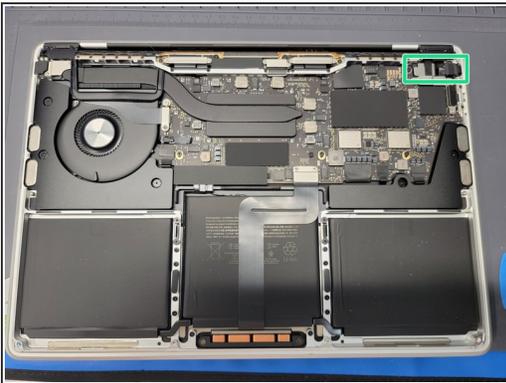

- Locate the touchbar flex cable mess towards the top right of the Macbook
- You will be removing a total of 3 screws to release this cabled mess from the frame
 - 2x **2.4mm**
 - One of these are "hidden" by a small pad. Take a pair of [tweezers](#) and remove this pad to access the screw head
 - 1x **1.7mm**

Step 37 — Removing Touchbar Flex Cable Brackets



- These brackets that keep the cabled mess down and attached to the frame are adhered to the cabling
- Remove these brackets from the flex cabling mess
- ⓘ **TIP:** Be mindful of how the brackets are positioned in relation to the cables and frame. Take pictures to reference. Without these brackets, the cables will be free inside the frame (*which is not good*).
- ⓘ There are also little wraps of plastic holding different parts of the cabling together. Go ahead and **CAREFULLY** remove these as we won't need them during reassembly and we do need them removed to completely remove the touchbar
- ✦ Follow this guide to properly install the **new** touchbar

Step 39 — Our Method of Removing This Specific Touchbar




- Take a [Halberd Spudger](#) and insert the knife end right underneath the plastic of the digitizer
- Run the [Halberd Spudger](#) along the edge of the touchbar digitizer
- The digitizer should separate surprisingly easy.
- Feed the Touchbar digitizer cable through the hole and remove the digitizer

Step 40 — Prying Up The LCD of The Touchbar




- Take a [technician's knife](#) and start prying away the LCD of the touchbar.
- ⓘ Use [adhesive remover](#) from time to time to help loosen the adhesive
- ⚠ Don't let any of the adhesive remover touch the keyboard keys or any plastic for that matter. It will melt and eat away at any plastic it comes in-contact with

Step 41 — Prepping Touchbar Flex Cable

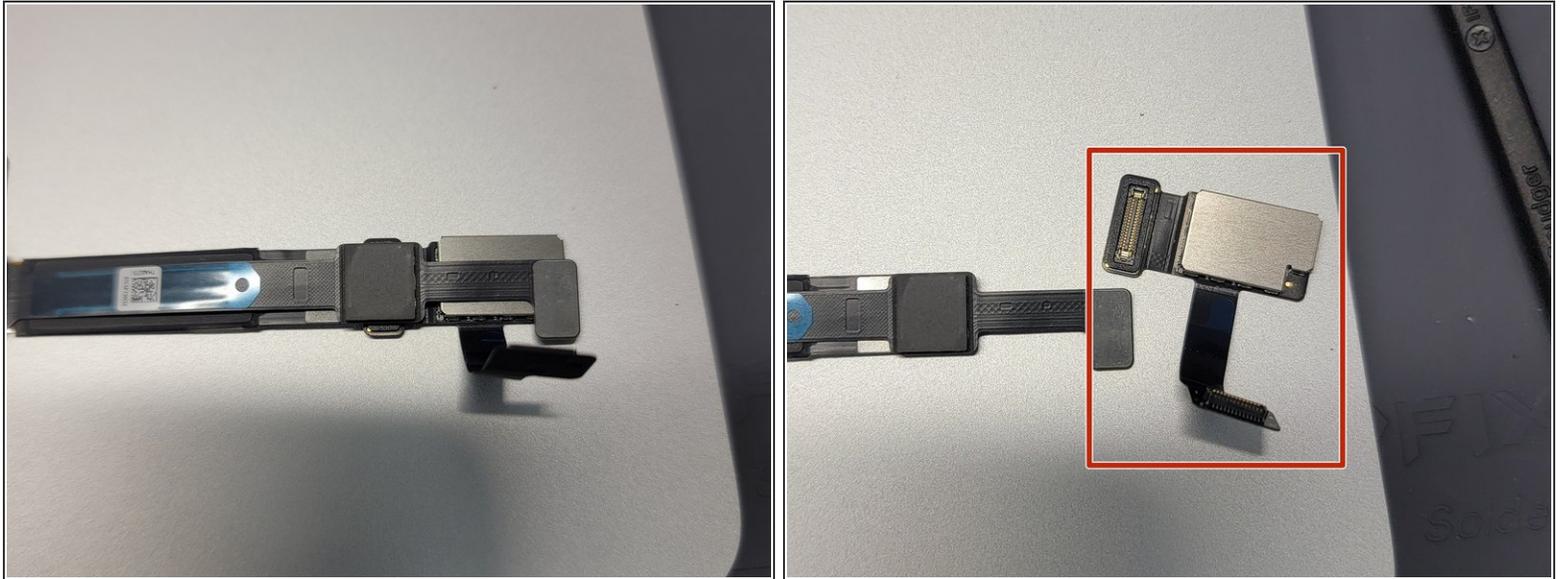

- Locate the cable side of the **NEW** touchbar
 - ⚠ The touchbar is very sensitive and can break easily. Make sure to handle with care while maneuvering it around.
- Locate the detachable end of the flex cable and use the flat-end of a spudger to disconnect the larger portion.
 - ⚠ Be aware of how the end portion is oriented in relation to the smaller cable. When reattaching this part, it is important to place it correctly back into its socket and not backwards."

Step 42 — Feeding Flex Cable

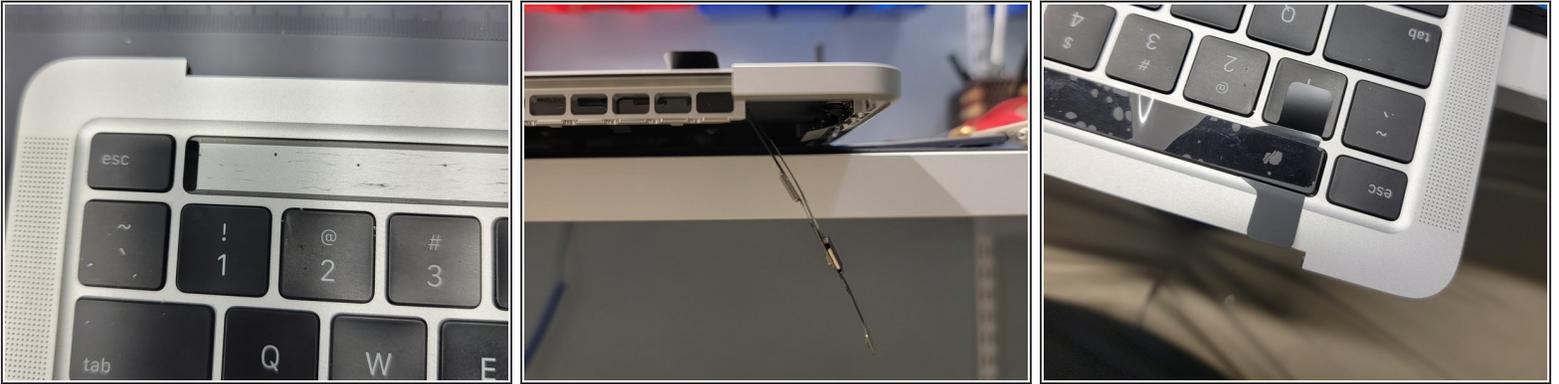


- Locate the little hole near the left side of the Macbook and feed the touchbar flex cables through it.
- ⓘ DON'T remove any plastic off the touchbar just yet. The adhesive attached to the touchbar is VERY strong and you will only have 1 chance to place the touchbar down correctly.

Step 43




- After feeding the flex cable through the hole, reattach the bigger portion of the touchbar flex cable
- ⚠ Make sure to reattach this part correctly as if you don't, it can cause damage to the cable.

Step 44 — Adhering First Bracket

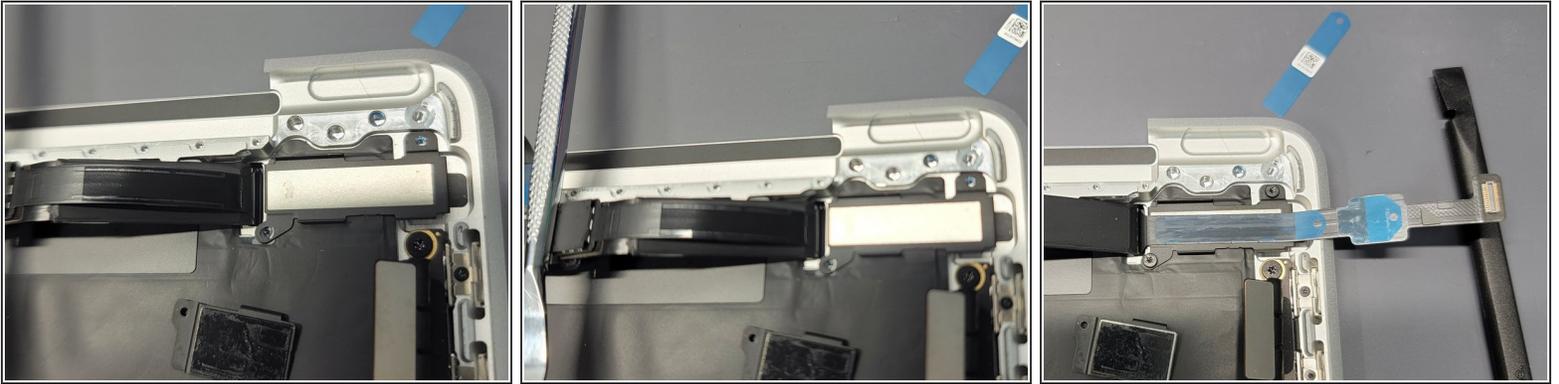


- Locate the larger bracket and place it down in its spot. Reference the images for assistance.
 - ⓘ Might make it easier to perform the below steps if you screw the bracket down into place. Reference **step 36** for screw placement
 - Place something heavy enough to keep the flex cables back but light enough not to damage them (Ex: metal spudger)
 - Remove the blue adhesive protector from the touchbar digitizer cable
 - Align cable to bracket and press the flex cable firmly down onto the bracket
- ⚠ Don't remove the blue adhesive protector on the other side of the flex cable just yet**

Step 45 — Adhering The Two Flex Cables

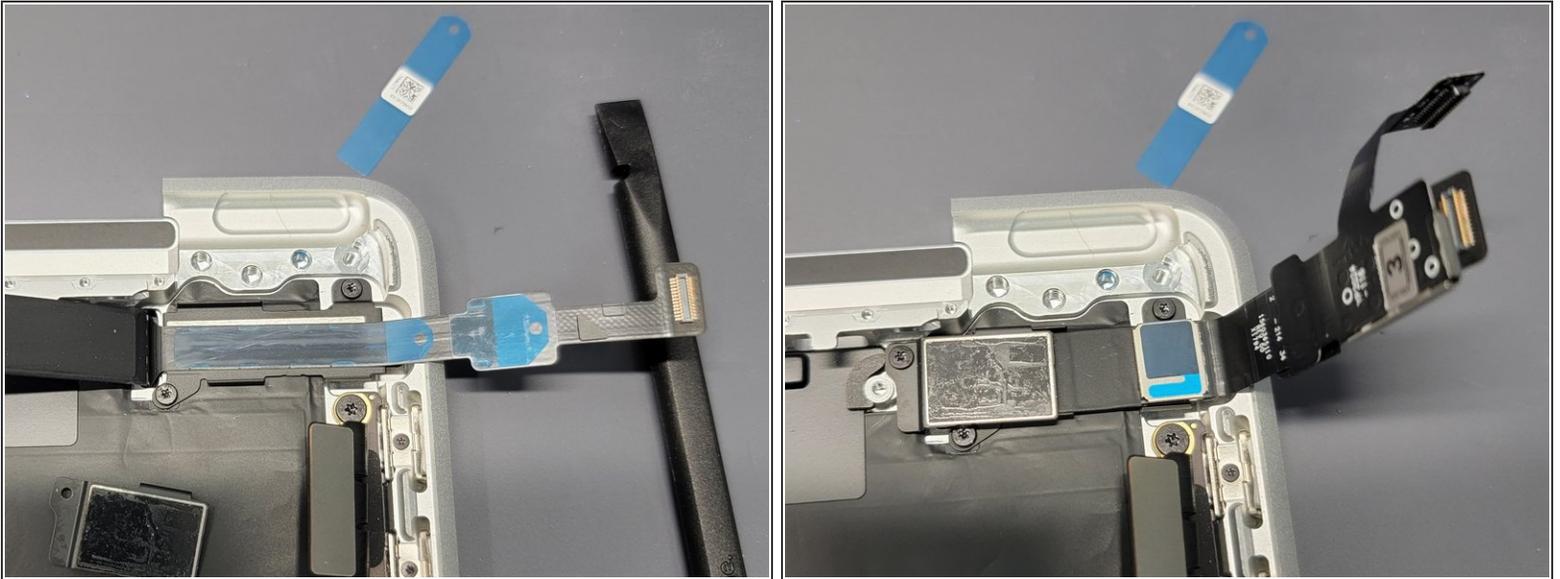


- Remove both blue adhesive protectors
- Take touchbar LCD flex cable and place it against the touchbar digitizer flex cable
- Press firmly on the flex cables to adhere the 2 together

Step 46 — Placing Second Bracket

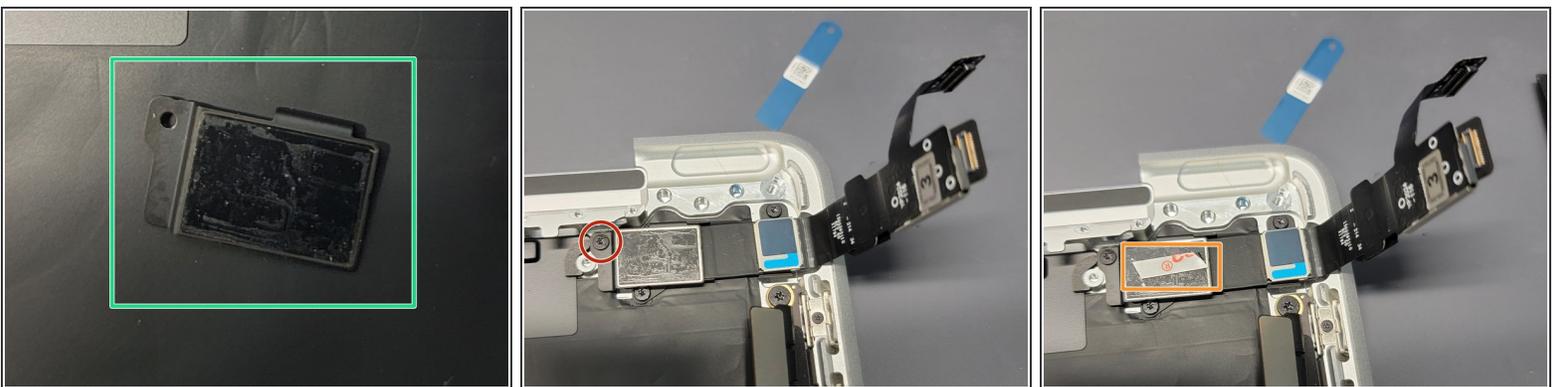

- Locate the second bracket and place it in it's correct spot. Reference the photos and **step 36** for assistance.
- Screw down the bracket using it's screw. Reference **step 36**.
- Place a small strip of adhesive to the bracket. We used basic Tesa tape

Step 47 — Adhering Flex Cables To Final Bracket

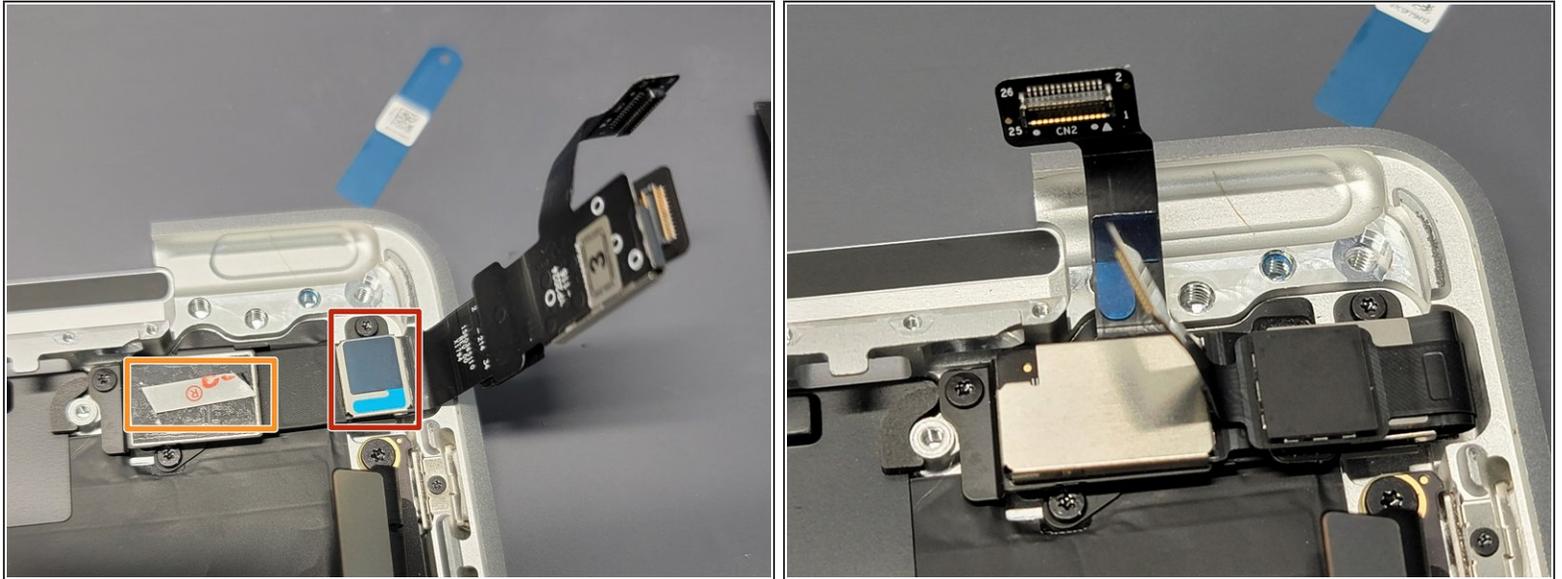

- Remove the white protective top of the tesa tape
- Remove the blue protective film on the flex cable
- Take the flex cables and bring them down to the bracket
- Press the flex cables firmly onto the bracket to adhere the flex cables to the new bracket

Step 48 — Removing Touchbar Adhesive Protector



- Carefully lift the touchbar assembly up and out of its little crevice
- Remove the black adhesive protector from the touchbar
- Carefully align the touchbar to its crevice
- Once perfectly aligned, place the touchbar into its crevice and push firmly but not hard on the touchbar to finalize it.

⚠ You may only have one shot at aligning the touchbar properly once the adhesive touches the Macbook. So be careful, precise and don't rush it.

- 🔖 Once this is done, follow this guide backwards starting with **Step 35** to reassemble the Macbook

To reassemble your device, follow these instructions in reverse order starting with **Step 35**.

We here at Smart Cloud hope your project goes smoothly and without a hitch. However, things happen and we want to make sure you know we are here to help if needed. You may contact us for assistance and we will provide support or repair options per request. Good luck and have fun.