




Dell Inspiron 910 Screen Replacement

The screen is one of the most crucial...

Written By: Kyle Beekman

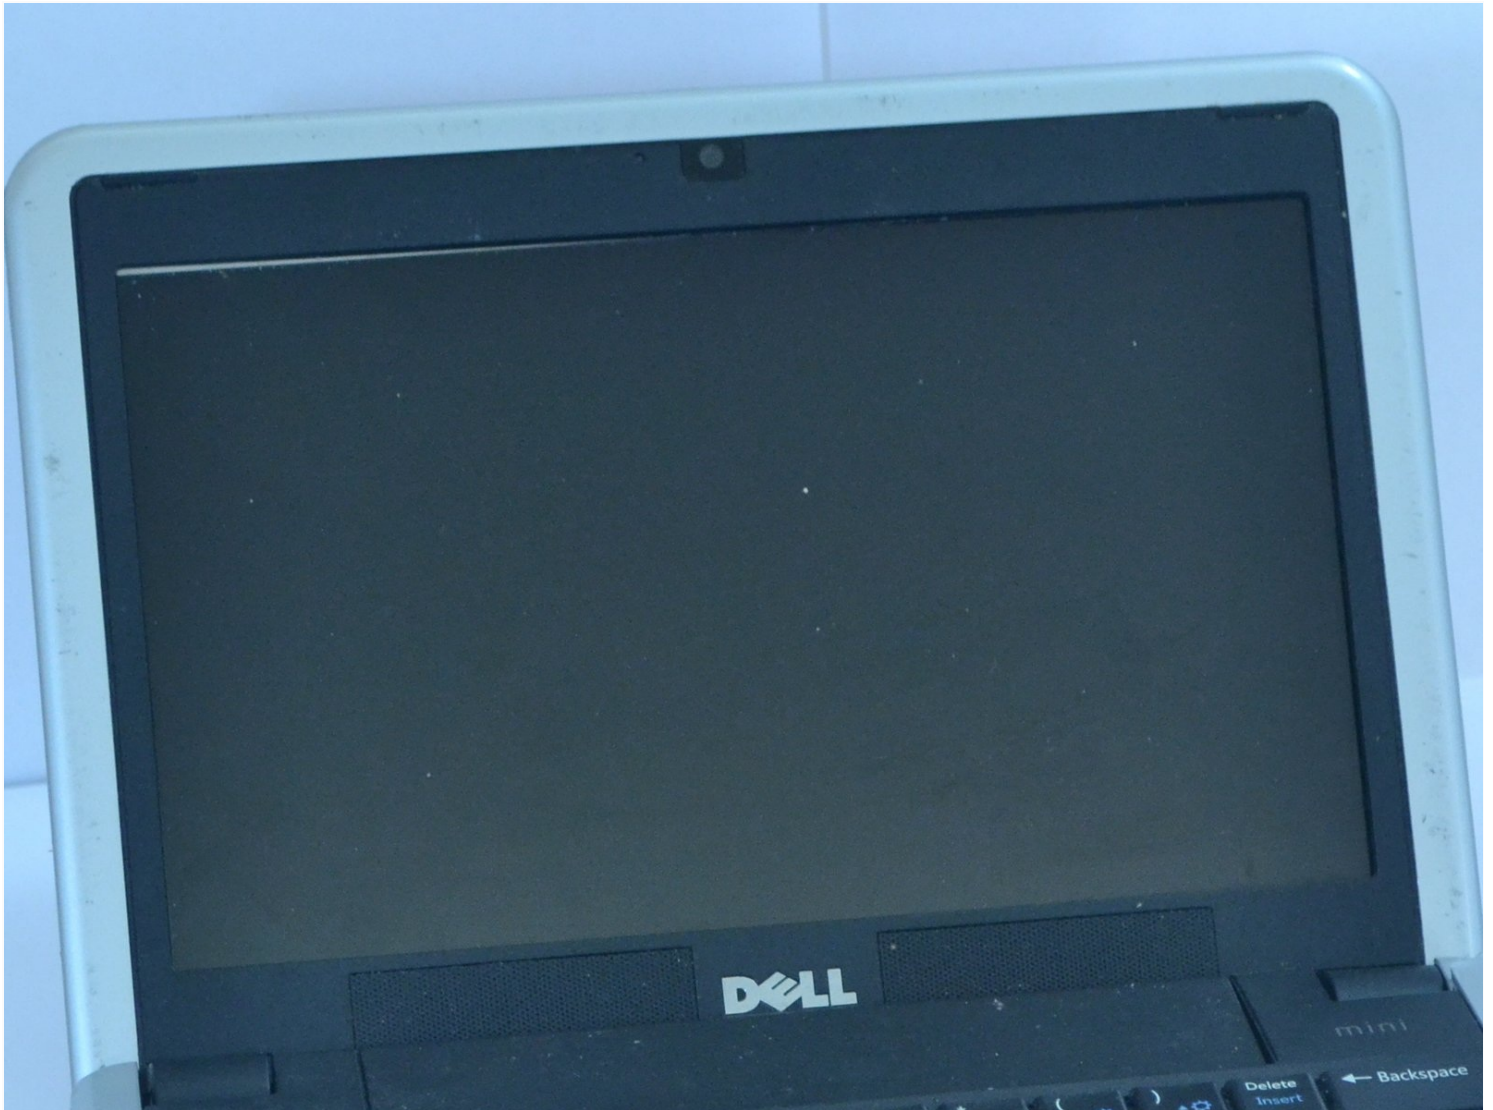

INTRODUCTION

The screen is one of the most crucial components of a laptop. Without a proper screen, a laptop can be rendered useless. In the event of your Dell Inspiron 910 laptop's screen isn't functioning as intended for any reason, this guide will assist in replacing the screen each step at a time. Before using this guide, make sure the laptop is powered off completely to prevent any further damage.

TOOLS:

[Phillips #00 Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Battery




- Flip the laptop so the battery is facing upwards.
- Push the battery release tabs toward the center of the device.
- Remove the battery.

Step 2 — Screen

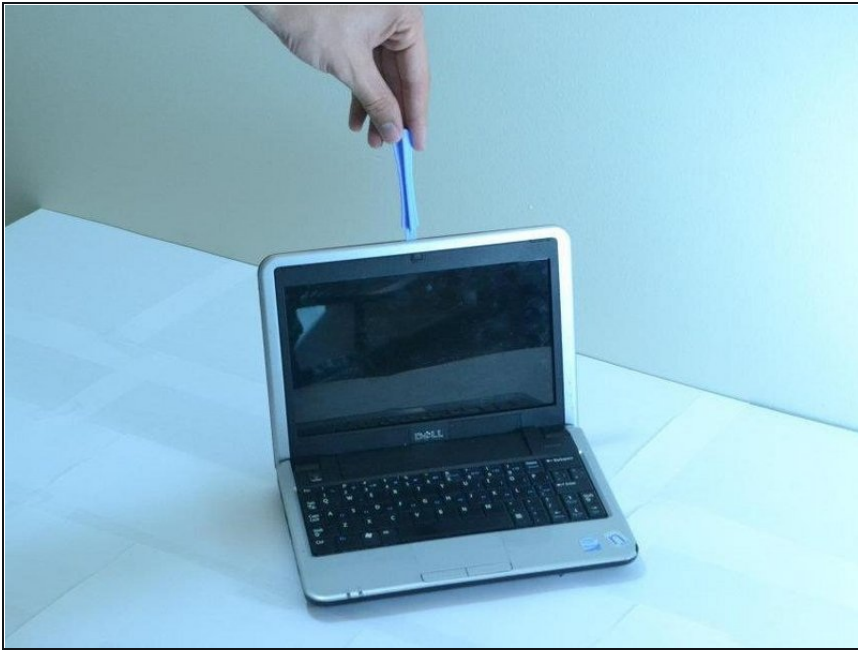


- Using a plastic opening tool, pry the front silver bezel away from the colored plastic shell.

Step 3

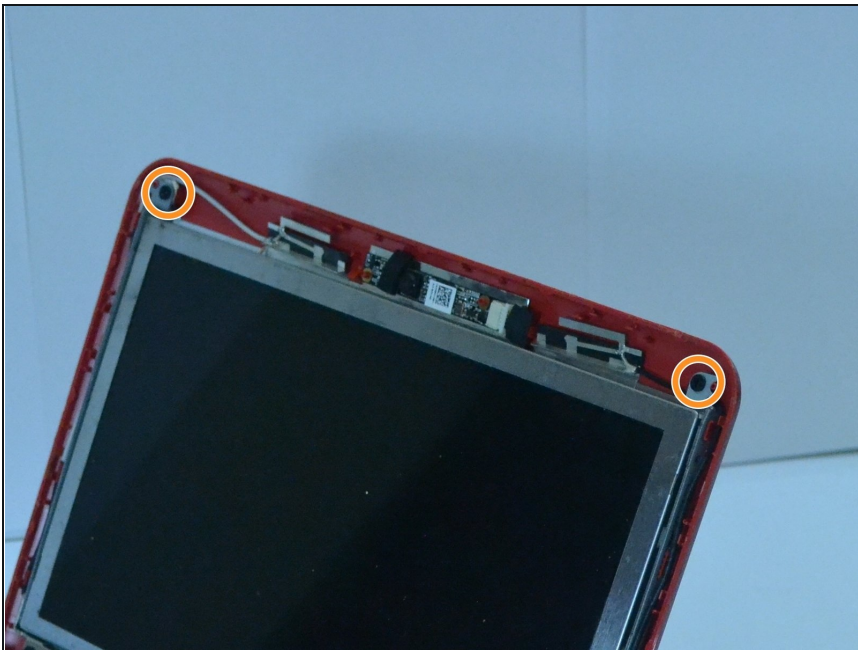

- Unscrew the two screws using a Phillips #00 screwdriver from the metal casing that retains the screen.


Step 4

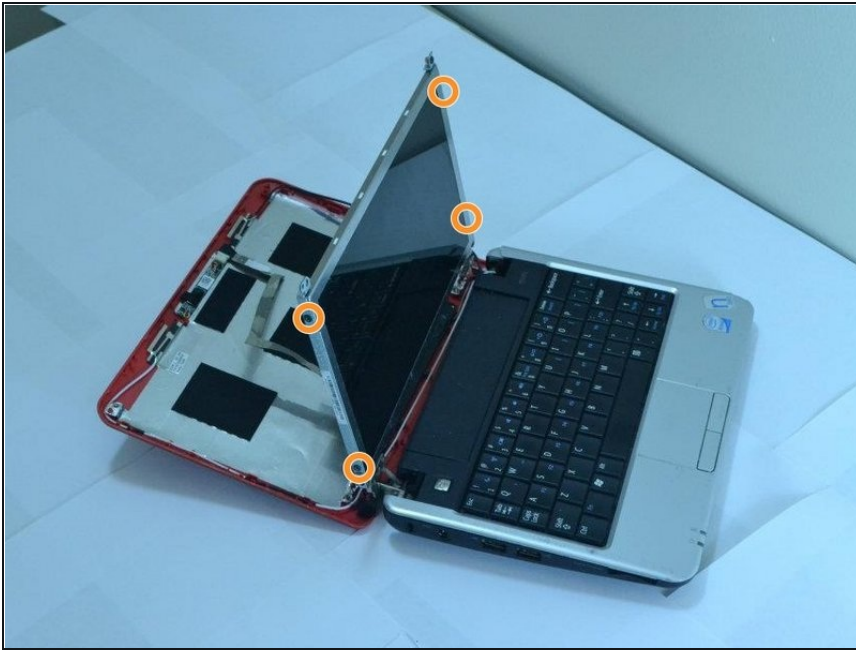

- Pull down the laptop's back, keeping the screen upright, held in place by two metal strips going along its sides.
- Unscrew the 4 screws from the two strips.


⚠ While unscrewing the second side, make sure to hold the screen so that it doesn't fall when the screws are removed.

Step 5

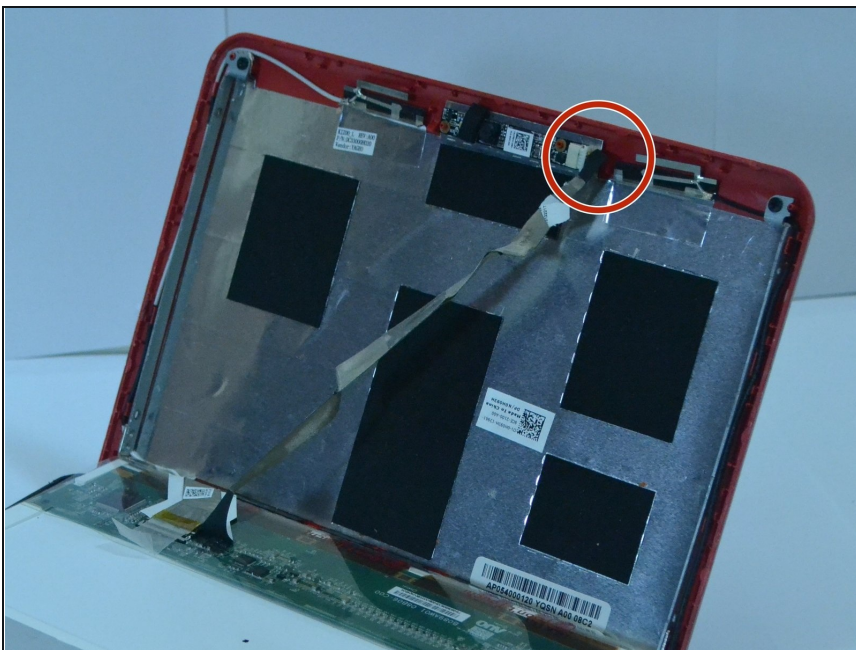


- Gently lay the screen down, being careful not to damage the ribbon connector.

Step 6

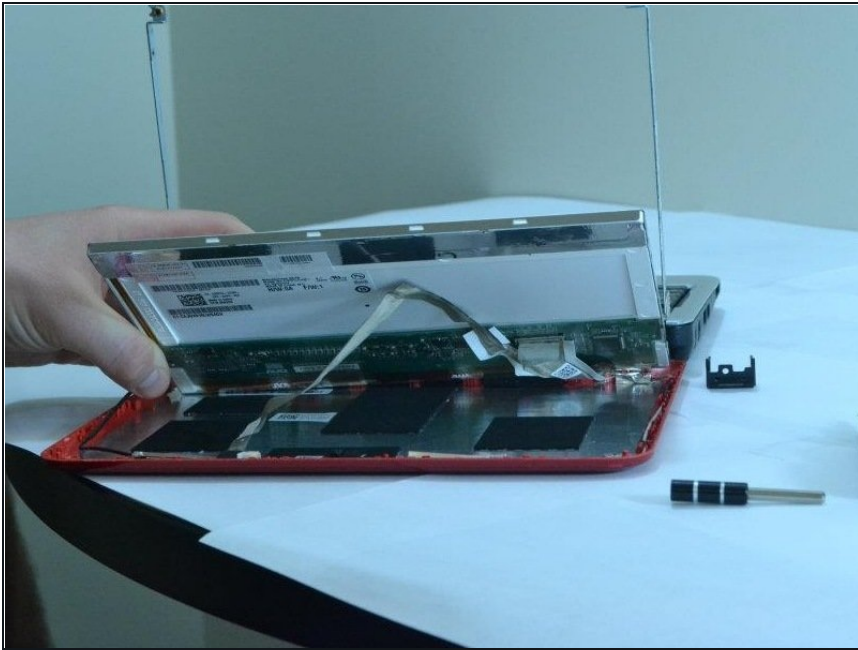

- Disconnect the cord connecting the screen to the rest of the laptop. The cable will be affixed to the screen using tape, so it can be safely removed. The actual cord connection is at the circuit board.

Step 7

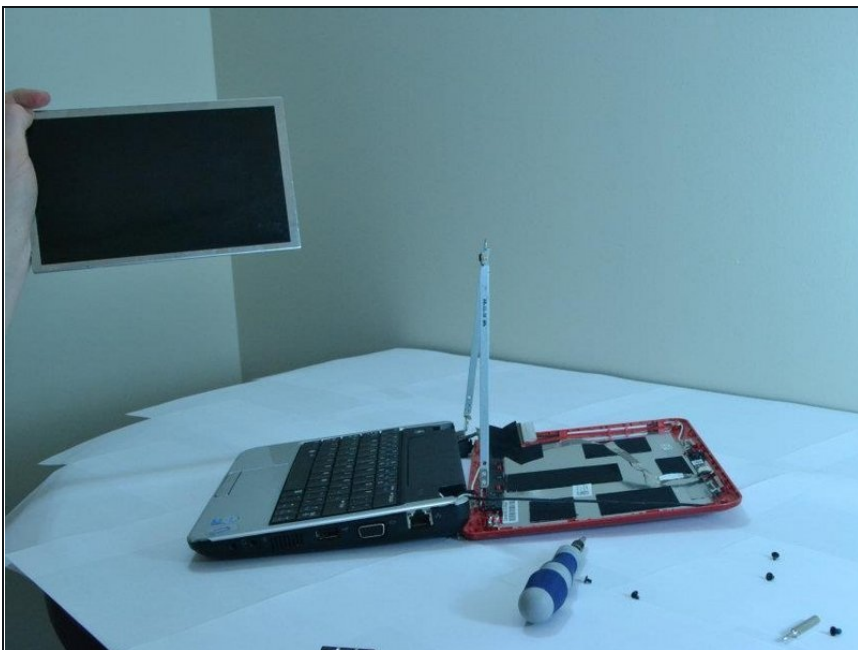

- Pull the screen out. Congratulations! You have removed the screen.

To reassemble your device, follow these instructions in reverse order.

