




# Fitbit Charge 2 Touch Screen Assembly Replacement

How to replace a cracked or damaged touch screen assembly on your Fitbit Charge 2.

Written By: Adriana Zwink

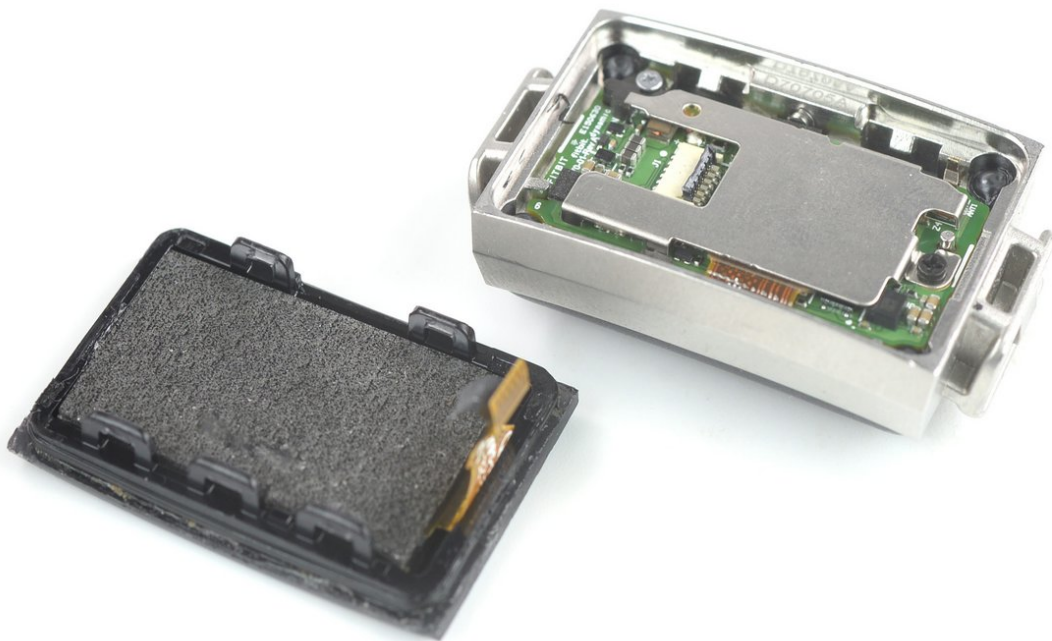

## INTRODUCTION

Use this guide to replace a cracked or broken touch screen assembly on your Fitbit Charge 2.

If the watch frame is deformed, we strongly suggest replacing it to make sure the new touch screen will mount correctly and won't suffer damage from uneven pressure.



### TOOLS:

- [iOpener](#) (1)
- [iSesamo Opening Tool](#) (1)
- [ESD Safe Tweezers Blunt Nose](#) (1)
- [Spudger](#) (1)



### PARTS:

- [Fitbit Charge 2 Touch Screen Assembly](#) (1)

## Step 1 — Remove the watch band



- Before starting, take your Fitbit Charge 2 off the charger and power it down.
- Remove the watch band on both sides.

## Step 2 — Heat the touch screen




- [Heat an iOpener](#) and apply it to the touch screen for two minutes.
- ⓘ The screen is not glued down, but the heat helps to loosen the touch screen assembly.

### Step 3 — Slide along the left edge




- [Insert an iSesamo](#) into the gap between the touch screen and the watch assembly on the top left corner.
- Slide the iSesamo along the left edge to the bottom left corner.

### Step 4 — Slide along the bottom edge

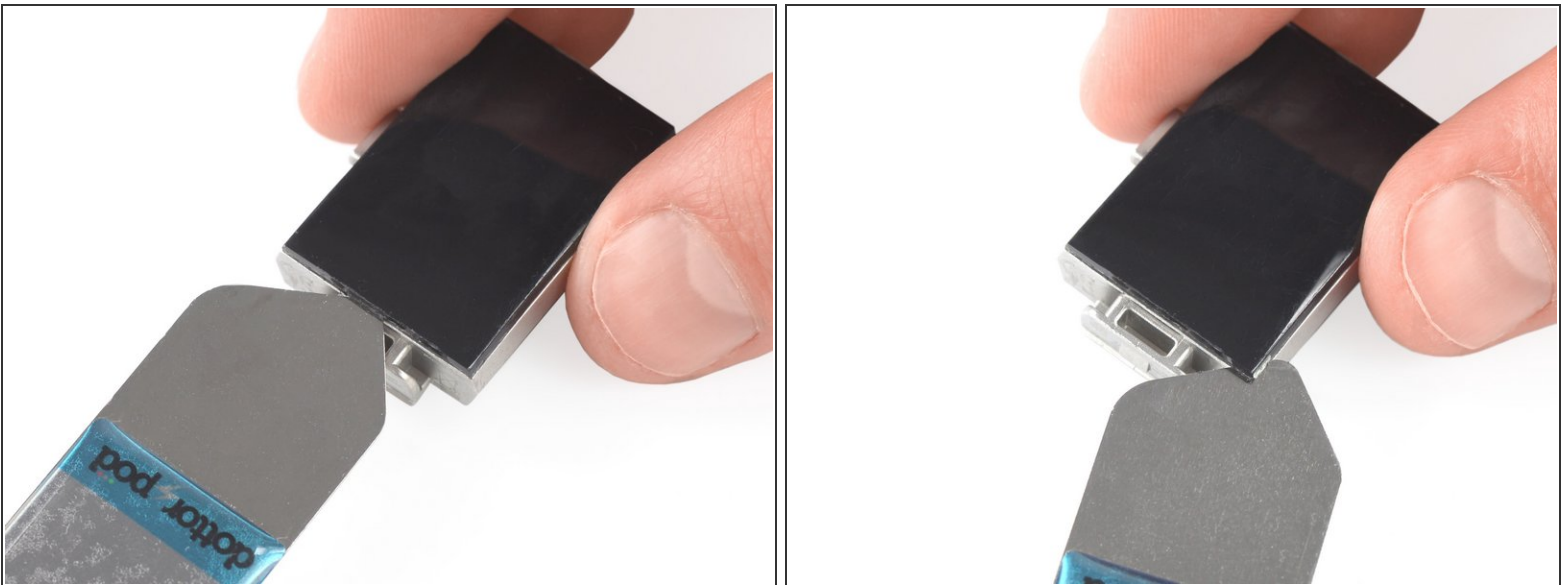


- Slide the iSesamo around the bottom left corner.
- Slide it along the edge to the bottom right corner.

## Step 5

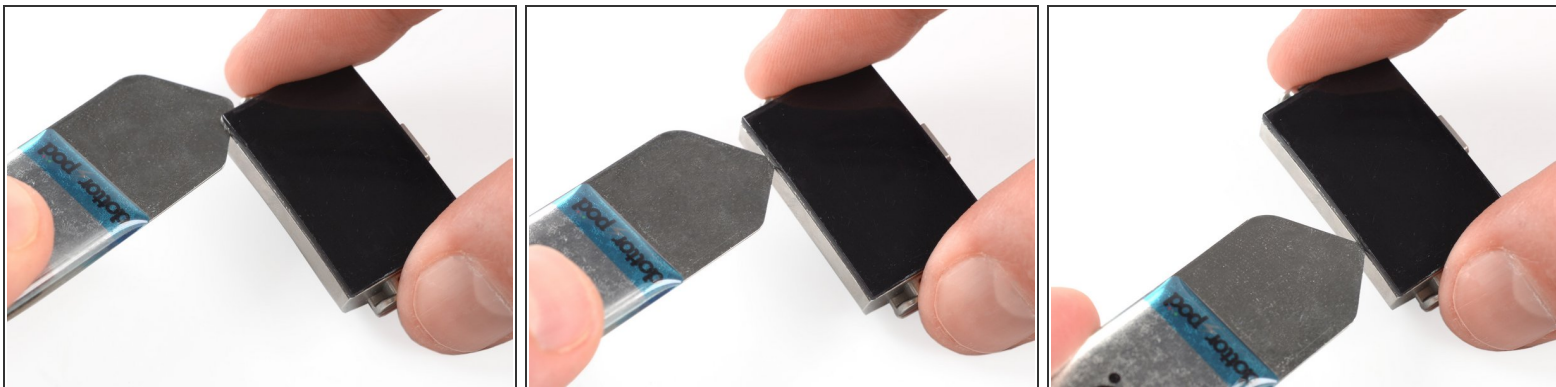

- Slide the iSesamo around the bottom right corner.
- Keep sliding it along the right edge to the top right corner.

## Step 6

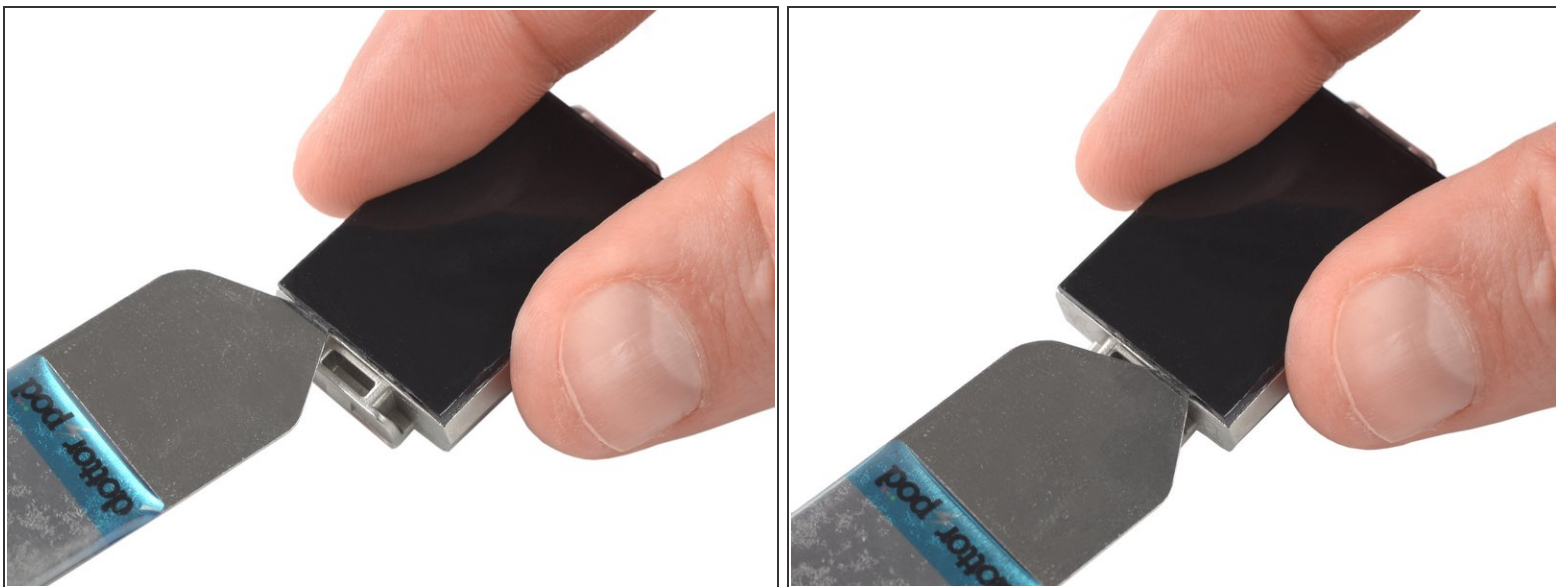

- Slide the iSesamo around the top right corner.
- Slide it along the top edge to the top left corner.


## Step 7



- Place the iSesamo under the top left corner.
  - ⓘ Feel free to reattach the watch band for this and the next step for a better grip.
- Pry up the touch screen assembly by twisting the iSesamo sideways to create a gap and unhinge the plastic clips which are holding the screen in place.



## Step 8

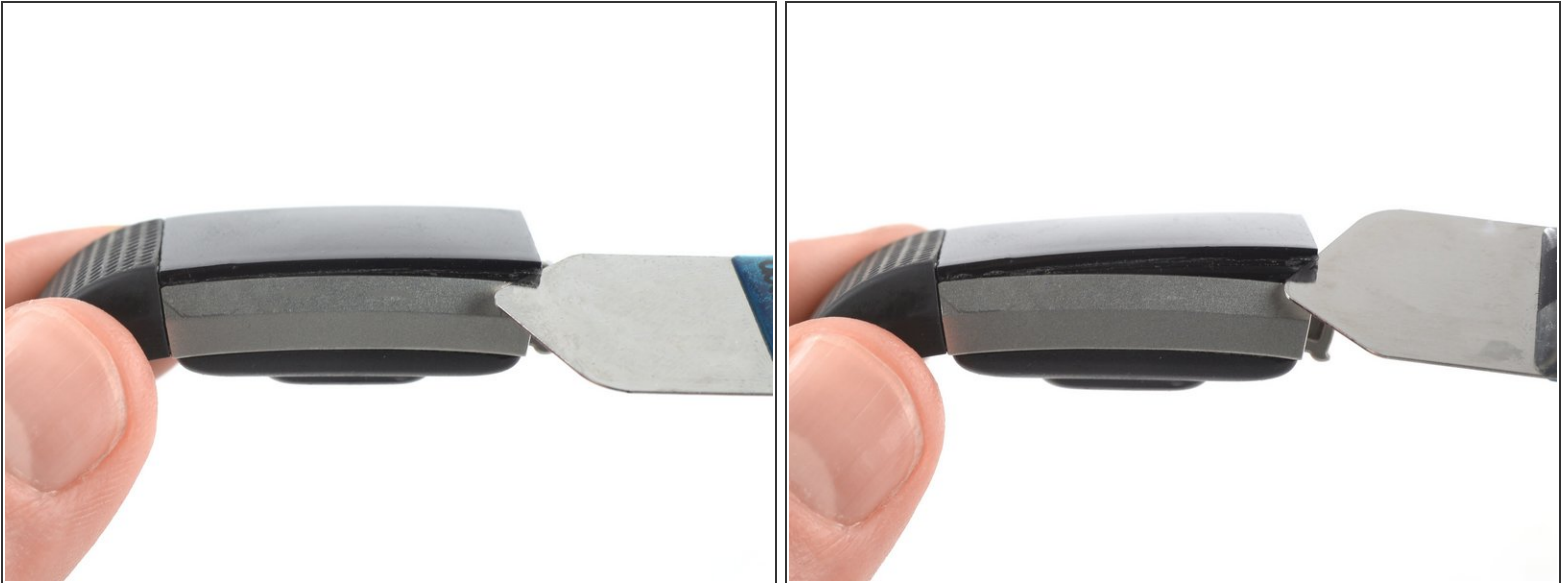

- Place the iSesamo under the top right corner.
- Pry up the touch screen assembly by twisting the iSesamo sideways to create a gap.

## Step 9



- Insert a spudger into the gap on the top edge of your Fitbit Charge 2.
- Use the spudger to pry up the touch screen assembly.

**⚠ Do not remove the touch screen assembly all the way yet—it's still connected to the motherboard.**



## Step 10



- Carefully fold the touch screen assembly in the direction of the bottom edge.





## Step 11 — Remove the protecting sticker

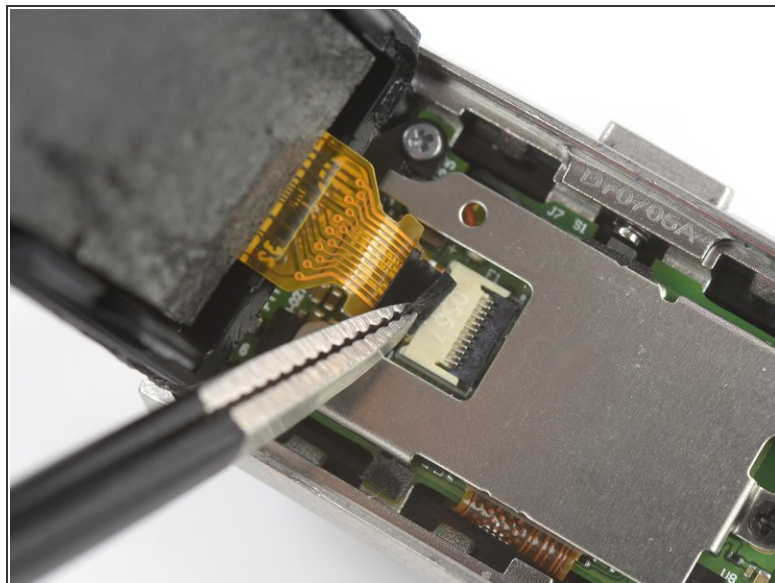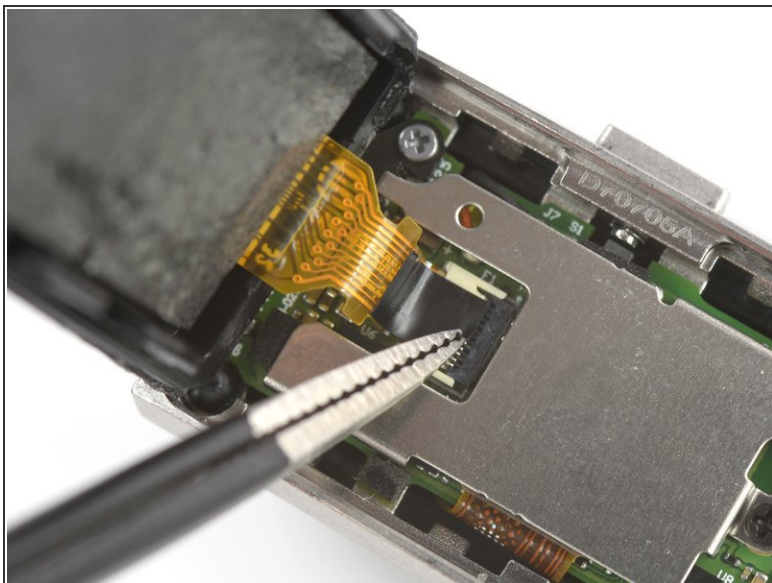


- Use a pair of blunt nosed tweezers to remove the black sticker which covering the touch screen connector.

## Step 12 — Open the ZIF connector

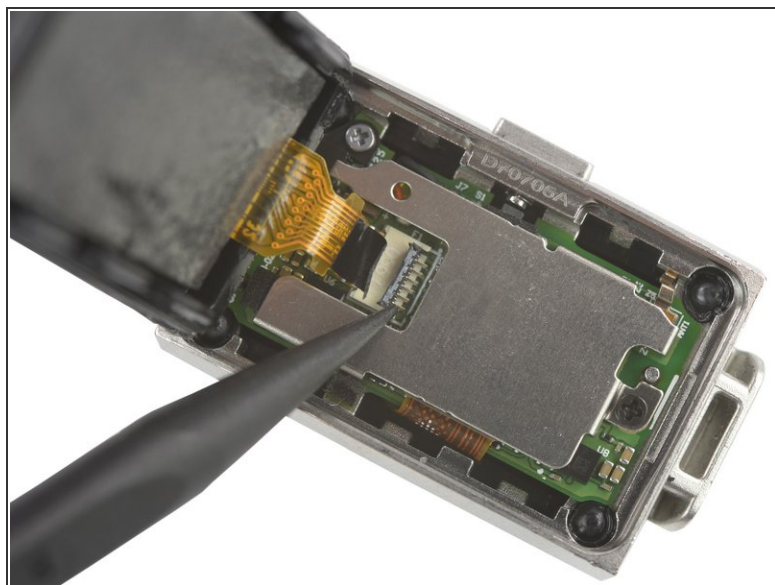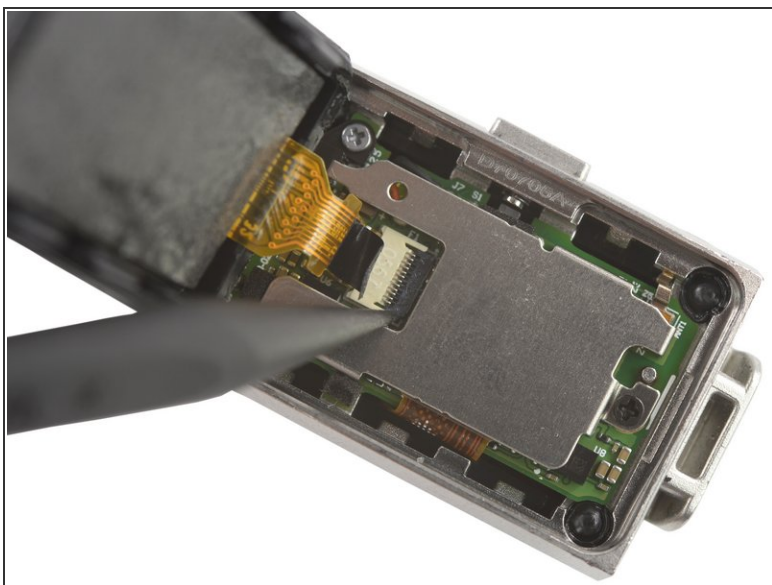

- Use the pointed end of a spudger to open the ZIF connector by pushing up the black flap.

## Step 13 — Remove the touch screen assembly

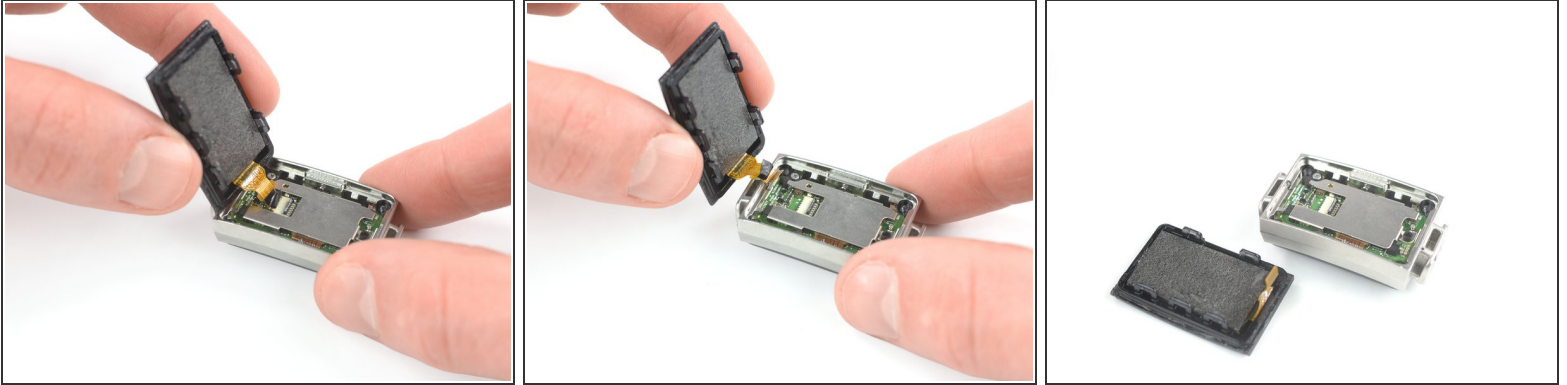

- Pull the touch screen flex cable straight out its socket.
- Remove the touch screen assembly.

If possible, turn on your device and test your repair before reassemble.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Opening didn't go as planned? Ask our [Answers community](#) for help.