

# How to check Black and Decker 3-Cup Rice Cooker continuity

The device's power cord breaks easily, stopping...

Written By: Lillian Heng



# **INTRODUCTION**

The device's power cord breaks easily, stopping it from delivering power to the device. In this guide, we will test for power by using a voltmeter.

# 🖌 TOOLS:

Phillips #1 Screwdriver (1) iFixit Opening Tool (1) Spanner 2.6 Screwdriver (1) Colored Highlighters (1) Masking Tape (1) Digital Multimeter (1)

## Step 1 — Remove the Lid and Bowl



- ▲ Make sure the device is unplugged before beginning disassembly!
- Lift the lid and bowl from the top of the device.

# Step 2 — Turn the Device Upside-Down



• Turn the device upside-down, so that the four legs of the device point upwards.

#### Step 3 — Remove the Rubber Cushions



• Each of the four legs has a rubber cushion on its bottom. For each cushion, insert a plastic opening tool between the plastic leg and rubber cushion, and pry off the rubber cushion.

## Step 4 — Remove the Spanning Screw



 Using a spanner screwdriver, remove the one 10mm long 7mm diameter spanner screw from the side of the brass panel.

#### Step 5 — Remove the Leg Screws




- Using a Phillips screwdriver, remove the 10mm long 7mm diameter Phillips-head screws from the inside of all four legs.
- The smaller leg at the bottom is now loose and not attached to the device. Set it aside.

# Step 6 — Remove the Brass Plate



• Lift the brass plate off the device and set it aside.

## Step 7 — Color the Wires

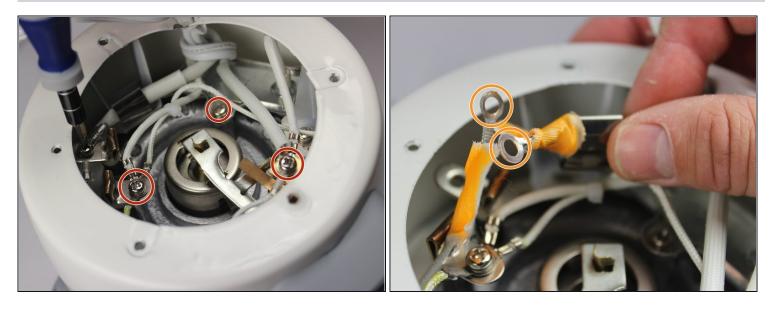


- Color coordinating wire groups make it easier to identify the wire groups during reassembly.
- Inside the device, there are three junctions with wires joined by Phillips-head screws. The first is connected to two wires, and the other two are connected to three wires each.
- Unscrew the screw at the junction near the opposite side of the device from the front panel.
- Label each of the two wires at this junction with a single color of tape.

## **Step 8**— Label the Second Wire Junction



- Unscrew the screw at the junction just clockwise from the button panel.
- Label the three wires of this junction with tape of a second color.

# Step 9 — Label the Third Wire Junction

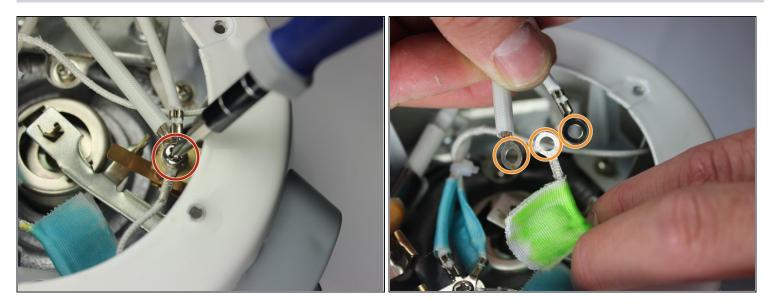

- Unscrew the screw from the wire junction just behind the front panel.
- Label the three wires at this junction with a third color of tape.

# Step 10 — Plug the Device into an Outlet



- ⚠ During these steps, **DO NOT** touch the wires directly. You may be electrocuted.
- Plug the device's power cord into a functioning outlet.

#### Step 11 — Check the Voltage between the Wires



- Locate the two wires which are connected directly to the power cord. Unlike the other wires, they are sheathed in a particularly thick, dot-textured plastic.
- Make sure the voltmeter is on and set to a setting beween 120 and 500V. For most voltmeters the proper setting for this is the 200V setting.
- Attach one of the voltmeter's probes to the metal portions of each of the two wires connected to the power cord's end on the device
- The voltmeter should read a number significantly above 20V. A reading between 100 and 150 V indicates that the device is getting enough power. A lower number indicates the power cord is broken.

This guide alters no parts of the device, so no reassembly is needed from these steps.